VF9

Owner's Manual

2023 - 2024 - 2025

Condensed Edition

Language: EN I Region: VN

Source: VinFast Official Owner's Manual Optimized for quick reference and reduced file size

1

Table of Contents

1. Introduction

1.1. Owner Manual

2. Overview

2.1. Vehicle Overview

3. Openings & Compartments

- 3.1. Keys and Locks
- 3.2. Doors
- 3.3. Front and Rear Compartments
- 3.4. Windows
- 3.5. Storage
- 3.6. Vehicle Security

4. Seats, Restraints & Safety

- 4.1. Seats
- 4.2. Seat Belts
- 4.3. Child Restraint Systems
- 4.4. Airbags

5. Advanced Driver Assistance Systems (ADAS)

- 5.1. Cruise Control
- 5.2. Driving Aids
- 5.3. Collision Warning Systems

5.4. Park Assist

6. Driving

- 6.1. Starting & Shutting Down Vehicle
- 6.2. Drive Systems
- 6.3. Steering Wheel
- 6.4. Mirrors
- 6.5. Exterior Lighting
- 6.6. Interior Lighting
- 6.7. Wipers and Washers
- 6.8. Braking and Stopping
- 6.9. Economy & Environment
- 6.10. Flood Precautions

7. Displays, Connections and Climate

- 7.1. Touchscreen
- 7.2. Infotainment
- 7.3. Car Control Area
- 7.4. Head Up Display
- 7.5. Navigation
- 7.6. Phone & Projection
- 7.7. VinFast App
- 7.8. Climate Control System
- 7.9. Settings

8. Battery & Charging

- 8.1. High Voltage Components
- 8.2. Charging Instructions
- 8.3. Battery Information

9. Maintenance

- 9.1. General Information
- 9.2. Fluids, Lubricants and Parts
- 9.3. Electrical System
- 9.4. Wheels and Tires
- 9.5. Vehicle Cleaning
- 9.6. Maintenance Schedule
- 9.7. Parts and Accessories

10. Technical Specifications

- 10.1. Fluids, Lubricants and Parts
- 10.2. Vehicle Identification
- 10.3. Vehicle Information

11. Vehicle Assistance

- 11.1. Connected Services
- 11.2. Vehicle Recovery
- 11.3. Contact

12. Additional Information

12.1. Reference

1. Introduction

1.1. Owner Manual

Introduction

Congratulations and thank you for choosing the VF 9.

This Owner's Manual describes all the features and operations of your new VinFast vehicle and contains important maintenance and safety related information designed to help keep you safe and informed throughout ownership.

The information contained in this manual is specific to your vehicle however certain descriptions of features, functions and displays may not apply depending on your chosen vehicle configuration, market region or software version at the purchase time.

Thoroughly familiarize yourself with the contents of this Owner's Manual prior to operating your vehicle.

Owner's Manual Version: VF9_23-25_VN_ENG_2.4 [New UI]

Important Note - High Voltage Battery

The VinFast VF 9 should only be operated with a VinFast genuine battery or a battery supplied by a VinFast authorized supplier.

VinFast, its authorized battery suppliers, the battery owner (if applicable), and their representatives, shall bear no responsibility for any damage or losses to the customer caused by the use of any non-VinFast battery in the vehicle or for not following the battery usage guidelines found in the vehicle Owner's Manual.

The use of any non-VinFast battery in the vehicle may void the VinFast Manufacturer's Warranty and the warranty coverage for the vehicle. The failure to allow VinFast to replace the battery in the vehicle, or to use, maintain and service the battery in accordance with instructions provided by VinFast (including the Battery Usage, Charging and Storing Guidelines), also may void the VinFast Manufacturer's Warranty.

If the customer chooses the battery leasing option, the customer shall sign a Battery Lease with the owner of the battery.

If the customer breaches any obligation of the Battery Lease Agreement, they agree that the battery owner can take possession of the battery by any method permitted by law or the Battery Lease Agreement which may include:

- · Limiting the level of charge;
- Utilization of geolocation technology in the battery or vehicle to locate the battery for purposes of repossession; and
- · Pursuing any other remedies permitted by law.

If the customer chooses to resell the vehicle, or in any other case that might lead to the transfer of vehicle title, the customer shall be responsible for:

- Informing the purchaser that the battery is leased and property owned by a third party and not the customer;
- Shall cooperate with the battery owner to ensure a seamless transfer of the battery at the same time the vehicle is transferred.

Owner's Manual Information

This Owner's Manual will familiarize you with all the features, functions, equipment and maintenance needs of your vehicle.

An initial overview of the vehicle is covered in the next section and provides the name and location of the key exterior and interior features and components.

Warning, Caution and Notes

The Owner's Manual contains safety precautions and operating procedures. Failure to follow these safety warnings and instructions may lead to a serious injury or even death.

To highlight content of importance, the following message formats will be shown:



		_			
W	ΙΔ	к	N	IΝ	1G

Critical information, often involving safety related content that if not followed could result in death or serious injury.



CAUTION

Important information relating to a feature, function or situation, which if ignored, could result in damage to your vehicle.



NOTE

Key points of useful information.

It is recommended that you have your vehicle inspected by an authorized service center for all intermediate and major repairs. It is essential that the vehicle is repaired in accordance with VinFast specifications. Owners can perform minor self-fix tasks if suggested by this Owner's Manual or in vehicle alerts page. For all self-fix tasks clear instructions will be provided. If these instructions are read and still remain unclear, please contact VinFast Service Center prior to proceeding.

Using the Printed Manual

A printed Owner's Manual is provided with your vehicle and is placed in the glove box at the time of vehicle delivery.

Using the Digital Manual

An online interactive version of the Owner's Manual can be accessed on any compatible web-browser, as well as on the VinFast App. An integrated version of this Owner's Manual is also available to view in vehicle on the Infotainment screen.

To access the integrated Owner's Manual in your VF 9, follow the steps below:

Tap App Library



on the Infotainment screen.

• Tap Owner's Manual



• Use navigation buttons and search functionality to locate required content.

Applicable Content & Images

The information and specifications contained in the VF 9 Owner's Manual are accurate at the time of publication. Some functions described in this Owner's Manual may not be applicable to your vehicle level, activated or available at the time of delivery including applications embedded in the infotainment system or the VinFast App. Content is continuously being refined and software updates will often be released to improve the user experience and functionality of your vehicle.

Any major updates made after the print deadline will be reflected in the digital Owner's Manual that can be accessed and viewed at https://om.vinfastauto.com/

The illustrations and images provided in this Owner's Manual are for demonstration purposes only. Depending on a vehicle variant, customization options, software version and market region, the information displayed on the Infotainment screen in your vehicle may appear differently to what is shown in the Owner's Manual. All directions referenced in the content such as, left, right, front and rear are based on the vehicles direction of travel.

VinFast reserves the right to change specifications, design or equipment at any time without notice and without incurring any obligation.

Copyright & Trademarks

All rights reserved. All content within this Owner's Manual is subject to copyright and other intellectual property rights of VinFast Trading and Production Joint Stock Company. This Owner's Manual should not be copied, modified or reused in anyway without prior written permission.

2. Overview

2.1. Vehicle Overview

Electric Vehicle Ownership

Your vehicle is powered by electricity and as a result some of the vehicle's systems and operating characteristics are different from a vehicle powered by an internal combustion engine.

It is important to carefully review this entire Owner's Manual for this reason. The vehicle does not require and it is not capable of using gasoline like a vehicle powered by a traditional internal combustion engine.

The vehicle uses two types of batteries. One is a 12V (low voltage) battery that is the same as the battery in vehicles that operate on gasoline powered engines, the other is the Li-ion battery which may be referred to as the High Voltage (HV) or Electric Vehicle (EV) battery in this Owner's Manual. The 12V battery provides power to the vehicle systems and features such as the infotainment system, supplemental restraint systems, headlights and windshield wipers.


The vehicle uses energy stored in the lithium ion ("Li-ion") battery. The vehicle's Li-ion battery must be charged with electricity before the vehicle can be driven. As the vehicle operates, the Li-ion battery gradually discharges. If the Li-ion battery becomes completely discharged, the vehicle will not operate until it is re-charged.

The high voltage Li-ion battery or EV Battery provides power to the electric motor that drives the vehicle. The vehicle must be plugged in for the Li-ion battery to be charged.

Your vehicle is also equipped with a regenerative braking system which allows the vehicle to convert kinetic energy into electrical energy, which is used to recharge the battery increasing overall range.

This vehicle is considered to be an environmentally friendly vehicle because it does not emit exhaust gases, such as carbon dioxide and nitrogen oxide when in operation.

Exterior Overview

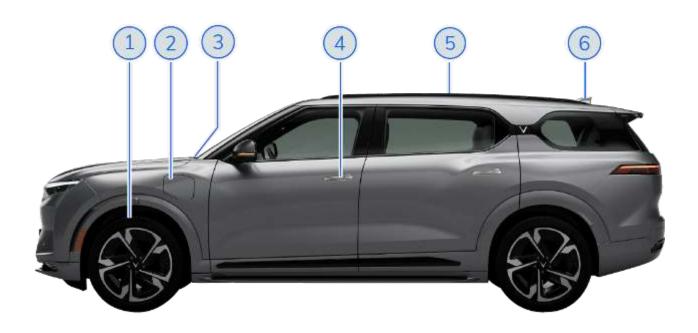

1	Wheels and Tires	Wheels and Tires > Wheels and Tires
2	Charge port	Charging Instructions > Charging Instructions
3	Front Wipers	Wipers and Washers > Front Wipers
4	Door handle	Doors > Exterior Door
5	Panoramic Glass Roof*	
6	Antenna	




7	Front Hood	Front and Rear Compartments > Front Hood
8	Lane Assist Systems	Driving Aids > <u>Lane Assist Systems</u>
9	Daytime Running Lights (DRL)	Exterior Lighting > <u>Daytime Running Lights (DRL)</u>
10	Side Mirrors	Mirrors > Side Mirrors & Exterior Lighting > Turn Signals
11	Head Lights	Exterior Lighting > Exterior Lighting -Front
12	Radar	Cruise Control > Adaptive Cruise Control
13	Fog lamp	Exterior Lighting > Fog Lamp
14	Front Parking Sensors	Park Assist > Front & Rear Parking Assist
15)	Front Camera	Park Assist > <u>Surround View Monitoring System</u>




16	Rear Wiper	Wipers and Washers > Rear Wipers
17)	Liftgate	Front and Rear Compartments > <u>Liftgate</u>
18	Reflectors or Fog lamp	Exterior Lighting
19	Foot Kick Sensor	Front and Rear Compartments > <u>Liftgate</u>
20	Rear Parking Sensors	Park Assist > Front & Rear Parking Assist
21	Rear cameras	Park Assist > <u>Surround View Monitoring System</u>
22	Tail Lights	Exterior Lighting > Exterior Lighting-Rear (Tail Lights)
23	Centre High Mount Stop Lamp	Exterior Lighting > Exterior Lighting - Rear (Tail Lights)

Front compartment

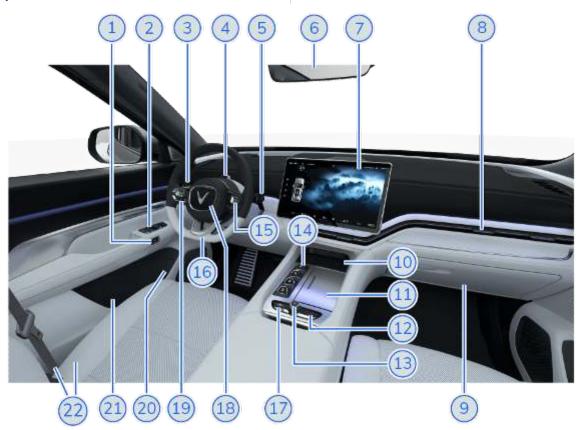


1	Door release Switch	Doors > Interior Door
2	Power window switches	Windows > Window Controls
3	Indicator and Body Computer Stalk	Exterior Lighting > <u>Turn Signals</u> and Economy & Environment > <u>Trip History</u>
4	Driver Monitoring Camera (if available)	Driving Aids > <u>Driver Monitoring System</u>
5	Wiper and Washer Stalk	Driving > Wipers and Washers
6	Rear view mirror	Mirrors > Rear View Mirror
7	MHU Display	Infotainment screen > Infotainment screen Overview
8	Air Vents	Climate Control System > Air Vents
9	Glove Box	Storage > Glove Box
10	Wireless Charger	Phone & Projection > Wireless Charger
11)	Cup Holder	Storage > <u>Cup Holders</u>
12	Hazard Switch	Exterior Lighting > <u>Hazard Warning Flashers</u>
13	Volume Knob	Volume Knob
14)	Transmission Gear Selector	Drive System > <u>Transmission Gear Selector</u>

15	Steering Wheel Switches - Driving Assistance Controls	Steering Wheel > Functions
16	Steering Wheel	Driving > <u>Steering Wheel</u>
17	Central Locking Switch	Keys and Locks > Central Locking Overview
18	Horn	
19	Steering wheel Switches - Multimedia and Call Controls	Steering Wheel > Functions
20	Emergency door release lever	Doors > Interior Door
21	Door Pocket Storage	Storage > <u>Door Pocket Storage</u>
22	Seats and Seat Belts	Seats, Restraints & Safety > <u>Seats</u> , Seats, Restraints & Safety > <u>Seat Belts</u>

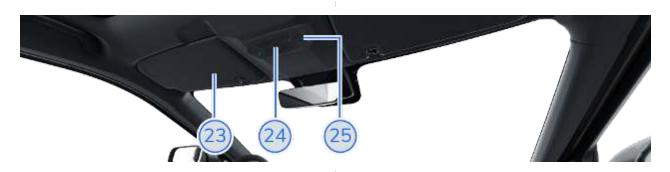

23	Sun Visor & Vanity Mirror	Mirrors > Sun Visor & Vanity Mirror
24)	SOS (E-call) button	Connected Services > Emergency Call
25)	Roof Lights	Interior Lighting > Roof Lights


Rear compartment

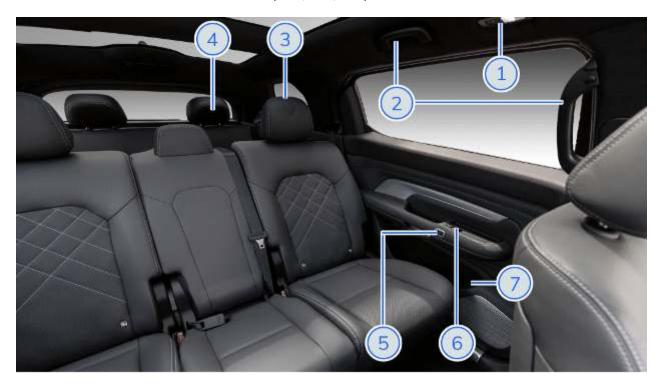

1	Reading Lights	Interior Lighting > Reading Lights
2	Grab Handle*	
3	Second row Seat headrest	Seats, Restraints & Safety > <u>Seats</u>
4	Third row Seat headrest	Seats, Restraints & Safety > <u>Seats</u>
5	Door release Switch	Doors > Interior Door
6	Rear Power window switch	Windows > Window Controls
7	Door Pocket Storage	Storage > <u>Door Pocket Storage</u>

• *If Equipped

Charging Overview

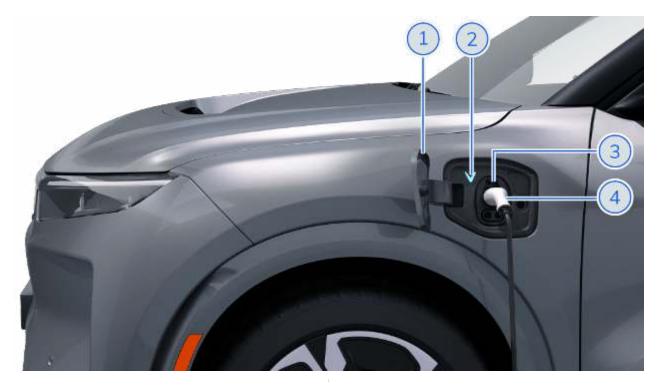

1	Charging Port Door	
2	Charge Indicator*	Charging Instructions > Charging Equipment
3	Charging Port	
4	Charging Handle	Charging Instructions > Charging Equipment

* If available

3. Openings & Compartments

3.1. Keys and Locks

Central Locking Overview

The vehicle is equipped with a central locking system that allows all doors and tailgate to be locked and unlocked at once. Central locking and unlocking of the vehicle can be accomplished by any of the following:

- · Vehicle key fob
- Keyless entry (ensure the key fob is within 1m of the vehicle)

- Mechanical key
- · Interior central locking button
- Remote locking feature within the VinFast App (when available)

Details on each of the above features can be found further in this section.

Interior Central Locking Button

The central locking button



is located in the center console. The central locking button locks or unlocks all doors and the liftgate when pressed. The

button will illuminate to indicate the vehicle is locked.



Vehicle Locking Settings

Auto unlock doors:

on the touchscreen screen.

Select which doors to automatically unlock when the vehicle is unlocked.

1. Tap App Library



2. Tap Settings



> Vehicle Settings > Doors.

3. Toggle Auto unlock doors. Tap to Driver door/All doors.



NOTE

In the event of a collision, the central locking system will automatically unlock all doors and the tailgate to assist passengers in exiting the vehicle.

Speed Sensitive Auto Door Lock/Unlock:

Speed sensitive auto door lock will lock all doors automatically when the vehicle speed exceeds 6 mph (10 km/h).

on the touchscreen screen.

> Vehicle Settings > Doors.

3. Toggle door unlock when parked. Tap to On/Off.

Walk - Away lock (if available):

on the touchscreen screen.

> Vehicle Settings > Doors.

3. Toggle walk away lock. Tap to On/Off.

Activation Conditions - The Walk-away Lock feature will only operate when all of the following conditions are satisfied:

- The keyfob is fully functional.
- Vehicle is in P mode (P).
- · The driver's seat belt is not fastened.
- The vehicle speed is below 3 km/h.
- All doors, the trunk, and the hood are closed.

Door unlock when parked:

When the gear is shifted to Park (P), the selected doors will unlock automatically

1. Tap App Library



2. Tap Settings



Automatically locks the doors when the driver walks away from the vehicle with the key fob

1. Tap App Library



2. Tap Settings



How It Works

- After the driver's door has been opened and then closed, the system will start searching for the keyfob.
- If the keyfob remains within the passive entry detection range (approximately 1 m around the vehicle), the turn signal will flash to indicate that the Walk-away Lock feature is ready.
- A countdown timer will then start. When the keyfob moves outside the detection range, the system will automatically lock all doors and the trunk.



NOTE

Always carry the keyfob with you when leaving the vehicle.

In certain situations, such as signal interference, the feature may be delayed or may not activate.

Visual and audible feedback signals confirm that the vehicle has been locked.

The Walk-away Lock feature will only be activated when the driver's door has been opened and then closed.

Lock/Unlock Feedback:

Select the response signal of the vehicle when you lock or unlock it.

1. Tap App Library



on the touchscreen screen.

2. Tap Settings



> Vehicle Settings > Doors.

3. Select a desired feedback setting- Lock / Unlock Feedback (Off / Light / Horn / Both).

Other Locking Related Features

Automatic re-lock function

Within 30 seconds of being unlocked, the vehicle will automatically lock all its doors if a door has not been opened.

Collision detection unlock

If the vehicle detects a collision event all doors will automatically unlock. This assists in providing improved access to or exit from the vehicle in an emergency situation.



WARNING


If a door is not fully closed it may suddenly open while driving, potentially causing an accident leading to serious injury or death.

When exiting the vehicle, the key fob should be taken with the user. If the key fob remains in the vehicle and children are present they could start the vehicle or operate the windows which can cause serious injuries or even death.

Key Fob Overview

The vehicle is supplied remote key fobs. The key fob is paired to the vehicle and uses Radio Frequency ("RF") technology to wirelessly perform the following vehicle functions:

- · Locking and Unlocking doors and liftgate
- · Opening the liftgate
- · Starting the vehicle
- · Locating the vehicle via horn activation

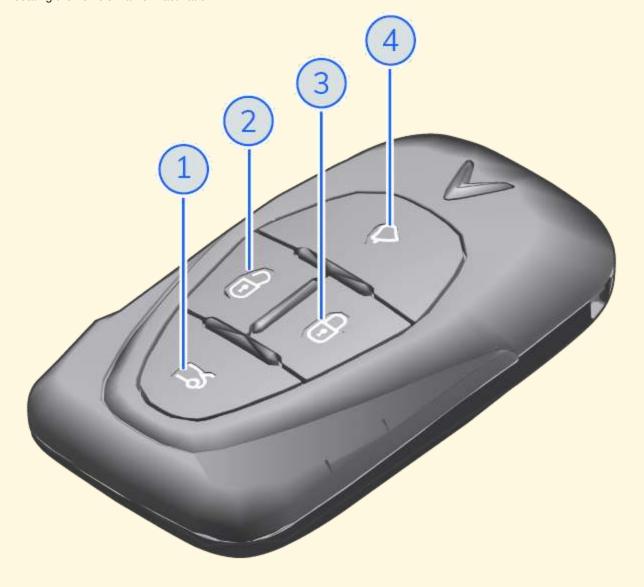

1	Open Liftgate
2	Unlock
3	Lock
4	Find My Car/Panic Alarm

For a description of all key fob functions, see > Remote Key Functions.



NOTE

The vehicle key fob should remain with the vehicle when being driven. If the key fob is removed the vehicle will still be functional and can be driven but will not be able to be restarted if powered off.



CAUTION

Protect the key from impact, high temperatures, and damage from liquids. Avoid contact with solvents, waxes and abrasive cleaners.



WARNING

When exiting the vehicle, the key fob should be taken with the user. If the key fob remains in the vehicle and children are present, they can start the vehicle or operate the windows which can cause serious injuries or even death.

Key Fob Precautions

The vehicle key fob communicates with the vehicle via a series of RF antennas. Key fob communication with the vehicle may be impacted by the following:

- The key fob battery is discharged.
- The key fob is outside of the vehicle antenna operating range.
- Another vehicle's smart key is being operated close to the vehicle.
- Interference caused by signals from powerful radio transmitters, mobile telephone or electronic devices.
- Interference as a result of nearby metallic objects.



WARNING

If a vehicle occupant has a pacemaker or other electrical medical implant/device fitted, they should maintain a safe distance as prescribed by their medical professional from the antennas in the vehicle. This is to avoid any possible interference between the vehicle antenna and the medical implant/device. See approximate vehicle Key Fob antenna locations below.




Key Fob Battery

The expected key fob battery life is approximately 2 years. The battery will slowly deplete over time even when the key is not being used. The following symptoms may exist to indicate the key fob battery is low:

- Wireless remote functions will not work or have reduced performance.
- The LED indicator will flash on the key fob.
- A vehicle alert will be displayed on the Infotainment screen.

To Replace the key fob battery:

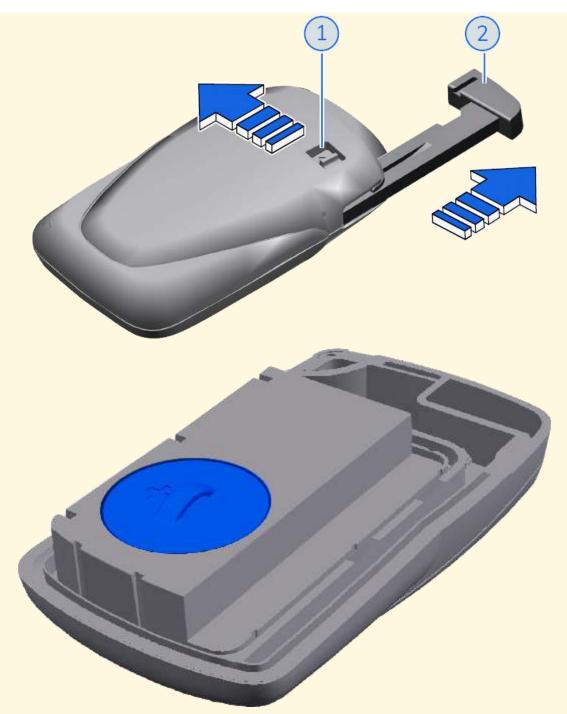

1. Remove the mechanical key by sliding the release tab



on the back of the key fob then removing the mechanical key



from the fob.

- 2. Use a small flat tool to gently open the back cover of the key fob.
- 3. Remove the internal battery cover by first twisting anti-clockwise then pulling the tab.
- 4. Remove the old battery and replace. Ensure the new battery is in the correct orientation (Battery Number: CR 2032).
- 5. Reinstall the black internal battery cover, press down and rotate clockwise to lock.

- 6. Reinstall the key fob back cover ensuring it clicks into place.
- 7. Insert the mechanical key back into its slot.



CAUTION

Do not touch any part of the key fob circuitry when replacing the battery as static electricity could damage the remote key.

Ensure the replacement battery matches the same make and model as recommended by the manufacturer. Use of incorrect batteries may cause key fob malfunction or battery explosion.

Do not dispose of batteries in household waste. Dispose of used batteries in accordance with local laws and regulations.

Do not crush, cut or burn a battery. Do not expose a battery to extreme environmental conditions.



WARNING

Keep the batteries away from the children as they contain hazardous chemicals and should not be ingested. If a battery is swallowed it can cause severe internal burns and can lead to death. Seek immediate medical advice if a battery is ingested.



NOTE

If the key fob is damaged or does not function correctly even after replacing the battery, contact a VinFast Service Center.


Key Fob Replacement

In case of accidental loss or damage, a replacement key fob will be required to be paired to the vehicle via a VinFast Service Center.

Remote Key Functions

Remote Lock/Unlock

The vehicle can be locked and unlocked using buttons on the key fob.

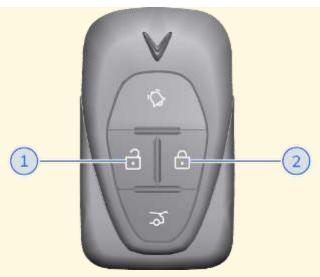

To unlock the doors via the key fob:

• Single press the unlock button



for the driver's door.

• Double press the unlock button



for all doors.



NOTE

Door Unlock can be configured to unlock all doors with a single press. See > Vehicle Settings-Doors.

To lock all doors via the key fob:

• Single press



to lock.




WARNING

Before driving ensure all doors are closed and locked.


If a door is not fully closed it may suddenly open while driving, potentially causing an accident leading to serious injury or death.

Passive Unlock

When carrying the remote key, the vehicle can be unlocked automatically using the passive unlock feature. This feature conveniently allows the vehicle to be unlocked without removing the key from your pocket or bag.

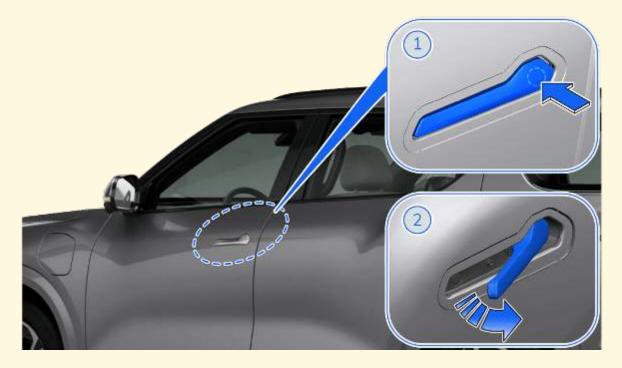



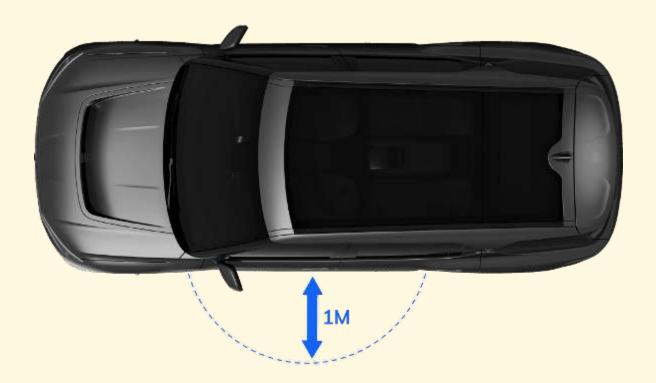

To Unlock the vehicle via Passive Entry:

- 1. Ensure that the key fob is within 1m range of the driver's door.
- 2. Press the wide section



of the door handle to unlock the driver's door.

Lock/Unlock Feedback:

When locking and unlocking the vehicle, feedback will be provided via one of the following configurable options:

- Lights only
- Horn only
- Both Lights and Horn
- Of

The vehicle exterior mirrors may also be set to automatically fold and unfold with vehicle locking. See > Settings > <u>Vehicle</u> <u>Settings-Mirrors</u>.

To configure lock/unlock feedback:

• See > Settings > Vehicle Settings-Door.



NOTE

If the lock switch is pressed and any door is not fully closed the vehicle will not be locked. The turn signal will also not blink indicating for all doors to be checked.

Other Remote Key Functions

In addition to turning your vehicle ON and OFF, the remote key has the following additional convenience functions:

Comfort Mode

When the vehicle is in a stationary position, pressing the Unlock button on the key fob for more than 1.5 seconds will open all the windows on the vehicle.

Pressing the Lock button on the key fob for more than 1.5 seconds will close all the windows on the vehicle.

Forgotten key reminder

If available, when the driver door is closed and a key is left in the vehicle, a message will appear on the instrument display and an audible tone will sound to alert the driver. If the key is left in the car, the doors cannot be locked.

Find your car

When the vehicle is locked and in a stationary position, press the "Find Vehicle" button to activate the vehicle horn and indicators to assist in locating the vehicle. This function is available when the key fob is within approximately 15m (49ft) of the vehicle.

Panic Alarm

When the vehicle is locked and in a stationary position, press and hold the "Panic Alarm" button for approximately 3 seconds to sound the panic alarm. This function is available when the key fob is within approximately 15m (49ft) of the vehicle.

Automatic re-lock function

If a door is not opened after the vehicle has been unlocked, the vehicle will automatically re-lock after 30 seconds.

Collision unlock function


If a collision or accident occurs and the airbags deploy, all doors will automatically unlock. This assists in providing improved access to vehicle occupants for emergency services.

Mechanical Key

Overview

The mechanical key is integrated into the vehicle key fob. The mechanical key can be used to unlock the vehicle doors manually in the event the key fob or vehicle 12V battery is drained.

To release the mechanical key:

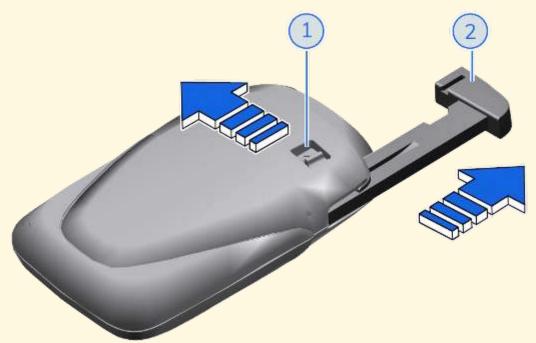

1. On the vehicle key fob, slide the latch



to unlock the key.

2. Pull the mechanical key



from the key fob.

To unlock the vehicle with the mechanical key:



- 1. Push the wide section of the door handle to expose the mechanical key lock cylinder on rear left door.
- 2. While holding the door handle clear of the lock cylinder insert the key into the key cylinder



3. Rotate the mechanical key



clockwise to unlock all doors

- 4. Open the driver door and place the key fob in the bottom of the storage of the front center console. See > <u>Starting the vehicle</u>
- 5. Press the brake pedal to disarm the vehicle theft alarm.



CAUTION

When the mechanical key is used to unlock the vehicle, the anti-theft alarm will trigger immediately.




NOTE

When the mechanical key is used all doors will be unlocked at the same time unless the vehicle 12V battery is drained.

3.2. Doors

Exterior Doors

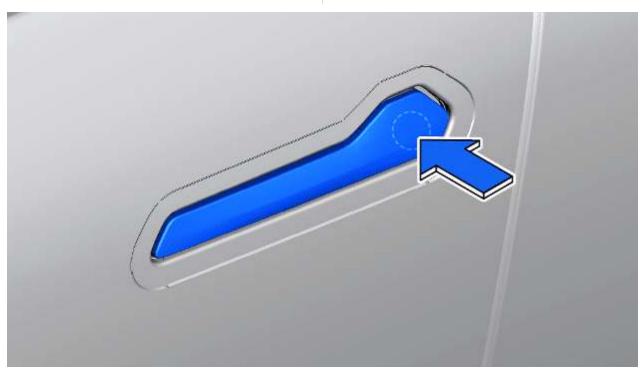

To open the vehicle via the exterior flush door handles:

- Ensure that you have the key fob with you (within 1 meter of the car) to passively unlock the vehicle or press the unlock button on the key fob.
- 2. Push the wide part of the flush door handle inwards, the narrow part of the handle will pivot outwards, allowing you to hold the handle and pull the door open. Once you release the flush door handle, it retracts automatically.

Soft door



NOTE

The doors of this vehicle are equipped with a soft close mechanism which enables the doors to close softly with minimal force.



WARNING

Check to make sure that no body part or object of any kind is blocking the door while closing because they could be caught between the door and the vehicle while closing.

Do not place any body part or object of any kind between the door and the vehicle during operation of the soft close feature and do not attach any accessories to the door to avoid the risk of entrapment. Failure to follow this warning could result in serious injury.

Passive Unlock via door handle:

The Passive Unlock feature allows the unlocking of all the doors without using the key fob. To use passive unlock function the key fob must be within 1m (3ft) of the driver's door.

To lock and unlock vehicle via Passive Unlock:

See > Keys and Locks > Remote Key Functions > Passive Unlock.



WARNING

Before driving, make sure that all doors are fully closed and locked.

If a door is not fully closed it may suddenly open while driving, potentially causing an accident leading to serious injury or death.

Ensure no objects or body parts extend outside the vehicle while in motion.

Never leave children unattended in the vehicle as interior temperatures can get extremely hot or cold leading to serious injury or death.

Interior Door

To open the doors from inside the vehicle, door release buttons are provided on all four doors.



To open a door from the inside:

1. If locked, press the door release button




once to unlock the door.

2. Press the button again



(after at least 1 second) to open the door automatically.

To open a door from the inside using the emergency door release lever:

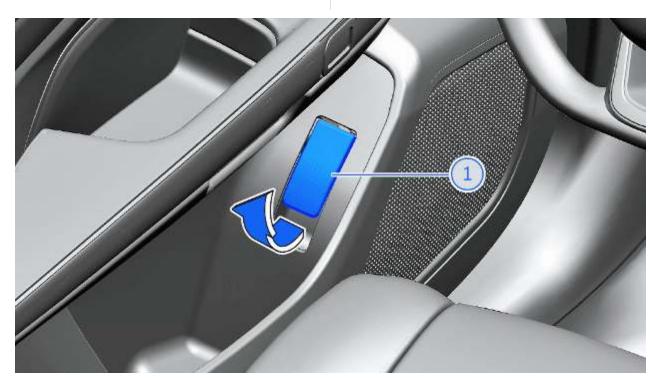

In case of a failure with the door release button or electrical system, an emergency release lever is available on front

doors and rear doors (if available). Pull the emergency door release lever



next to the door pocket to open the door.



NOTE

To prevent children opening the rear doors using the door release button, engage the rear door child locks. See > Child Rear Door Locks.



WARNING

To prevent children from falling from the vehicle while in motion ensure all doors are properly closed and locked before starting to drive.

Always use the Child Safety Door Lock when traveling with children.

Ensure all passengers are seated correctly and have seat belts fastened prior to commencing a journey.

Child Rear Door Lock

The Child Rear Door Lock feature prevents the rear doors from being opened from inside the vehicle, enhancing rear occupant and child safety. When this lock is engaged, the rear doors can only be opened by using the exterior door handle.

Activation

Child Rear Door Lock feature can be activated from the Infotainment screen.



NOTE

All the rear doors are locked when the Child Rear Door Lock is enabled.

To Activate Child Rear Door lock:

1. Tap on the App Library



2. Select Settings



> Vehicle Settings



- > Doors.
- 3. Scroll down to the Child Lock section and toggle it On/Off.



WARNING

Never leave children unattended in the vehicle.

Ensure all doors are closed and locked prior to driving.

It is recommended to use the child rear door lock feature to prevent children from opening the rear doors while driving which could result in serious injury or death.



NOTE

The child rear door lock feature does not lock the doors from the outside.

3.3. Front and Rear Compartments

Liftgate

The Liftgate is located at the rear of the vehicle, and provides access to the rear-cargo compartment. The liftgate operates when the vehicle is in Park, as long as the key fob is in range.

Opening and Closing

The liftgate can be operated using any of the following methods:

- 1. Key fob
- 2. Car Control Area via Infotainment screen.
- 3. Interior and Exterior Switch
- 4. Foot Kick Sensor
- 5. Manual Operation of liftgate

Power Liftgate Operation

To open or close the power liftgate using the key fob:



Long press the liftgate button



on key fob once to open or close the power liftgate.



NOTE

A beep will be heard prior to liftgate operation.

To open or close the power liftgate using Car Control Area Infotainment screen controls:

- 1. Touch targets will appear on Car Control Area if the vehicle is in Park.
- 2. Tap on liftgate touch target to open or close the liftgate.

To open and close tailgate via the exterior and interior buttons:

The liftgate can be operated using the liftgate switches present on the exterior and interior of the vehicle.





1. Press the exterior button



to open.

2. Press the interior



button to close.




NOTE

Depending on the version or market, the position of the interior tailgate button may vary. Refer to the image above.

To open/close the power liftgate using Foot Kick Sensor:

The power liftgate can be conveniently opened handsfree. There is a sensor below the rear bumper that will respond to

foot movements and open or close the liftgate automatically when the key fob is near the vehicle. The target area for foot movements is marked by a VinFast projected on the ground (if is equipped with the Logo projector).

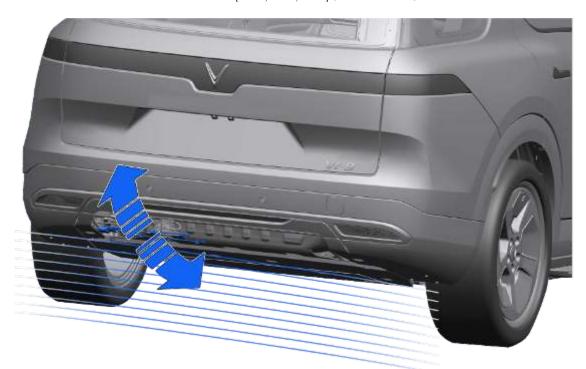

- 1. Make sure the key fob is approximately 1m (3ft) from the liftgate.
- 2. Move your foot back and forth once in the travel direction underneath the rear bumper (left side) as

shown.

- 3. Carefully step back to allow the liftgate to open or close.
 To turn on/off Foot-Kick Sensor:
 - 1. Tap App Library



on the Infotainment screen.

2. Tap Settings



> Vehicle Settings > Doors

2. Use toggle button to turn on/off the feature.



NOTE

If the foot kick sensor does not operate properly, contact the nearest VinFast Service Center.



CAUTION

The foot kick sensor is located behind lower center part of rear bumper.

Do not stand too close to rear bumper while using the foot kick sensor.

Do not paint or apply any type of coating to the lower area of rear bumper which may affect the operation of the foot kick sensor.

Do not disassemble or make any changes to the rear bumper.



Take care when the liftgate is in operation to avoid any injury.

To stop auto liftgate movement:

The power liftgate movement can be stopped using the following methods:

- · Press the interior liftgate button.
- · Press the liftgate button on the key fob.
- Tap the Car Control Area liftgate icon on the Infotainment screen.



NOTE

The liftgate is fitted with anti-pinch sensors. If any obstacles are detected while closing the liftgate, it will revert to open position again.

Liftgate Height Adjustment

To adjust height of power liftgate:

- 1. Open the liftgate fully.
- 2. Set the liftgate to the desired height.
- 3. Press and hold the liftgate interior switch again for 3 seconds until beep is heard to confirm the desired height.
- 4. Close liftgate with button.
- 5. The liftgate will then open to the set position.



WARNING

Do not allow children to operate the liftgate switch.

When closing the liftgate, exercise caution to ensure that no body parts are in the path of the closing liftgate, which can cause serious injury.

Do not carry passengers in the liftgate area.

Keep the liftgate closed while the vehicle is in motion.

Never leave children around open luggage compartment. They could get inside the luggage compartment and accidentally close the liftgate trapping them inside.

Remove all the snow which can accumulate before opening the liftgate otherwise liftgate may get closed automatically due to the weight of the snow causing serious injuries.



CAUTION

The liftgate must be properly closed after closing it. The closed liftgate must be properly flushed with surrounding panels.

Emergency Safety Release

inline Rectangle

inline Rectangle

inline Rectangle

on the back of the liftgate.

inline Rectangle

If the electric liftgate switch does not operate, the liftgate can be operated manually from inside the vehicle.

- 1. Remove the inside cover
- 2. Push the white tab with force, as shown above



NOTE

If the liftgate can only be opened using the emergency operation lever, there may be an issue with the liftgate. Please visit a VinFast Service Center to check your vehicle.

Front Hood

The front hood provides access to the front cargo compartment, 12V battery, and fluid/coolant reservoirs.

- Front Cargo compartment-Storage > Front Cargo Compartment
 - inline Rectangle
- 1. Ensure the vehicle is in Park (P).
- Touch targets will appear above the tailgate & hood in the Car Control Area area of the Infotainment screen.
 See > <u>Car Control Area Overview</u>
 - inline Rectangle

In case of an electrical malfunction, the hood can be opened manually.

1. Pull the hood open switch twice, located on the underside of the driver's dashboard. The hood will open

 Maintenance items-Maintenance > <u>Fluids</u>, <u>Lubricants</u> and Parts

To open the front hood via the Infotainment screen (if available):

- 3. Tap the hood indicator on the front Infotainment screen to unlock it.
- 4. When standing in front of the vehicle, lift the hood up to open it.

To open the front hood via manual release:

to a small amount.

- Pull the hood release lever a second time to release the hood from the latch.
- 3. When standing in front of the vehicle, lift the hood up to open it.



Do not open the hood with objects and/or people on it.

Do not pull the bracket by hand or pull it laterally, otherwise the bracket may be bent and the hood may not be opened and closed.

In case the hood is not latched securely while driving, stop the vehicle and close it immediately to avoid a serious accident from occurring.

It is not safe to drive the vehicle with the hood raised, as this will hinder vision and lead to an accident.

To close the front hood:

- 1. Lower the hood slowly until the first position of the lock is engaged.
- 2. Push down on the hood to engage the second stage lock.



CAUTION

Do not install accessories other than original VinFast products on the hood. This may increase the weight of the hood, and cause the hood support to fail.

Ensure all obstructions are removed before closing hood. To prevent damage:

- Do not apply excessive force when closing.
- Use both hands to close the hood to prevent applying concentrated force in one area which result in a dent.
- Do not apply pressure to the front edge of the hood. It may crease the edge.
- To avoid scratches, make sure your hands are empty while closing hood.

3.4. Windows

Window Controls

The vehicle windows can be controlled using the window switches, which are located on the driver's side door and the



passenger side doors.

Driver Side Door:

inline Rectangle	Driver window switch
inline Rectangle	Front Passenger window switch
inline Rectangle	Rear Right window switch
inline Rectangle	Rear Left window switch



To open and close the windows:

or passenger side doors

- 2. Push the window switch down slightly to OPEN.
- 3. Pull the window switch up slightly to CLOSE.
- 4. Release the switch at any time to stop window travel.

Windows can also be opened or closed using the key fob. This feature is helpful to ventilate the vehicle before entering or in situations where the windows are open after exiting the

Passenger Side Door:

 Locate the window control switches on the driver's side front door



vehicle. For more information, see > Keys and Locks > Remote Key Functions > Comfort Mode.

Auto-Opening/Closing (express mode)

- To fully open the window automatically, push the window button completely down, the power window will open until the window reaches the lowest position.
- To fully close the window automatically, pull the window button completely up, the power window will close until the window reaches the highest position.



NOTE

The windows can be operated for an additional 15 seconds when the vehicle power mode transitions from ON to OFF power mode.

The driver's side window control switches have the main priority over the other passenger window switches.

Never try to operate the main switch on the driver's door and the individual door window switch in opposite directions at the same time. If this is done, the window will stop and cannot be opened or closed.



Before closing a power window, ensure that all occupants, especially children, do not have any body parts extended through the window opening. Failure to do so could cause serious injury.

While closing the window, check for obstructions like a head, hand, etc. which may lead to personal injuries.

For safety reasons, always switch on the safety lock, it can prevent children from accidentally using the power windows. Do not allow children to play with the power windows.

Do not leave the key inside the vehicle.

Never close the windows or sunshades carelessly or in an uncontrolled manner as this may increase the risk of injury.



CAUTION

Do not operate the power window switch continuously serval times in a short time frame, otherwise the power window controls may be disabled (anti pinch fault warning on infotaiment screen) to protect the motor. If this occurs, please wait a few minutes until the motor cools down.

Avoid tinting the windows, as a tinted window can affect visibility of the display in the exterior mirror.

When the vehicle windows are tinted with metallic tint, the Bluetooth connection may be degraded or it could cause the key fob to malfunction.

Initialize Windows:

If the windows cannot be closed automatically via the express function (e.g. after disconnecting the vehicle 12V battery or after replacing the Anti-Pinch Module fuse), the owner may be required to re-initialize the windows.

To re-initialize windows:

- 1. Pull up the window switch and close the window completely. Hold the switch in pulled condition for 2 seconds.
- 2. Release the switch.
- 3. Press the window switch completely down to open the window automatically.
- 4. Pull the window switch completely up to close the window automatically.
- 5. Repeat for each window.



WARNING

During the initialization process, the car window has no anti-pinch function. Make sure no body parts or other objects obstruct the closing of the car window, otherwise, it will cause damage and affect the result of the initialization learning. If the power window system fails, please visit the nearest VinFast Service Center.

Comfort Open and Close

The windows can also be opened via the following methods:

Key Fob, See > Remote Key Functions > Other Remote Key Functions.

Rear Window Blinds (if equipped)

The vehicle may be equipped with retractable rear window blinds that help to block sunlight, reduce cabin temperatures and protect the vehicle interior from heat damage.

To use window blinds

The window blinds are manually operated.



1. Use the hook



to lift the window blind.

- 2. Lift the window blind up.
- 3. Use tabs



mounted on the inner door to attach to the window frame to hold it in place.



NOTE

The window blinds are provided on both rear second row windows.

Safety Functions

Child Window Lockout

The child window lockout button prevents rear seat passengers from operating the windows by deactivating rear seat window controls. This helps to provide additional safety for rear-seated children who may accidentally open windows and exit the vehicle while in motion.



NOTE

It is recommended that the child window lockout is used whenever children are seated in the rear seats.

inline Rectangle

WARNING

The child window lockout should be always used to avoid children accidentally opening the rear windows and potentially falling out while the vehicle is in motion.

To Activate / Deactivate the Child window lockout:




1. Press the child window lockout button



to activate rear power window lockout. The indicator light will illuminate.

2. To deactivate, press the button

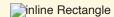

again. The indicator will turn OFF.



NOTE

Ensure the child window lockout is enabled by checking the function via the rear power window switch.

Anti-Pinch Safety Function

If the window glass detects an obstacle while closing it will automatically stop and return to the fully open position.

Express Window Up will not function if anti pinch is detected multiple times, the owner must complete the window initialization process to regain the express window function again. See > Windows > Window Controls.

Overload Protection

To avoid electrical overload, the window operation is disabled for a short period of time if the switch is repeatedly operated at short intervals.

3.5. Storage

Glove Box

The vehicle glove box is located in the lower section of the dashboard in front of the passenger seat.

Once opened the glove box light illuminates the storage area. The light will turn off automatically when the glove box





is closed.

To open the glove box:

Pull the handle on the face of the glove box in the direction as shown.

/25, 6:59 PM	VF9 ['2023', '2024', '2025'] Owner's Manual - Condensed Edition
inline Rectangle CAUTION	
Close the glove box door gently. Do not use exc	cessive force.



Do not put heavy or sharp objects in the glove box. In an accident, these objects may cause the glove box to open and could result in serious injury.

Never leave the glove box door open. A passenger may suffer serious injuries due to an open glove box door in the event of an accident.

Ensure that glove box is closed while driving.

Center Console

Front Row Center Console

The front row center console is located between the driver and front passenger seats. The center console forms both an armrest and a central storage bin.

Armrest

The armrest is located in between the front passenger and driver seats as part of the center console lid. The armrest provides comfort to the driver and passenger.

Center Console Storage

The center console storage bin is located under the armrest. It can be used to store small items safely and securely. It also contains two USB ports, one for connecting your device to the Infotainment screen and one for charging your device. There are also two cup holders in front of the storage bin.

To access the center console storage bin:

- inline Rectangle
- inline Rectangle
- 1. Press the release button



2. Pull the armrest cover



upwards to open.

Captains Chair Center Console (if equipped)



The second row console is located in the middle of the second row seats. The center console forms both an armrest and a central storage bin. The central storage bin contains two USB ports and a wireless charging mat for charging your device. It also contains two cup holders.

To access the rear center console storage bin:

- inline Rectangle
- inline Rectangle
- 1. Press the release button



2. Pull the armrest cover



	upwards to open.
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	
l	



CAUTION

The use of excessive force to open the storage compartment may damage the armrest.

Do not forget to close the console lid before driving.



Never store flammable items in the vehicle.

To avoid vehicle damage, disconnect all USB cables from the vehicle when not in use. USB cables left plugged into the vehicle, unconnected to a device, could be damaged or cause an electrical short if the unconnected end comes in contact with liquids or other power source such as the accessory power outlet.

Door Pocket Storage

The vehicle features door pocket storage for both front



and rear



passengers. The door pockets are designed to store drink bottles and other small personal items.





Please ensure that any items stored within the door pockets fit securely in the compartment. If bottles or other items are too large for the door pockets, please store them in another safe location, such as the rear trunk.



Any unsafely stored items within door pockets may become loose during vehicle operation. Such items may come out from the compartment when the vehicle is in motion and may lead to situations resulting in serious injury or death.

Avoid storing glass items in door pockets. Such items may break whilst driving and may cause serious injuries to passengers.

When storing bottles in door pockets, always ensure that the bottle cap is fully tightened.

Cup Holders

The vehicle has six cup holders for the storage of beverages and other small items.

The cup holders are located:

- In between the front seats, in the center console.
- In the middle arm rest of the second row seats.
- In the center console between the second row seats (if equipped with captain's chairs).
- · On the lower seat cushion of third row.

To access the cup holders in center console for front row seats and second row seats (if equipped with captain's chairs):

- **Sinline** Rectangle
- inline Rectangle
- 1. Push down on the cup holder lid
 - inline Rectangle
 - , the door will rotate open.
- 2. Push down on the lid gently to close.

To access the second row cup holders (7 seater variant)

The vehicle may be equipped with one of the following three types of seats, depending on the version or market.

Type 1:

- inline Rectangle
- inline Rectangle
- 1. Fold down the arm rest
 - inline Rectangle
- 2. Push the cup-holders inwards
 - inline Rectangle
- 3. The cup-holders will then slide out in the direction shown.
- 4. Push the cup holder tray inwards in the direction of the armrest to close.

Type 2:

- inline Rectangle
- inline Rectangle

	1. Pull the center seat tab/ the release fold lever on the top of the headrest to fold down the center seat.
	inline Rectangle
Ш	The cup-holders is located behind the seat back of the center seat.
Ш	Type 3:
Ш	inline Rectangle
Ш	1. Fold down the arm rest
Ш	inline Rectangle
	2. Press the lock button to open the cup holder.
Ш	inline Rectangle
Ш	To access the third year our heldows
Ш	To access the third-row cup holders:
Ш	inline Rectangle
Ш	1. Push the cup-holders inwards
Ш	inline Rectangle
Ш	2. The cup-holders will then slide out in the direction shown
Ш	inline Rectangle
Ш	
Ш	3. Push the cup holder tray inwards in the direction of the armrest to close.
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	
Ш	



Do not put anything other than cups or beverage cans in the cup holders.

In the event of an accident or emergency braking, such items may be thrown out of the cup holder, resulting in personal injury. If there are hot drinks, please tighten the cover tightly to avoid scalding.

Front Cargo Compartment

The cargo compartment is located at the front of the vehicle under the hood. The front cargo compartment provides storage for smaller pieces of luggage and provides access to maintenance items.

To access the Front Cargo Compartment:

See > Front and Rear Compartments > Front Hood




inline Rectangle	Washer Fluid Reservoir
inline Rectangle	Coolant Fluid
inline Rectangle	12V Battery
inline Rectangle	Fuse Box
inline Rectangle	Brake Fluid

Front Cargo Compartment Emergency release:



In case of an emergency situation, the front hood can be opened using the interior release button located in the front cargo compartment.

The interior release button also works as a light which turns ON when the hood is opened and turns OFF when the hood is closed.

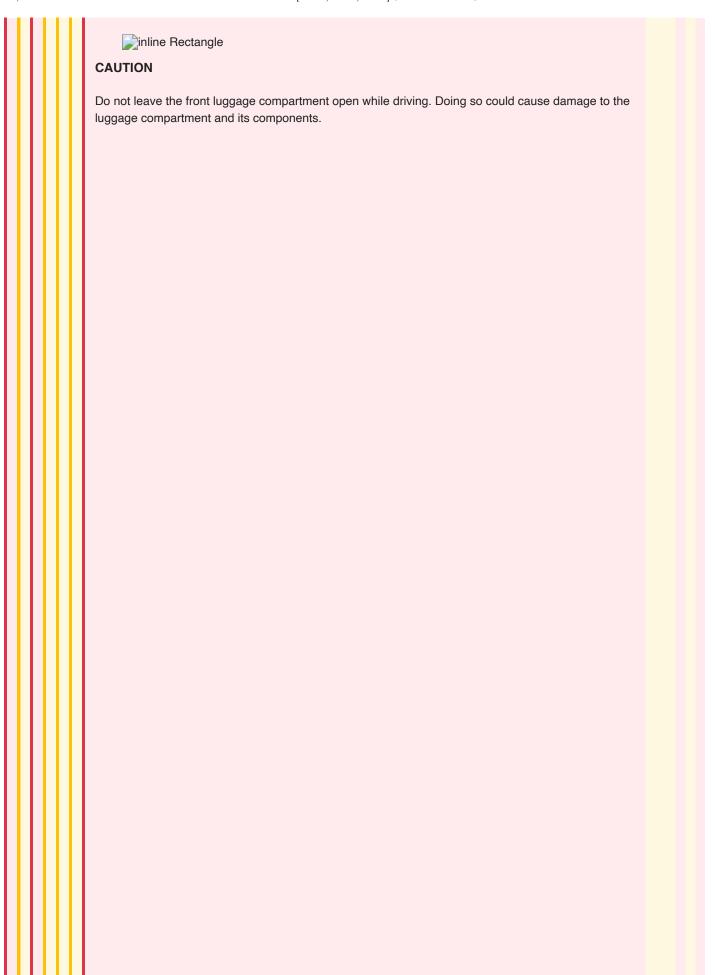



Be sure to lock the vehicle doors and luggage compartment, and keep the key fob out of reach of children, to avoid children getting locked in the vehicle.

Under no circumstances should people climb inside the luggage compartment. Never close the luggage compartment when someone is inside it.

Rear Cargo Compartment

The rear cargo compartment provides storage for larger pieces of luggage or objects that need to be stored securely including the vehicle tools and spare wheel (if equipped) that are also located in this compartment.

- inline Rectangle
- To remove the cargo floor cover
 - inline Rectangle
 - , pull up on the tab.

The rear cargo compartment is fitted with two LED lights. They will turn **ON** when the liftgate is opened and turn **OFF** when the liftgate is closed.



When braking suddenly, loose objects may get thrown into the interior of the vehicle increasing the risk of an accident or personal injury.

To avoid children getting trapped in the vehicle never leave the vehicle unattended, especially if the liftgate is open.

Do not allow small children to play in the vehicle.

Spare Wheel and Tools (if equipped)

The spare wheel (if equipped) is located in the rear cargo compartment. To know more about spare wheel and details on how to change a tire, see > Vehicle Recovery > Vehicle Jack & Tire Repair.

The tools are located under the cargo floor in the rear cargo compartment. The following items may be found under the cargo floor depending on region of sale:

- Tire inflator kit and power lead
- · Lifting jack and crank
- First Aid kit
- · Towing eyes
- · Warning triangle
- Portable charger
- Hi-Vis vest
 - inline Rectangle
 - inline Rectangle

WARNING

Do not exceed the speed limit of 50 km/h (31 mph) when spare tire is fitted.

3.6. Vehicle Security

Theft Alarm

The theft alarm system helps to protect the vehicle and its contents from break-in. When activated, the system will emit both an audible and visual alert using the vehicle horn, turn signals, and Infotainment screen display.

When will the vehicle theft alarm be triggered?

If the vehicle is locked and armed the following will trigger the alarm:

- If any of the front or rear doors are forcefully opened.
- · When the liftgate is forcefully opened.
- When the hood is forcefully opened.
- When the vehicle location is different from the saved location (GPS monitoring required).

Theft Alarm Operation

To activate the theft alarm:

The vehicle theft alarm will automatically activate anytime the vehicle is locked.

To change the alert type:

The theft alert type can be changed via the Security Settings page. Choose between lights, horn, or lights and horn



, on the Infotainment screen.



> Security Settings



- > Theft Alert.
- 3. Use the toggle button to select an alert type.

ON Duration

The Theft Alarm will remain active for 30 seconds. The turn lights and horn will be active for a period of 30 seconds and

feedback.

1. Tap App Library

2. Tap Settings

at the same time anti-theft indicator will be flashing. GPS Monitoring

GPS Monitoring is a vehicle security system that alerts the owner when the vehicle is moved from its parked location.



NOTE

GPS monitoring cannot be activated if the battery percentage is below 70%.

To turn ON/OFF GPS Monitoring system:



from the Theft Alerts Settings Page

Theft Alarm Activation

When the theft alarm is activated the vehicle horn will sound and the turn indicators will flash.

To Stop the alarm:

The vehicle warning alarm can be stopped by any of the following ways:

- GPS monitoring can be activated/deactivated by tapping ON/OFF
- Press and hold the Tailgate Unlock button on the smart key.
- Press the PE (Passive Entry) button on the door handle.
- · Press any button on the smart key.

Stopping the Alarm if the Key Fob Battery is flat

If the key fob battery is drained the alarm will not be able to be deactivated by pressing the key fob unlock button. To enter the vehicle and disable the alarm with a drained key fob battery See > Keys and Locks > Mechanical Key.



CAUTION

Ensure that no passengers are in the vehicle before locking the vehicle. The alarm will activate if a passenger leaves the vehicle.

Please make sure that all the doors are closed, otherwise the theft alarm system will not arm.



NOTE

If the vehicle is unlocked but no doors are opened within 30 seconds, the vehicle will automatically re-lock and the alarm system will rearm.

Immobilizer

The vehicle immobilizer prevents the vehicle from starting if an attempt is made to turn on the vehicle with an invalid or incorrect key fob. The immobilizer also checks whether any of the vehicle control modules have been tampered with prior to allowing the vehicle to start.

Vehicle Immobilizer Operation

• The immobilizer gets automatically turned ON when the vehicle is in a locked state.

The immobilizer telltale will be displayed briefly on the Car Control Area area of the Infotainment screen upon detection of a valid key fob by the immobilizer system, the telltale will turn OFF automatically.

If the system does not recognize a key fob, the telltale will flash and prevent the vehicle from starting. If this occurs, please ensure that the correct key fob is being used and any metal objects are removed from around the key fob, which can cause interference. If this repeatedly occurs and inhibits the vehicle from starting, contact a VinFast Service Center.



CAUTION

The vehicle immobilizer system may not stop the vehicle from being stolen or getting damaged. Ensure the key fob is not left inside the vehicle when exiting.

The immobilizer and key fob function together as a pair to secure the vehicle. A damaged key fob may not function properly

Avoid dropping, knocking or exposing the key fob to moisture, static electricity, or other electrical interference.

Do not tamper with electrical devices in the vehicle as this can cause terminal vehicle issues.



and result in issues with starting or immobilizing the vehicle.

WARNING

Consider the vehicle location and surroundings before leaving the vehicle unattended. Do not rely completely on this system to protect the vehicle.

4. Seats, Restraints & Safety

4.1. Seats

Front Seats

Please follow all seating guidelines to ensure optimum protection during an accident. Seats, headrests, seat belts, and airbags work together to ensure passenger safety.

Ensure that the seat position is adjusted prior to driving for an optimal driving experience. These adjustments can be accomplished with the electric controls located on the side of the seat.

When adjusting the seat, make sure to maintain the recommended distance from the steering wheel and the airbag.



NOTE

Wear a seatbelt for the entire duration of the journey.

For more information regarding correct seating positions. See > Correct and incorrect seating positions



NOTE

ECO variants have 8 way power adjustment for driver and 6 way power adjustment for passenger seats.

PLUS variants have 12 way power adjustment for driver and 10 way power adjustment for passenger seats.

Rear Seats

Please follow all seating guidelines to ensure optimum seating comfort and protection during an accident. Seats, headrests, seat belts, and airbags work together to ensure passenger safety.



NOTE

Always wear a seat belt when traveling in the vehicle.

Second Row Seats

7-Seater variant:

The second-row seats of the 7-Seater vehicle variant are designed so that they can be folded to access the third row easily. A 40-20-40 configuration can be used while folding

seats and tumble for easy entry. All the seats can be folded. See > Second row Seat Folding.

The second-row center seat also incorporates an armrest and two cup holders. See > Cup holders.

For more information regarding correct seating positions See > <u>Correct and incorrect seating positions.</u>



NOTE

ECO variants are fitted with 4-way power adjustment and PLUS variants are fitted with 8-way power adjustment.

6-Seater Variant (Captain's Chair):

The 6-seater variant of the vehicle has a captain's chair layout for the 2nd row seats. There are 2 seats in the 2nd

row with a center console in the middle between them. See > Storage > Center Console. Both seats can be folded and tumble for easy entry of the third row.



NOTE

PLUS variants are fitted with 8-way power adjustment.

Third Row Seats

The third-row seats are equipped with two passenger seats. These rear seats can be folded forward to increase the boot capacity of the vehicle. See > Third Row Seat Fold.

The third-row seats also incorporate two cup holders. See > Cup holders.

Seat Adjustment

The vehicle is fitted with a driver's seat, and five or six passenger seats depending on the vehicle variant. The following section describes how the seats can be adjusted to provide safe and comfortable travel for all occupants.



Under no circumstances should the vehicle have more occupants than the total seats. Traveling with an excessive number of passengers is dangerous to all occupants, even to those who may be safely restrained.

Front and Second Row Seat Adjustment

For Front Row Seat , Left and Right Seat of Second Row Seat



Tilt Adjustment: To adjust the seat surface (tilt) upward or downward, pull/ push the front section of the inline Rectangle tilt button inline Rectangle upward or downward. Forwards/Rearward Adjustment: To move the seat forward or rearward slide the travel button inline Rectangle inline Rectangle in the intended direction of travel. Seat Height: To move the seat cushion upward or downward, pull/push the rear section of the height inline Rectangle button inline Rectangle upward or downward as shown. Seat back Angle Adjustment: To move the backrest forward or backward, pull/ push the backrest button forward or backward. Lumbar Support (If available): The lumbar adjustment switch consists of four sections front, rear, upper and lower. To adjust the lumbar support, press the lumber button inline Rectangle in the desired direction.



NOTE

Seat height and seat tilt adjustments are not available for the second row outboard seats for both 7-seater and 6-seater (captain's chair) variants.

For Center Seat of Second Row (if available)



Forwards/Rearward Adjustment:

Press the upper end of the button to move the seat rearward.

Press the lower end of the button to move the seat forward.



Seat backrest Angle Adjustment:

Press the right button



to move the backrest forward

Press the left button



to move the backrest rearward or recline it.



Third Row Seat Adjustment

Third row seats can not be adjusted, they can only be folded down.



CAUTION

Adjust the seat position before fastening the seatbelt.

Keep fingers clear of moving seat components while adjusting to avoid risk of injury.



WARNING

Sitting in a fully reclined position when the vehicle is in motion can be dangerous and reduces the effectiveness of vehicle safety systems.

Sitting in a moving vehicle with a reclined seat back increases the chance of serious or fatal injuries in the event of a collision or sudden stop.

All occupants in a moving vehicle must keep their seat backs upright and their seat belts fastened at all times.

Supervise children when operating power seat adjustments.

Adjust the driver's seat only when the vehicle is stationary. Adjusting the seat while driving is dangerous and may result in an accident.

Drivers and passengers should always sit well back in their seats with seat belts properly fastened and backrests upright. Failure to do this could result in serious injury or death in the event of an accident.

The driver and front passenger should sit as far rearward as possible to reduce risk of injury from a deploying airbag.

Do not put any luggage, loose items or pets on the front passenger seat.

Headrest

The vehicle's first, second and third row seats have headrests. The headrests in the first and second row seats are adjustable (non-removable) whereas the third row seat headrests can be rotated by 90 degrees. The headrests provide comfort for passengers, but their primary purpose is to help protect passengers from whiplash and other neck and spinal injuries during an accident.

Headrest Components:



The headrest system has the following components:

Energy absorber head rest



• Headrest adjustment button



· Steel stems



Headrest Adjustment

The headrest height can be raised or lowered. Adjust the headrest so the middle of the head restraint is at the same height as the height of the top of the eyes. Adjust the backrest to an upright position before adjusting the headrest.

For first and second row seats:



To adjust the headrest height:

1. Press the locking button



on the outboard side of the headrest.

- 2. Lift/Lower the headrest.
- 3. Release the locking button to lock the headrest in it's new position.



For taller passengers where the headrest cannot be positioned as recommended, adjust the headrest to its maximum/highest position.



WARNING

All occupants (includes driver and all passengers) must correctly position headrests prior to operating the vehicle. A correctly adjusted headrest minimizes the risk of neck and spinal injury in the event of an accident.

Do not adjust the headrest of the driver's seat while driving.

Do not let any passengers occupy a seat with the head restraint removed or reversed.

Adjust the headrest as close to the passenger's head as possible. Do not use a seat cushion that holds the occupants body away from the seat back.

Ensure the headrest locks into position after adjusting it.

For Third Row Seats:




Third row seat headrest can be rotated by 90 degrees to aid in stowing.

• Press the locking button



on the outboard side of the headrest to rotate the headrest.

To fold and tumble the second row seats:

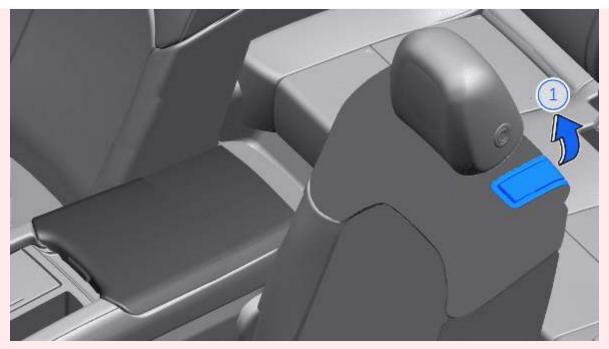

The second row seats are designed so they can be folded and tumbled to increase the boot capacity of the vehicle and to aid in accessing third row seats.

To fold down the seats:

- 1. Remove all items from the seats.
- 2. Place the rear seat belt buckles in their pockets.
- 3. Pull the fold release lever



to fold down the seat backrest.

To Fold the Center Seat (if avialable)



- 1. Remove all items from the seats.
- 2. Place the rear seat belt buckles in their pockets
- 3. Pull the center seat tab/the fold release lever on the top of the headrest to fold down the seat backrest





To return the rear seats to the upright position push the seat upwards towards the rear and ensure it is locked in position To Tumble the seats:







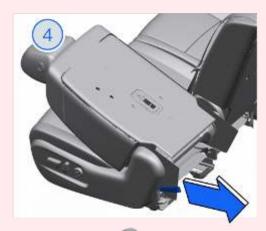

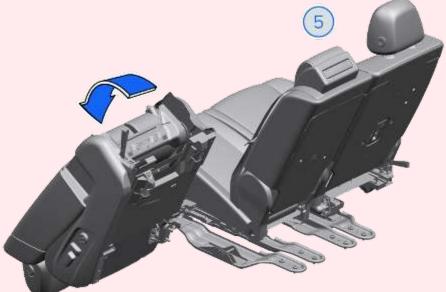

1. Move the first row passenger seat forward as far as possible



2. Adjust the second row seat headrest to its lowest position

(2)

3. Fold down the seat back



4. Pull the strap release located at the back of the seat to disengage the seat latches



5. Pull upwards and push fully forward to place seat in tumble position



In the 7-seater variant, the second-row seats can be folded separately in a 40/20/40 split configuration or they can all be folded down together. The second-row seats in the 6-seater (captain's chair) variant can be folded down separately or together.

To return the rear seats to the upright position pull the fold release lever and simultaneously push the seat upwards towards the rear and ensure it is locked in position.



NOTE

The seat latches should engage automatically when raising the seats, but if they do not, pull the strap release and push the seats down until they do.

The second row seat armrest in the 7-seater variant must be folded back in the seatback when folding the seats.





Third row occupants must always mind their toes when raising the seats as the toes might get caught between the seats and the locking latches which can cause serious injuries.

To fold the Third Row Seats:




inline Rectangle

Pull the strap



located behind the third row seats to fold them.

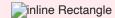

CAUTION

When returning the second row seat backrests to the upright position, ensure that the seat belt is not caught behind the seat.

Before adjusting the second row seat backrests, the car should be parked on level ground with parking brake applied.

Do not put heavy items on the seats when they are folded as they may damage the folding mechanism.

Do not use the second row electric seat adjustment switches when the seat is in the tumbled and dumped position as this may cause damage to the seat adjustment mechanism.



WARNING

Once you have accessed the third row, push the seat backs of the second row into their upright position, ensuring they are tabbed and locked into place. Injury may occur if this is not done.

Do not adjust the second row seats while driving as this may lead to an accident causing serious injury.

Do not allow children to play inside the vehicle when the second row seats are folded as this may lead to serious injury.

Make sure hands, fingers, feet or other body parts are kept clear of the seat folding mechanism while adjusting or folding the second row seat.

Make sure each second row seat backrest has locked securely in its position, otherwise the seat belts for the rear seats will not offer maximum protection. If a seat is occupied and the corresponding second row seat backrest has not locked securely into place, the seat occupant and rear seat backrest may move forwards in the event of a sudden braking or during an accident.

Do not put any heavy loose luggage on the second row seats or inside passenger compartment, in case of an emergency braking or maneuvering situation the luggage may get thrown inside the cabin and hit a passenger.

When returning a seat back to its upright position, make sure it is firmly locked.



NOTE

Before folding seats fully forward, remove any items from the seats. To allow the seat backs to fold completely flat, the front seats many need to be moved forwards.

Memory Seats (if equipped)

The memory seat feature saves the preferred seat adjustment to a user profile. When a driver starts the vehicle and a profile is loaded the memorized seat position will automatically adjust to it's previously saved location.



NOTE

Only first and second row seats are electronically adjusted. Memory seat function is applicable only for the driver seat.

To save/delete a seat position to memory/profile for the first time:

- 1. Adjust the seat to your desired position.
- 2. Tap Profile Name > My Profile > Personalization .
- 3. Tap Save New / Delete.

To recall a memorized seat position:

When the driver loads his/her profile:

The seat position will be automatically recalled to the saved position.

To change a memorized seat position:

The driver can reset or change a seat position after saving it to the profile. To save a new seat position:

- 1. Adjust the seat to the desired position and a notification will pop-up on screen.
- 2. Tap Save and the new seat position will be saved to the active profile.



WARNING

Ensure the driver's seating position is adjusted prior to driving. An incorrect seating position may impact both driving comfort and the ability for the driver to control the vehicle.

Check seat surroundings before adjusting seat position to avoid injury to other passengers or damaging the seat.

Seat Heating and Ventilation

The vehicle may be equipped with heated and ventilated seats for both the front and rear passengers.

The heating and ventilation can be controlled by the climate control page on both the front and rear Infotainment screen (if equipped). See > Climate Controls



People who cannot detect temperature or pain to the skin should exercise extreme caution. In such cases, prolonged usage of heated seats may cause burns to the skin.

Do not cover the seats with anything that can insulate heat, such as a blanket, cushion, seat covers, or similar items. This may cause the seat heater to overheat which may result in burns to the skin and damage to the seat.

Correct Seating Positions

Sitting in a correct seating position is very important to ensure both driver and passenger safety. Follow these recommendations for proper seating:

- The driver and passengers feet must be on the floor.
- The driver and passenger should not slide forward on the seat.
- The driver and the front passenger should maintain a distance of 12.7 to 25.7 cm (5 to 10 inches) from the steering wheel or the dashboard.
- The backrest must be in an upright position and the occupant's back should be resting against it.
- The backrest should not be reclined to a laying down position when the vehicle is in motion.
- Every occupant should make sure that they are sitting at the center of each designated seat, sitting in a haphazard manner (offset from the seat center, sideways, etc.) can cause fatal injury in the event of an accident.
- · Children should not lean against the dashboard area.
- The driver's arms should be slightly bent (around 120 degrees) and the chest should not be closer than 30 cm (11 inches) from the wheel.
- All occupants of the vehicle must wear seat belts when the car is in motion.

See > Seats > Seat Adjustments > <u>Head Rest Adjustment</u> for correct head rest positioning.

Examples of incorrect seating position:




Example of correct seating position:



Seat Massage

If equipped, the seat massage function promotes blood circulation and relaxes muscles, which helps to avoid fatigue. The massage function can be controlled by the climate control page on both the front and rear Infotainment screen (if equipped).

To Adjust Massage settings via front screen:

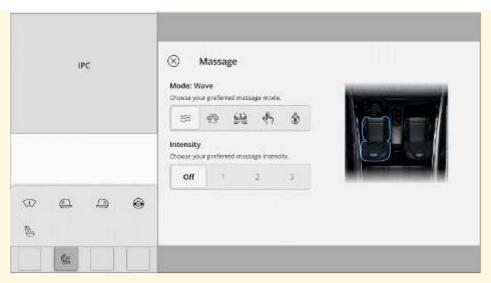


- 1. Abrir el control ergonómico
- 2. Tap any Massage button



- 3. Tap a **Seat** for which you wish to change the Massage settings.
- 4. Choose between several Massage Modes.
- 5. Choose between several Massage Intensities.

To Adjust Massage settings via rear screen (if equipped):

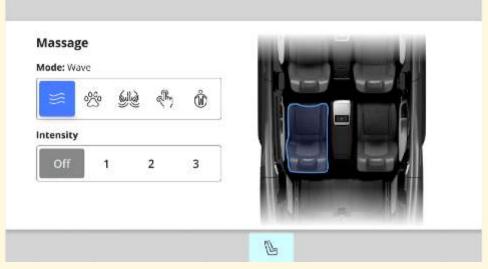

1. Tap any Massage button



- 2. Tap a **Seat** for which you wish to change the Massage settings.
- 3. Choose between several Massage Modes.
- 4. Choose between several Massage Intensities.



NOTE

The seat massage function will be automatically deactivated after about 20 minutes. Reactivation is performed manually.

4.2. Seat Belts

Seat Belt Use

Vehicle seat belts provide the most effective protection to the driver and passengers in the event of a vehicle accident. Always ensure all passengers have fastened their seat belts before the vehicle is driven.

Wearing a seat belt while driving a vehicle is required by law in most jurisdictions.

Wearing Seat Belts

The vehicle is equipped with three-point inertia reel seat belts with pre-tensioner and automatic locking retractor (ALR).

The seat belt pre-tensioner is designed to tighten the seat belt automatically by reducing the slack in both the lap and shoulder portions of the belt in the event the vehicle experiences a sudden force resulting from a hard acceleration, braking, cornering, or a collision.

The automatic locking retractor (ALR) enables the seat belts in passenger seat locations to be used for securing child seat without using a seatbelt locking clip (the belt extends fully and can be used to lock child seats). See > Child Restraints Systems.

Correct Seating Position:

A correct seating position is very important to ensure driver's and passenger's safety. Follow all recommended seating guidelines to lower the chances of injury in the event of an accident.

See > Seats > <u>Correct & Incorrect Seating Positions</u> for more information.



If the occupants of the front seats are close to the steering wheel or dashboard, the airbag system may not provide optimal protection, which increases the risk of injury or death.

To fasten a Seat Belt:

- inline Rectangle
- inline Rectangle
- **inline** Rectangle
- Latch Plate
 - pinline Rectangle
- Buckle
 - pinline Rectangle
- 1. Ensure a correct sitting position.
- 2. Advance the seat belt from its retracted position. Make sure that the belt is not twisted and lays flat across the occupant's body (shoulders, torso, and pelvic region) as shown



3. Insert the latch plate into the buckle



, make sure that the latch plate clicks in to locked condition.

- 4. Pull the seat belt to check that it is fastened securely.
- 5. Pull the diagonal part of the seat belt over the occupant's torso and shoulders towards the retractor, to remove any excess slack



A

WARNING

Inadequately positioned seat belts may increase the risk of serious injury in an accident. To avoid wearing the seat belt incorrectly, occupants must always sit in the correct sitting position; place one arm under the shoulder belt and the other over the shoulder belt (ensure that the shoulder belt is not against your neck or face), and place the lap belt across the hip (as low as possible), not across the waist. Ensure that the seat belt fits the body snugly and the belt is not twisted, and the latch plate is locked properly into the buckle.

Do not make modifications or additions that can prevent a seat belt mechanism from taking up slack, or that can prevent a seat belt from being adjusted to remove slack. A slack belt greatly reduces occupant protection.

Testing Seat Belts


Make sure each seat belt operates correctly by performing these three simple checks.

- Pull the webbing nearest the buckle while the seat belt is fastened. The buckle should remain securely locked.
- Unroll the webbing to the limit with the belt unfastened. Make sure that the unreeling is free from snags and that the
 webbing is in good condition. Check that the webbing retracts smoothly and completely.

 Grasp the tongue plate and quickly pull forward with the webbing half unreeled. It should automatically lock and prevent further unraveling.

If a seat belt fails any of these tests, contact VinFast Service Center immediately.

To unfasten the Seat Belt:

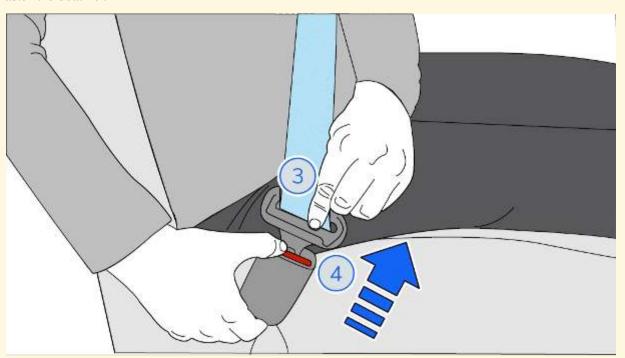

1. Hold the belt near the buckle



to avoid the seat belt hitting the occupant while retracting.

2. Press the red button on the buckle



- , to release the latch plate and set the seat belt free.
- 3. Make sure that the seat belt does not get stuck while retracting.



WARNING

While releasing the seat belt, hold the latch firmly and guide the seat belt slowly back to its retracted position to avoid injury from seat belt lashing.

Wearing a seatbelt while pregnant



If pregnant, particular attention should be taken when wearing a seatbelt to protect the mother and the fetus. The lap belt should be worn snugly and as low as possible around the hips ensuring it does not press on the abdomen. The shoulder belt strap should be worn across the shoulder and to the side of the abdomen, ensuring it is not across the stomach area. If unsure, please consult a doctor for specific medical recommendations.



WARNING

A pregnant woman should never wear the seat belt across the stomach area. This could lead to a serious injury to the fetus

and/or the pregnant mother.


Never wear twisted seat belts. Excessive forces will be transferred from the belt to the occupant in a collision, resulting in serious personal injury.

Never place any items between the passenger and the seatbelt as this may negatively interfere with the seat belt's operation.

Seat belt Warning Indicator

Driver and Passenger seatbelt status:

The seatbelt warning light

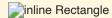

will illuminate on the front Infotainment screen if any occupied front or rear seat belt is unbuckled while the vehicle is on.

If the driver then proceeds to drive above 15km/h (9mph) without the seat belt(s) fastened, a chime will also sound. A warning notification pop-up will be shown, displaying the occupied seat(s) and the seat belt status.

When the driver and or passenger(s) fastens the seat belt(s), the warning light disappears and the seat occupancy detection indicator turns green.




NOTE

The front passenger seat belt warning can come on if luggage or heavy objects are placed on the front passenger seat.

To check seat belt status (warning present):

To show additional detail of each seating position's seat belt status:

- 1. Observe the warning message notification.
- 2. Check the status color of the seat belt displayed on the vehicle icon in the front and rear screens (if equipped).

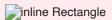

CAUTION

Do not wear a seat belt over fragile, hard or sharp objects, it may damage the seat belt.



WARNING

Seat belts must be used by all passengers whenever the vehicle is moving, not wearing seat belts may result in serious injury or death.

Never unfasten a seat belt while driving for any reason. Failure to follow this warning could result in serious personal injury or death

Do not use a seat belt if the retractor mechanism or any other part of the seat belt is damaged. Visit a VinFast Service Center to get it replaced. Using a damaged seat belt is very dangerous and may result in serious personal injury or death.

User's should not modify or tamper with the seat belt or its mechanisms, it may lead to failure of the system. Using a seat belt with damaged component is very dangerous and may cause serious injury or death.

Do not latch the seat belt into the buckles of other seats. Seat belts are designed to function effectively only when the latch plate of a particular seat belt is locked into its paired buckle. Failure to follow this warning could result in serious personal injury or death.

Do not keep the seat back of a seat in reclined position while the vehicle is in motion. Doing so could result in serious personal injury or death.

Do not wear the shoulder belt under your arm or behind your back. Doing so is unsafe and may result in serious personal injury or death.

Do not wear the seat belt with any part of the strap twisted. A twisted seat belt will not function properly in an accident and could result in serious personal injury or death.

Multiple people should not use a single seat belt. Seat belts are designed to protect a single occupant occupying a particular seat where it is mounted/attached.

Make sure there is nothing in the buckle interfering seat belt's latch plate. This may prevent the seat belt from fastening securely. Failure to follow this warning could result in serious personal injury or death.

Children under the age of 13 should be properly restrained in the rear seats. Failure to follow this warning could result in serious injury or death.

Never allow children to ride in the front passenger seat, unless the air bag is deactivated. If a child is seated in the front passenger seat, move the seat as far back as possible and properly restrain them in the seat.

Carrying an infant/child on an occupant's lap is dangerous, and doing so may result in serious injury or death of the infant/child or the adult or both.

Seat Belt Care

Seat belts are a critical component in the vehicle occupant protection system and must be cared for to ensure that they function effectively in the event of accident or other serious incident. If seat belts are damaged in any way, please stop using the affected seat and visit the nearest VinFast Service Center to have the belt inspected as soon as possible.

Recommendations for seat belt care:

• Make sure that the seat belt is not damaged or clamped by sharp objects.

- · Always keep the seat belt retractor clean and free of dust.
- · Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid.
- Fully extend the seat belts and clean them with a mild, nonabrasive soap and lukewarm water. After washing thoroughly, sponge the solution out of the belts. Do not allow the belts to retract until fully dry.
- Regularly inspect the seatbelt webbing for contamination, damage, or fraying.
- Do not bleach or re-dye the webbing because this may weaken the seat belt.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, if foreign materials get into a seat belt buckle, the seat belt may not work properly.



CAUTION

Do not use bleach, strong detergents or an abrasive brush or cloth to clean the seatbelt as it may damage and weaken the fabric.

Do not use steamers, brushes with hard bristles, hard sponges etc. to clean the seats as this can damage the seats.



WARNING

Never disassemble, modify or tamper with the seat belts and the seat belt system.

4.3. Child Restraint Systems

Child Restraint System Overview

The seat belts fitted in the vehicle are designed to fit and secure adults and older children. Small children and infants must be secured in a certified Child Restraint System (CRS) suitable for their age, height, and weight, and for the seat position of choice. Not all CRS are safe to use in all seat positions (more details are given further below).

Use in order of preference the outer seats of the second row, the central seat of the second seat row (for 7- seater variant), the third row seats and only in case of necessity the front passenger seat for mounting a CRS to accommodate small children and infants.



icon displayed on the Infotainment screen.

It is recommended that children under the age of 12 use a child restraint system in order to minimize the risk of injury in the event of an accident or sudden vehicle maneuver.

Most countries will have laws and regulations which stipulate children need to travel in an approved child restraint system. Please be aware of the requirements in the country where the vehicle is driven.

The front passenger seat is equipped with an Occupant Classification Sensor (OCS). When the OCS determines that an occupant is present, the front passenger airbag will remain ON. The OCS alternatively will turn the airbag OFF if a child restraint system is present. Notification is via the



Children 12 years and under should always be properly restrained in the rear seats of the vehicle.

In exceptional circumstance where a child restraint system seat must be secured in the front passenger seat, ensure the Passenger Airbag OFF



icon remains displayed at all times.

Avoid using a rear facing child restraint system on the front passenger seat, even if the front passenger airbag off icon is displayed.

Children who are resting against, or very close to an airbag when it inflates can be seriously injured or killed.

Do not modify the child restraint system in any way.

An incorrectly secured child restraint system may cause serious or fatal injury to the child in the event of an accident. Always follow the manufacturer's instructions to ensure the correct fitment of a child restraint system.

Do not use a child restraint system to secure more than one child.

Always ensure that a child is properly secured at all times. Failure to do so may result in the child being propelled from the child restraint system risking serious or fatal injuries.

Never hold an infant or child while riding in a vehicle.

Before installing a child restraint system, ensure that the seat backrest is in an upright position and locked.

Never leave children unattended in the vehicle, even if they are secured in a child restraint system.

A seat belt or a child restraint system may become hot when exposed to sunlight. Take care before fastening a child to avoid burns.

Laws and regulations that govern how children should be restrained in a vehicle are subject to change. Therefore, it is the driver's responsibility to be familiar and comply with regulations of the region where the vehicle is driven.

The image below identifies where child restraint systems can be fitted in the vehicle. Please read all the information in the following section to identify the correct type and orientation when securing children in the vehicle.

6 Seater (Captains Chair) Variant:



7 Seater Variant:



Types of Child Restraint Systems:

There are three types of child restraints systems suitable for fitment to your vehicle categorized by their orientation and/or design:


- Rear Facing
- Forward Facing
- Booster Seat

Each of these restraint types may be mounted using one of the following fixture methods:

- Belted-secured via the vehicle's seat belt
- ISOFIX / i-Size secured via anchor points built into the vehicle's seat frame.

A summary of both restraint and fixture methods is summarized below:

Rearward Facing Child Restraint System:

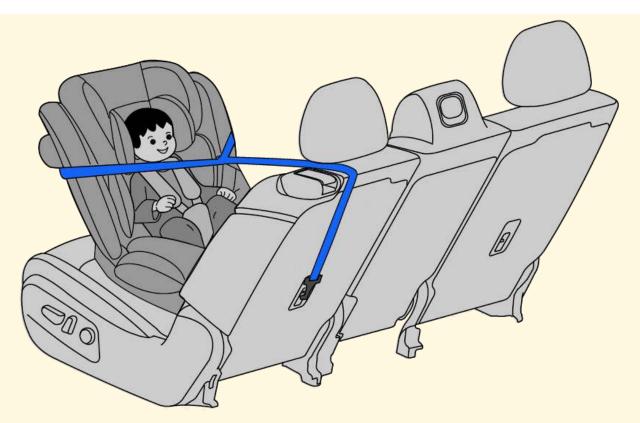

Rearward facing child restraint systems are designed so the child is facing towards the rear of the vehicle when driving. They give the best support and protection to a child's head and neck in the event of a collision. All children below the age of one should be seated in a rearward facing child restraint system. Continue to use a rearward-facing child restraint system for as long as a child fits within the height and weight limits permitted by the child restraint system manufacturer.

Forward Facing Child Restraint System:



Forward facing child restraint systems are designed so the child is facing towards the front of the vehicle when driving. In a forward-facing child restraint seat, a three point harness incorporated in child restraint system secures the child. Keep a child in a forward-facing child restraint system until they reach the height or weight limit permitted by the restraint system manufacturer. Once a child exceeds the recommended height and weight of a forward-facing child restraint system a booster seat is recommended.

Booster Seats Child Restraint System:



A booster seat child restraint system is used when a child exceeds the height or weight limit of a forward-facing child restraint system. Booster seats are designed to work in conjunction with the vehicle's existing seat belt system. A booster seat positions a child's body to ensure correct routing of a seat belt across the shoulder and lap areas, avoiding contact with the face, neck, and stomach.

A child should remain in a booster seat until they exceed restraint system recommendations.



WARNING

Always read and follow the instructions provided by the manufacturer of the Child Restraint System.

Failure to follow all warnings and instructions could increase the risk of the serious injury or death if an accident occurs.

Do not install a booster seat or a booster cushion with only the lap strap of the seat belt.

Do not install a booster seat or a booster cushion with a seat belt that is slack or twisted.

Do not put the safety seat belt under a child's arm or behind their back.

Do not use pillows, books or towels to boost a child's height.

Compatible Child Restraint Systems – Belted Type

Permissible options for fitting a belted Child Restraint System:

Weight and Age class	Seating position				
	Front passenger seat (Airbag OFF)	Front passenger seat (Airbag ON)	Second row outboard seats	Second row center seat (7 seat variant)	Third row seats
Group 0+: up to 13kg	U 1	х	U 2	U 3	U 3
Group I: 9 to 18kg	U 1	X	U 2	U 3	U 3
Group II: 15 to 25kg	U 1	x	U 2	U 3	U 3
Group III: 22 to 36kg	U 1	х	U 2	U 3	U 3

- X: No child restraint system permitted in this position
- U1: Suitable for universal category child restraint system approved for use in this group. Adjust the front passenger seat to it's maximum height and as far rearward as possible. If fitting a forward-facing child restraint system adjust the front seat back angle to its most upright position to ensure there is good contact and no gap between the seat back and the child restraint system.
- U2: Suitable for universal category child restraint system approved for use in this group. If a rear facing

- child restraint system is fitted move the front seat forwards or adjust its backrest to ensure no interference between the child restraint system and the front seat.
- U3: Suitable for universal category forward facing childrestraints approved for use in this group. Do not install a child restraint system equipped with a support leg in the second-row center seat position and third row seats.

Compatible Child Restraint Systems – i-Size Type / ISOFIX

Permissible options for installing an i-Size Child Restraint System:

	Front passenger seat	Second row outboard seats	Second row center seat (7 seat variant)	Third row seats
i-Size child-restraint systems	x	i-U	x	х

- i-U: Suitable for i-size "universal" child restraint systems forward and/or rearward facing. If a rear facing child restraint system is fitted move the front seat forwards or adjust its backrest to ensure no interference between the child restraint system and the front seat.
- X: Seating position not suitable for i-size 'universal' child restraint systems

Permissible options for installing an ISOFIXChild Restraint System:

Weight Class	Size Class	Fixture	Front passenger seat	Second row outboard seats	Second row center seat (7 seat variant)	Third row seats
Group 0: up to 10kg	Е	ISO/R1	Х	IL	Х	x
	E	ISO/R1	X	IL	X	х
Group 0+: up to 13kg	D	ISO/R2	X	IL	X	X
	С	ISO/R3	x	IL	X	X
Group I: 9 to 18kg	D	ISO/R2	х	IL	X	Х
	С	ISO/R3	x	IL	X	X
	В	ISO/F2	x	IL, IUF	X	X
	B1	ISO/F2X	x	IL, IUF	X	X
	А	ISO/F3	X	IL, IUF	X	X
Booster Seats	F	ISO/B2	X	i-B	X	X

- IL: Suitable for specific ISOFIX child restraint systems of the 'specific-vehicle', 'restricted' or 'semi-universal' categories. The ISOFIX restraint system must be approved for the specific vehicle type. If a rear facing child restraint system is fitted move the front seat forwards or adjust it's backrest to ensure no interference between the child restraint system and the front seat.
- IUF: Suitable for the universal category ISOFIX forwardfacing child restraint approved for use in this weight class.
- X: The ISOFIX position not suitable for ISOFIX child restraint systems in this weight group and/or this size class.
- i-B: Suitable for Booster type child restraint system.

ISOFIX Size Class and Seat Device Definition:

A - ISO/F3	Forward-facing child restraint system for children of maximum size in 9 to 18 kg (20 to 40 lbs) weight class.
B - ISO/F2	Forward-facing child restraint system for small children in 9 to 18 kg (20 to 40 lbs) weight class.
B1 - ISO/F2X	Forward-facing child restraint system for small children in 9 to 18 kg (20 to 40 lbs) weight class.
C - ISO/R3	Rear-facing child restraint system for children of maximum size in the weight class up to 18 kg (40 lbs).
D - ISO/R2	Rear-facing child restraint system for small children in the weight class up to 18 kg (40 lbs).
E - ISO/R1	Rear-facing child restraint system for young children in the weight class up to 13 kg (29 lbs).
F - ISO/B2	Forward Facing booster seat for children of maximum size in 9 to 18 kg (20 to 40 lbs) weight class.



NOTE

ISOFIX is an international standard that specifies the attachment points for child safety seats in passenger cars.

Selecting the Appropriate Child Restraint System

- •
- Select an appropriate child restraint system based on a child's height and weight.
- Check if the child restraint system to be installed is compatible with the vehicle type.
- Ensure that the seating location in the vehicle is suitable for your child restraint system.
- Select a child restraint system that fits the vehicle seating position where it will be used.



NOTE

Always read and follow the instructions for installation as specified by the child restraint system manufacturer. If in doubt, contact a professional to complete the installation process.

When the child restraint system is not in use, secure the seat with a seat belt or remove it from the vehicle.

A child restraint system which has been subjected to stress in an accident must be changed immediately before next use.

Recommended Child Restraint Systems

VinFast recommends the following child restraint systems:

Mass Group Categories	Manufacturer	Model
Group 0+	Britax	Britax RömerDualfix Pro
Group I	Britax	Britax RömerDualfix Pro
Group II	Britax	Römer KIDFIX SL
Group III	Graco	Graco Booster Basic


Region Specific Regulations

ECE-R44 Weight Groups:

Group 0	Infants from 0 - 10kg (birth to 9 months)
Group 0+	Infants from 0 - 13kg (birth to 18 months)
Group I	Infants / toddlers until 9 - 18kg (9 months to 4 years)
Group II	Children from 15 - 25kg (4 to 7 years)
Group III	Children from 22 - 36 kg (6 to 12 years)

ECE R-129 Height Groups:

45 - 75 cm	Birth to approx. 12 months
45 - 75 cm	Birth to approx. 4 years
61 - 105 cm	4 months to 4 years
76 - 105 cm	15 months to 4 years
100 - 135 cm	4 years to 8 years
100 - 150 cm	4 years to 12 years

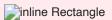

CAUTION

Please read and follow the installation instructions carefully when installing a Child Restraint System. If in doubt, contact a professional to complete the installation process.

Child Restraint Installation Locations

Prior to fitment of a child restraint system to the vehicle it is critical to ensure the following:

- Select an appropriate child restraint system based on a child's height and weight.
- Check if the child restraint system to be installed is compatible with the vehicle type.
- Ensure that the seating location in the vehicle is suitable for your child restraint system.
- Select a child restraint system that fits the vehicle seating position where it will be used.


For more detail on child restraint systems and their suitability for both your child and vehicle See > Child Restraint Systems > Child Restraint Overview.

Front Passenger Seat Fitment



Ensure Front Passenger Airbag is turned OFF when a CRS is fitted to the front passenger seat. See > Airbags > Operation and Occupant Detection for more details.

Refer to the following label located on the sun visors:

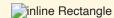

With the front passenger airbag suppressed, both forward facing and rear facing child restraint system may be fitted on the front passenger seat.

The following instructions must be followed when fitting a child restraint system on the front passenger seat:

- 1. Position the child restraint system on the front passenger seat ensuring its base is pressed firmly against the seat back.
- 2. Avoid any gap between the child restraint system and passenger seat back by adjusting the seat back vertical position.
- 3. Position the base of the passenger seat as far rearward as possible.
- 4. For a child restraint system in groups 2 and 3, make sure the guide fitting attached to the child restraint system headrest is positioned in front of or level with the seat belt D-ring attached to the vehicle body (B-pillar).
- 5. Check that the belt routing through the guide is free of kinks and not bent over the edge of the guide fitting.
- 6. If using a rear facing child restraint system with support leg, extend the leg as instructed by the child restraint system manufacturer.

Second Row and Third Row Passenger Seat Fitment

A child restraint system may be fitted to both the second row and third row seats depending on fixing type. Refer to the child restraint system overview to determine suitability of seat type in each rear seat location.

See > Child Restraint Systems > Child Restraint Overview.

Second Row Outboard - Belted Type

- 1. Fully extend the seat belt to its maximum length to engage the automatic locking retractor (ALR).
- 2. Buckle the seat belt around the child restraint seat in accordance with the child seat manufacturer's instructions.
 - inline Rectangle
- 3. Allow the seat belt to retract and remove all slack in the belt by pushing the child restraint seat into the vehicle's seat.
 - inline Rectangle
- 4. If the child restraint seat is equipped with a top tether, attach it to the anchor point located at the rear of the back seat. See top tether section below.





CAUTION

When fitting a rearward facing child restraint system in the second row outboard seat, move the front seat forwards or adjust it's backrest to ensure no interference between the child restraint system and the front seat. Adjust the second row seats in the similar manner if fitting child seats in the third row seats.

Second Row Outboard Fitment - ISOFIX / i-Size Type



The vehicle has been provided with ISOFIX anchors, which allows compatible child restraint systems to be attached directly to the second row seat structure, rather than using a seatbelt. ISOFIX metal arms on the child restraint attach and lock onto a U-shaped steel bar at the rear of the seat cushion. The ISOFIX anchor points can be identified by ISOFIX markings




found on both second row outboard seats.

- 1. Extend the child restraint system latches onto the anchor bars until they click into place. Carefully read and follow the instructions provided by the child safety seat manufacturer.
- 2. Always test the safety seat before seating a child. This can be done by pulling the child restraint system away from the seat and moving it from side to side. It is critical that both latches are fully locked in position.

The following is an example of a rear facing ISOFIX attached child restraint system.

inline Rectangle

Second Row Center Fitment (7 - Seater Variant) and Third Row Fitment-Belted Type

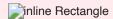

Children can occupy the second and third row center passenger seat in a forward facing position only, secured using a belted child restraint system.



NOTE

The rear seats are the safest location for a child to travel.

The second row center seat position and third row seats do not have ISOFIX / i-Size anchor points.

Support Leg (if equipped)



If your Child Restraint System is equipped with a support leg, ensure that it is fully extended and secured to the floor of the vehicle. Support legs can only be used in the second row outboard passenger seat locations. Follow installation instructions as described by the CRS manufacturer.



WARNING

When using a child restraint with a support leg, be sure that it rests firmly on the floor.

Top Tether Straps and Anchor Points

Anchor Points

The top tether anchors are located at the back of the second row seats of the vehicle.

Second row seats:



Single Tether Straps

• For Single Tether Straps - Route the tether strap around the outboard side of the headrest and attach it to the tether anchor at the back of the seat.

Second row:



Dual Tether Straps

• For Dual Tether Straps - Route the tether straps provided with the child restraint system on either side of the headrest and attach to the tether anchor at the back of the seat.



NOTE

There are no top tether anchor points at the back of the third row seats.

Never route the top tether strap over the top of the headrests.

Please check the table in the child restraint system description. ISOFIX child restraint systems of universal category positions are marked in the table by IUF. Route, attach, and tighten the top tether according to your child restraint instructions.



WARNING

Please follow the instructions provided by the child restraint system manufacturer to ensure the child is seated safely and securely.

Adjust the seat harness for every child for each vehicle journey.

Make sure that the tether strap does not have any slack or twist.

Always inspect the seat belts, child restraint system belts and tether straps for damage and wear.

Never attach any equipment, harnesses or other items to the anchor points in the vehicle.

Do not use a Forward Facing child restraint system until the child is over 9kg (20 lbs).

The tether straps must be attached to only the tether anchor point and nowhere else. Tighten the tether strap according to the instructions provided by the manufacturer.

Never attach two child restraint systems to one anchor point as it may be incapable of securing both seats in an accident.

Before installing a child restraint system, be sure to confirm that the seat back is fully upright and securely locked into place. Otherwise, in an accident, serious injury or death could result.

Never use a child safety seat that has been involved in an accident. Have the seat inspected or replaced as described in the child safety seat manufacturer's instructions.

Do not use seat belt extenders on a seat belt that is being used to install a child safety seat or booster seat.

Do not hold babies or infants on a passenger's lap. All children must be securely restrained in the vehicle using a child restraint system.

Never leave children unattended inside the vehicle.

4.4. Airbags

Airbags

The vehicle is equipped Supplemental Restraint System (SRS) airbags and lap/shoulder seat belts for the driver and

all vehicle passengers. The airbags are designed to provide maximum protection in conjunction with fastened seat belts. All occupants must wear seat belts at all times to minimize the risk of serious injury or death in an event of a vehicle collision.



NOTE

Airbags by design may not necessarily deploy following every vehicle collision. A correctly fastened seatbelt maybe the only restraint system protecting the occupant in such cases.

Airbag Locations



inline Rectangle	Drivers and Passenger Airbags
inline Rectangle	Front Seat Side Airbags (Left & Right)
inline Rectangle	Curtain Airbags
inline Rectangle	Rear Seat Side Airbags (Left & Right)
inline Rectangle	Front Seat Middle Airbag (if available)
6	Knee Airbag (if available)

How Airbags work

(shows the operational status of airbags).

The supplement restraint system constantly monitors multiple vehicle sensor inputs to determine the severity of a vehicle collision and which airbags, if any, should deploy. An airbag will inflate rapidly with force when activated accompanied by a loud noise. After the deployment of the

The airbag system consists of:

- · Airbag modules.
- · Occupant Classification System (OCS).
- · Crash sensors, monitoring system and airbag indicator



airbags it is common for a smoke or powder like discharge to be present inside the vehicle. The inflated airbag, along with properly fastened seat belts, limits occupant motion and reduces the risk of injury through contact with vehicle interior components. It is possible that airbags may not deploy as a result of minor or underbody collisions or impacts with narrow objects. There can be significant superficial damage to the vehicle without resulting in airbag deployment and conversely, relatively small structural damage can trigger the airbags to deploy. Therefore, the external appearance of the vehicle after a collision is not indicative of whether or not the front airbags should have inflated.



NOTE

When an airbag is deployed, powder like dust particles may be released into the vehicle cabin. This is not an indication of a vehicle fire. The fine dust may cause skin or eye irritation and could cause breathing difficulties. To avoid such effects leave the vehicle when safe to do so if able or alternatively open windows or doors. It is advisable to wash your hands and face with a mild soap and water to reduce effects.

Passenger Front Airbag Status

The status of the passenger front airbag displays at the top left corner of the Infotainment screen. There will be an indicator



when the front passenger Airbag is ON, and icon



will be displayed if the front passenger airbag is deactivated.



NOTE

The front passenger airbag is automatically controlled by Occupant Detection Sensor fitted to the vehicle's front passenger seat. The airbag cannot be manually deactivated.



It is important for all vehicle occupants to wear a correctly fitted seatbelt at all times even when an airbag system is provided. Failing to wear a seatbelt can cause serious injury or death.

Do not sit unnecessarily close to any airbag deployment zone. The driver should maintain a recommended distance from the steering wheel while still maintaining control of the vehicle.

Do not place objects, stickers or mount equipment/accessories on or near the airbag deployment zones. Failure to follow these instructions may increase the risk of injury or death in the event of an accident.

To ensure that the airbag system will operate correctly, never place your feet on the dashboard, outside the window, or on seat surfaces.

Various components of the airbag system are located throughout the vehicle. Incorrect work or repairs could damage the airbag system components. As a result, in the event of an accident, the airbags may deploy incorrectly or won't deploy altogether, causing serious or fatal injuries.

The airbag system is only able to provide protection during a single collision. In the event of a subsequent collision, the airbag system will not redeploy. Once an airbag deploys contact an authorized VinFast Service Center to have the vehicle appropriately repaired.

Use of unauthorized accessory seat covers could prevent airbag deployment and increase risk of injury in an accident.

Do not lean your head on the door. You could risk getting injured from the deployment of airbags from the side of the seat back.

All passengers need to sit upright, centered in on the seat cushion with a seatbelt correctly fastened, legs extended with feet on the floor. Failure to do so could result in serious injury upon airbag deployment.

Modifying the vehicle may affect the functioning of the airbag system. Contact a VinFast Service Center prior to performing any modifications to your vehicle. Any unauthorized modifications to the vehicle may cause serious damage to critical systems and endanger occupant's lives.

If the front passenger airbag is not deactivating either when a child restraint system is fitted or the seat is unoccupied there may be a fault with the Occupant Detection system. If you suspect incorrect operation of the occupant detection system, do not use the front passenger seat and contact VinFast service immediately. Failing to follow this warning may cause serious injury or death of the occupant.

All children of age 12 and under are recommended to occupy the rear seats only. Failing to follow this warning may cause serious injury or death.

It is not recommended to install a child restraint system to the front passenger seat even if legally permitted. If however a child restraint system must be fitted in this location, ensure the front passenger airbag OFF icon



is present and remains illuminated at all times on the Infotainment screen. Fitment of a child restraint system in the front passenger seat with an active airbag can cause serious injury or death in an event of airbag deployment.

Types of Airbags

Front Airbags

The vehicle is fitted with both a driver and passenger front airbag. The driver's airbag is located in the center of the steering wheel and the passenger airbag is located in the

dashboard area. Both airbag deployment locations have AIRBAG identifiers.

How the Front Airbags are triggered:

The driver and front passenger airbags are designed to deploy during significant frontal collisions, minimizing the risk of injury to the head and shoulder region.



NOTE

The front airbags will not deploy during rear or side impact collisions. In such cases only the front seatbelt pre-tensioners will be activated.



Avoid leaning against the door or the console area while vehicle is in motion.

Make sure that nothing is in between the passenger and airbag deployment area as it may interfere with airbag deployment.

The airbags are part of the supplementary restraint system and are designed to accompany the seatbelt in protecting the occupants from injury in the upper body. The airbags inflate rapidly so maintaining a proper seating position is of utmost importance to prevent incurring injury once an airbag deploys.

Side Airbags

The vehicle is fitted with side airbags to protect both front and rear seated passengers. The side airbags are located on the outermost side of each front and rear seat backrest with four in total. These airbags protect the occupants in case of a side impact or rollover event. The side airbag deployment zones are marked with an AIRBAG label.



NOTE

Pre-tensioners in the seat belt may be activated in an event of an accident and are designed to further restrict the motion of the occupant.

How the Side Airbags are triggered:

In the event of a side impact the supplement restraint system may deploy the vehicle side airbags. Due to the small distance between the passenger and the door, the side airbags will inflate rapidly. Side airbags are designed to reduce the risks of injuries to the head and upper body.



NOTE

Airbags may not be deployed in the event of a rear end collision. Both front seatbelt pre-tensioners however will be activated.

Safety belts and the vehicle airbag system will provide protection only when occupants are correctly seated.



WARNING

Keep objects clear of airbag deployment zones or near the side door glass as it may cause a serious injury or death when airbags deploy.

Do not bang, kick or hammer the side of the vehicle when the vehicle is on. Such actions may cause side airbags to deploy.

Curtain Airbags

The vehicle is equipped with two curtain airbags mounted in the roof headliners above the doors. Curtain airbags are marked with an AIRBAG label, located on the door pillar. They are designed to protect passengers in case of severe side impacts,

vehicle roll-overs or offset frontal crashes.

How the Curtain Airbags are triggered:

When the airbag sensors detect a severe side collision or vehicle roll over the curtain airbags will be triggered.

The curtain airbags help to reduce the risk of injury to the head and neck area of the passenger.



WARNING

Avoid attaching any object near the area which covers the deployment zone of the curtain airbags.

Passengers must be seated close to the back of their seat with a correctly fastened seat belt to obtain the best protection from the curtain airbag.

Never try to open or repair any components of the side curtain air bag system. If necessary, have the system serviced by a professional workshop.



CAUTION

If a severe side impact collision occurs the curtain airbags will deploy even if there are no passengers seated.

After an Airbag deployment, the HV battery of the vehicle will be automatically disconnected.

Knee Airbags

The vehicle may equipped with two knee airbags, one each for the driver and front passenger. The airbags are located below the steering wheel and in the lower part of the dashboard respectively. The knee airbag is designed to provide additional protection to the driver and front passenger's knees and lower body during a collision.

How the Knee Airbags are triggered:

When the airbag sensors detect a collision, the knee airbag may activate according to the severity of the crash.

Knee airbags and the front airbags deploy simultaneously.

The front airbag performance is enhanced by the addition of the knee airbags which limit the forward motion of the front seat passenger by restricting leg movement.

Knee airbags help to reduce impact forces sustained by the lower leg and abdomen region through controlling lower body movement. To ensure optimal performance of the airbag system a correct seating position is critical. Always fasten your seat belt correctly and keep a safe distance between the dashboard and your seated position. See > Seats > Correct and Incorrect Seating Positions.



WARNING

Always make sure that the knee airbag can inflate without interference. Objects between you and the airbag can increase the risk of injury in an accident by interfering with the way the airbag deploys.

Front Seat Middle Airbag

The vehicle may equipped with one front seat middle airbag which is mounted on the inboard side of the driver's seat. It is designed to create a soft barrier between the driver and front passenger during severe side collisions and reduce the risk of head collisions.

How the Front Seat Middle Airbag is triggered:

The supplement restraint system will use numerous vehicle sensors to determine the severity of a vehicle collision and whether the front seat middle airbag should deploy.



WARNING

Avoid keeping objects over the airbag, this can cause serious injury or death when the airbags deploy.

Operation & Occupant Detection

Airbag Warning Indicator

The airbag warning indicator is located on the top left-hand corner of the Car Control Area section of the Infotainment screen. The airbag warning indicator will illuminate for a few seconds during vehicle startup, then turn off. During a malfunction with the vehicle airbag system however, the warning indicator light



will remain on or will constantly flash. It is recommended that you immediately contact a VinFast Service Center when this occurs to have your vehicle inspected.

The following situations can cause the airbag warning indicator to illuminate:

- Faulty Airbag sensor(s)
- · Airbag battery out of power
- Defective Airbag coil
- Airbag module malfunction
- · Faulty seat belt latch

Occupant Detection Status

Passenger Airbag Suppression for Child Restraint System (CRS)

The vehicle is fitted with an Occupant Classification sensor in the front passenger seat which can automatically detect and distinguish between an adult or child occupying the seat and will adjust the airbag status and deployment accordingly. If an adult occupies the seat the passenger airbag will be On, if a child or child restraint system occupies the seat the passenger airbag may be disabled and turn Off.

Please follow the recommendations to ensure correct occupant detection:

- Sit in an upright position in the seat with shoulders and back against the seat back and legs extended in front with feet on the floor. See > Seats > Correct & Incorrect Seating Positions
- · Fasten the seatbelt.
- Remain seated correctly at all times.

The following situations can cause an inaccurate Occupant detection status:

- · Placing large or heavy items on the front passenger seat.
- Placing powered electrical devices which may interfere with the front passenger seat sensor.
- · Incorrectly fitting a CRS system.
- Items located under the seat or wedged between the cushion and seat back.
- · Any unauthorized accessories fitted to the seat.



NOTE

See > Child Restraint Systems Overview for child seats safety.

It is recommended that all children 12 years and under must be seated in the rear seats of the vehicle.



If the front passenger seat airbag status is not turning On or Off as expected when the seat is occupied, do not allow any passengers to occupy the seat until it has been inspected and rectified by an authorized VinFast Service Center.

Do not modify the front seat in any way, to ensure accuracy of the occupant detection system.

If it is legal in your region to have a child seated on the front passenger seat, ensure the passenger airbag is not active. Otherwise it could cause serious injury or death in the event of an accident when deployed.

It is the drivers responsibility to ensure the passenger airbag status is Off if a child is occupying the front seat.

The status of the passenger front airbag displays at the top left corner of the Infotainment screen. There will be an indicator



when the front passenger Airbag is ON, and icon




will be displayed if the front passenger airbag is deactivated.

Warning label:

A warning label is located on the inner side of the passenger side sun visor regarding the Passenger Airbag and the dangers involved when used in conjunction with a child restraint system mounted in the front passenger seat during an airbag deployment.



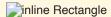

WARNING

Never use a rearward facing child restraint on a seat protected by an active Airbag as death or serious injury to the child could occur.

Never place a rear facing child restraint in the front passenger seat, unless the passenger-side air bag is deactivated. An inflating passenger side air bag could impact the rear facing child restraint and cause death or serious injury.

When children are seated in the rear outboard seats of a vehicle equipped with side and curtain air bags, be sure to install the child restraint system as far away from the door side as possible, and securely lock the child restraint system in position. Inflation of side and curtain air bags could cause serious injury or death to an infant or child.

Airbag Operation

Safe Seating position

See > Correct and Incorrect Seating positions.

Airbag inflation conditions:

The vehicle is equipped with accelerometers and sensors that in the event of an accident occurring calculate the impact on the vehicle and determine whether an airbag would be deployed. Other factors also related to density and stiffness of the impacted vehicle or objects maybe considered.

Airbags inflate when the following situations occur:



 Front airbags typically inflate in a frontal collision by detecting sufficient impact intensity of the front collision or impact sensors.

inline Rectangle

Sinline Rectangle

inline Rectangle

 Side Airbags activate depending on the severity of an impact to the side of the vehicle as detected by the side collision sensor.





CAUTION

Airbags can be deployed if bumps or objects on unimproved roads or sidewalks severely impact the vehicle chassis.

Airbag non-inflation conditions:

Airbags may not be deployed in certain situations even if vehicle damage occurs.

Airbags may not inflate when the following situations occur:

- In certain low-speed collisions the airbags may be deemed unnecessary to provide additional protection beyond the
 use of seat belts.
- When the impact of the collision is concentrated in a small area of the vehicle and there is no additional benefit if airbags were to be deployed.
- Front air bags may not inflate in a rear end collision as occupants will be moved backward by the force of the impact.
- Front airbags will not inflate in rollover accidents as front airbag deployment will not provide additional passenger protection.

5. Advanced Driver Assistance Systems (ADAS)

5.1. Cruise Control

Adaptive Cruise Control

Adaptive Cruise Control (ACC) is an advanced driver assistance system that automatically adjusts vehicle speed to maintain a safe following distance to other vehicles or road users ahead. The system uses a combination of radar and forward-facing camera to maintain a safe and comfortable distance to vehicles ahead and can even stop and start the vehicle in congested traffic through control of the brake and throttle. ACC will maintain a user selectable safe distance from forward vehicle or maintain a chosen set speed, whichever is lower.

inline Rectangle

Objects that Adaptive Cruise Control can detect:

- Cars
- Trucks
- Motorbikes
- Buses
- Vans
- · Camper Vans

Adaptive Cruise Control Operation

ACC Controls Overview:

inline Rectangle	Resume and Cancel button
inline Rectangle	Speed increase button
inline Rectangle	Gap increase button
inline Rectangle	ACC Set
inline Rectangle	Speed decrease button
inline Rectangle	Gap decrease button

To turn on Adaptive Cruise Control:



• When ACC activated: Set speed will display with blue color and the leading vehicle will be highlighted (if

• To turn on ACC, users can press on ACC button on the steering wheel.

detected).



NOTE

You can activate the Adaptive Cruise Control system when vehicle speed is greater than 20 km/h (12.42 mph) and lower than 150km/h (93 mph).

To Resume ACC to a previous SET speed:

inline Rectangle

button on the steering wheel controls.

To adjust ACC speed:

inline Rectangle

inline Rectangle

- · Press the RES
- To increase the set speed, press the SPD+ button
- To decrease the set speed, press the SPD- button

inline Rectangle

NOTE

You can increase or decrease the speed in larger increments by pressing and holding the speed buttons

inline Rectangle

or

inline Rectangle

To adjust the gap to the vehicle ahead:

inline Rectangle

inline Rectangle

- To increase the gap, press the GAP+ button
- To decrease the gap, press the GAP- button

inline Rectangle

NOTE

Vehicle gap will default to the largest setting after vehicle restart.

The ACC system will be canceled by:

inline Rectangle

button on the steering wheel controls.

- · Pressing the Brake pedal.
- When the vehicle speed is > 150km/h (93 mph).

ACC Stop & Go Operation

Pressing the cancel CAN

During Stop & Go operation, if the vehicle has stopped due to detecting stationary traffic ahead the driver must manually resume ACC when stopped for 3 seconds or more. If the stop is under 3 seconds the system will automatically resume operation.

Additional considerations:

- If the vehicle ahead is stationary the ACC system may hold the vehicle for up to 5 minutes. The driver can still resume ACC at any time.
- The driver must press the throttle pedal or Resume button in order to reactivate ACC if the holding time is between 3 seconds and 5 minutes.
- If the vehicle is required to hold for more than 5 minutes
 the electronic parking brake will automatically apply and
 the driver will need to release the parking brake or press
 the throttle to release it. Once the parking brake has
 been released, ACC can be reactivated by pressing the
 RES or ACC buttons on the steering wheel controls.



CAUTION

If the front camera or radar is obscured the ACC Stop & Go function will not be available.

Due to the limitations induced by environmental conditions the front radar or camera may not be able to detect stationary objects when traveling above 60km/h (37 mph).

The driver must alway monitor vehicle behaviour and road ahead when ACC is active and be prepared to take full control of the vehicle at anytime. When ACC is activated the driver is still required to provide all steering control.



NOTE

Adaptive Cruise Control can be used in combination with Speed Limit Control Function. See > <u>Cruise Control > Intelligent Speed Adaptation.</u>

Adaptive Cruise Control Modes

Follow Mode:

When Follow Mode is active, the ACC system will detect a leading vehicle with a speed lower than the ACC set speed.

In follow mode, ACC will adjust the vehicle speed according to the relative distance and relative speed of the detected leading vehicle. If another vehicle happens to cut in front and reduce this distance, ACC will apply brakes to slow the vehicle speed and reestablish a safe following distance.

ACC will also adjust the following distance or gap to the vehicle in front based on changes to the driver's preferred gap setting.

Corner Limit Mode:

Corner Limit Mode limits vehicle acceleration in a corner based on detected lateral acceleration, yaw rate and driving speed to ensure vehicle traction and stability through a bend.

Overtaking Mode:

When following a leading vehicle, ACC may detect that the driver wishes to overtake the vehicle in front when the turn indicator is selected. Once detected ACC will then accelerate and allow the gap to the vehicle in front to momentarily decrease. This allows for a quick and safe overtaking maneuver and the set gap setting and vehicle speed will be restored once overtaking is complete.




Overtaking mode will operate only when suitable conditions are met. Always check vehicle lane markings and road conditions ahead prior to overtaking.

The driver is always responsible for vehicle speed and the distance to other vehicles ahead.

Always pay attention to the traffic around you even when adaptive cruise control is enabled.

Do not use Adaptive Cruise Control in following situations:

- · In urban areas.
- Roads with multiple successive bends
- When the road surface is in poor condition
- In bad weather (such as ice, fog, gravel, heavy rain)
- · On expressway exits
- · In construction zones
- Roads with steep slopes over 15%
- While towing (if available)

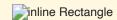

CAUTION

Always ensure that the front camera and radar are in good condition and clear of debris.

Adaptive Cruise Control will not apply the brake if the throttle is depressed. Applying the throttle pedal when ACC is engaged will override speed and distance control, may surpass regulatory speed limits, and may eliminate a safe distance to road users ahead.

Adaptive Cruise Control may not detect pedestrians, animals, bicycles etc that cross the vehicle's path.

The function of the radar sensors and camera can be impacted by reflective objects and surfaces such as guard rails, the entrance to a tunnel, heavy rain or ice.



WARNING

Always pay attention to the traffic conditions around you and if necessary depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Always drive according to the posted speed limit or environmental conditions of the road.

ACC may not adapt to complex, unexpected or sudden driving situations. Always be ready to take control of the vehicle in such situations.

Always be aware of the set speed and vehicle distance gap.

The vehicle speed may increase/decrease when travelling on a slope.

Always be ready to take control of the vehicle if a vehicle suddenly cuts into the vehicle's lane.

It is not recommended to use or activate this feature when towing anything such as trailer, recreational vehicles, etc. Failure to comply may result in property damage, serious injury or death.

Intelligent Speed Adaptation

If available, Intelligent Speed Adaptation (ISA) is a driver assistance feature that prevents a vehicle exceeding a detected speed limit and helps to reduce driver workload.

When the system is activated in combination with Adaptive Cruise Control or Highway Assist, Intelligent Speed

Adaptation automatically limits the vehicle set-speed to match the detected speed limit.

The driver must always ensure they monitor all posted speed limits and be prepared to adjust vehicle speed at any time. As a driver assistance system, the function will only support the driver in adjusting vehicle speed based on what is detected. The driver always remains responsible for ensuring the vehicle does not exceed the legal speed limit or road conditions.



NOTE

This function can be used in combination with Highway Assist and Adaptive Cruise Control. It is not a standalone feature.

Traffic Sign Recognition (TSR) must be ON in order to enable Intelligent Speed Adaptation (ISA).

For optimal performance of Traffic Sign Recognition, Speed Limit Warning (SLW), and Intelligent Speed Adaptation (ISA), especially in regions mandating intelligent speed assistance systems both GPS and Internet connectivity are required.

Note that if there is a loss of GPS and/or Internet connection, this may degrade the performance of these key functionalities or temporarily disable TSR, SLW, and ISA.

TSR, SLW, and ISA may not be available in all regions/markets. For detailed information on availability and coverage zones, please contact a VinFast dealership.

ISA may not work if the absolute delta (between TSR the speed limit value and the driver's set speed) is more than 50 km/h

To activate/deactivate Intelligent Speed Adaptation:





button on the steering wheel. The set speed icon will be shown on the touchscreen and Head Up Display with a market-specific traffic sign indicating that ISA is now active.

 Whenever a new speed limit value is detected, short press the ISA button to adapt the set speed to the new speed limit.

- To activate/deactivate the Intelligent Speed Adaptation system, press the ISA
- A white fill set speed icon will be shown when the set speed is identical to the detected speed limit.

System Malfunctions

 A malfunction warning will be triggered when a failure is detected in the ISA system or with other related ADAS systems and will be shown on the Infotainment screen to notify the driver.

in	line	Rect	anale	

CAUTION

Always make sure that all cameras, sensors and radars are clean and in working condition.



Do not rely on the Intelligent Speed Adaptation feature to control vehicle speed.

The Intelligent Speed Adaptation relies on speed limit information from the Traffic Sign Recognition system. The Traffic Sign Recognition system may not detect posted speed signs in poor weather, if signs are poorly posted or covered. The system will also be impacted when the front camera is blocked by dirt, snow, or ice; if they are in poor condition; or due to sun glare.

Always set the vehicle speed to the speed limit specific to the road, street, highway/motorway, etc. of your country.

Intelligent Speed Adaptation is a driving assist system, the driver has full responsibility to maintain the speed and control of the vehicle at all times.

Always keep an eye on the road for vehicles or objects that may suddenly appear in front of you. If necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Always be aware of the set speed.

The vehicle speed may increase/decrease when travelling on a slope.

Traffic Sign Recognition

If available, The Traffic Sign Recognition System (TSR) assists the driver by notifying them of the current posted speed limit and other traffic signs. Traffic signs may be displayed to the driver via the Touchscreen and the Head Up Display.

In addition, the system may also detect other non-speed related traffic signs. An example of these may include:

- · Bicycle paths
- Expressways
- Tunnels
- Slippery roads
- · Pedestrian crossings.

Traffic sign icons can be displayed on Car Control Area and Head Up Display. For more information, see > <u>Car Control Area Overview</u> and <u>Head Up Display</u>.

How Traffic Sign Recognition Works

Traffic Sign Recognition uses a camera mounted on the front windscreen and recognition software to detect traffic signs on the road ahead. The system then displays this information on the touchscreen and/or Head Up Display in front of the driver. Speed Limits may also be sourced from ISA map data (region specific). When Adaptive Cruise Control is active and the Intelligent Speed Adaptation button is pressed, the vehicle's speed will be automatically adjusted as per the detected speed sign and the user configured speed offset value currently set. For more information see > Cruise Control > Intelligent Speed Adaption.

Some examples of traffic signs the system may recognize:

Traffic Sign	Display
Speed Limit	inline Rectangle
No Entry	inline Rectangle
Residential Zone	inline Rectangle
Highway Zone	inline Rectangle
Town Zone	inline Rectangle
End of Town Zone	inline Rectangle
Express Way	inline Rectangle
Bicycle Way	inline Rectangle

inline Rectangle

NOTE

Traffic Signs shown above are for reference only. The vehicle will detect and show traffic signs on the touchscreen based on the region of operation.

Traffic Signs may not be the same for all regions.

Traffic Sign Recognition System Limitations

TSR system performance may be impacted in the following conditions:

- Poor visibility due to snow, fog or heavy rain.
- · Galare from oncoming traffic or the sun.
- Travel at high speeds.
- If the camera's visual field is covered; e.g. dirt or stickers.
- If the traffic signs are completely or partially covered.
- If traffic signs do not conform to the standard format.
- If traffic signs are damaged or bent.
- If traffic signs are displayed on sign holders with electronic signs.
- If the traffic signs or the roadways have changed and the navigation data is no longer up-to-date.

To Activate/Deactivate Traffic Sign Recognition:

1. Tap App Library

inline Rectangle

on the touchscreen.

2. Tap Driver Aids

inline Rectangle

> Driving Assistance

inline Rectangle

> Speed.

3. Go to Traffic sign recognition. Tap **On/OFF** on the toggle button.



WARNING

Vehicle speed and safety always remains the responsibility of the driver. Always pay attention and observe traffic signs while driving.

Under certain circumstances, traffic sign recognition may not detect traffic signs correctly or detect them at all. As a result, the system may not display the correct speed limit.



CAUTION

The speed limit sign displayed in Car Control Area / Head Up Display is based on the units used (mph or km/h) in the country where the vehicle is being operated. This may differ from the unit of speed displayed on the vehicle's speedometer.



NOTE

Traffic Sign Recognition is ON by default.

The Traffic Sign Recognition system only displays the traffic sign icons on the Infotainment screen and Head Up Display (if equipped). It will not adjust vehicle speed. Please activate Intelligent Speed Adaption to enable this functionality.

For optimal performance of Traffic Sign Recognition, Speed Limit Warning (SLW), and Intelligent Speed Adaptation (ISA), especially in regions mandating intelligent speed assistance systems like the European Union, both GPS and Internet connectivity are required.

Note that if there is a loss of GPS and/or Internet connection, this may degrade the performance of these key functionalities or temporarily disable TSR, SLW, and ISA.

TSR, SLW, and ISA may not be available in all regions/markets. For detailed information on availability and coverage zones, please contact a VinFast dealership.

5.2. Driving Aids

Highway Assist

If available, Highway Assist is a driver assistance function that supports the driver during highway driving and

congested traffic conditions (traffic jam) supporting a safe and comfortable journey. Highway Assist adjusts the vehicle speed to match the flow of the traffic. It also adjusts the steering to keep the vehicle inside its lane boundaries.



NOTE

Highway Assist is designed to be used on highways and highway-like roads (roadways separated by constructional means) and it is the responsibility of the driver to use this function in appropriate road conditions.

Drivers are required to keep their hands on the steering wheel at all times while this feature is active.

This feature can be used in combination with Intelligent Speed Adaptation.

The driver must supervise the system under all conditions and is always ultimately responsible for control of the vehicle.

The function is available when the following conditions are met:

- · Adaptive Cruise Control (ACC) conditions are fulfilled.
- Vehicle speed is greater than 60 km/h (37 mph) and less than 150 km/h (93 mph).
- Two-lane markings and the leading vehicle are detected
- Lane width must be within the range of 2.6m and 4.3m.
- · The gear position must not be in reverse.
- · Driver hands-on conditions are satisfied.



Keep your hands on the steering wheel at all times when driving.

Highway Assist should be turned off when towing a trailer (if available) or another vehicle.

The Highway Assist function is designed to assist the driver in operating the vehicle and is not a fully autonomous driving system. Whenever a driver uses an assistive technology, he or she should always check to ensure conditions are suitable and if necessary, take appropriate measures to adjust vehicle speed or direction.

Ensure the road ahead is observed at all times and traffic laws followed.

In no event will the vehicle manufacturer be responsible for a driver's actions that cause traffic violations or accidents.

The vehicle may drift to one side or may depart from the driving lane when it is driven at high speed or on a curve.

It is not recommended to use or activate this feature when towing anything such as a trailer, recreational vehicles, etc. Failure to comply may result in property damage, serious injury or death. For more information on trailer towing

Highway Assist Features

Highway Assist consists of three main components:

- Adaptive Cruise Control See > Cruise Control > Adaptive Cruise Control.
- Lane Centering Control (if available)- Assists in keeping the vehicle centered in it's lane by applying small corrective steering inputs.
- Auto Lane Change Assist (if available)- Detail later in this section.

When Highway Assist is active the Traffic Jam Assist feature will also operate when the vehicle comes to a complete stop. Traffic Jam Assist is an extension of Adaptive Cruise control and is described later in this section.

Highway Assist Operation

To activate Highway Assist



1. Press the Highway Assist button present on the steering wheel



2. After activation, the Highway Assist icon will display in blue color



Preconditions for activating Highway Assist are:

- Speed is equal or greater than 60 km/h (37 mph) and less than 150 km/h (93 mph).
- Both lane markings on either side of the vehicle's current lane should be detected.
- Highway Assist must be in standby mode. The Highway Assist icon will display in grey



To adjust gap:

When a vehicle ahead passes in front of your vehicle or a slower vehicle is detected ahead the vehicle speed will be adjusted to maintain the current gap setting. To adjust the gap setting:

• To increase the gap, press the GAP+ button

inline Rectangle


· To decrease the gap, press the GAP- button



To adjust speed:

If you have switched the system on, you can set or change the set speed using the speed buttons present on the steering wheel.

• To increase the set speed, press the SPD+ button

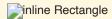

· To decrease the set speed, press the SPD- button



inline Rectangle

NOTE

Long pressing of the speed increase/decrease button will rapidly increase or decrease the set speed.

Highway Assist Deactivation

If preconditions are not met, Highway Assist may either be deactivated or revert to degraded mode (Adaptive Cruise Control only). An appropriate notification will be displayed in Car Control Area when Highway Assist changes modes or is deactivated.

Highway Assist can also be deactivated at any time by:

- 1. Pressing the brake pedal.
- 2. Press the Cancel button on the steering wheel.

Highway Assist may revert to degraded mode when:

- · Lane markings are not detected OR
- · Direct sunlight may interfere with the front camera

Once conditions permit, Highway Assist will automatically revert to full functionality and will be indicated by the blue Highway Assist icon on Car Control Area



WARNING

When Highway Assist reverts to degraded mode the Highway Assist icon will turn Gray



. Adaptive Cruise Control will now be active without steering wheel intervention.

When Highway Assist reverts to degraded mode the driver must take full control of the steering wheel.

Auto Lane Change Assist (if available)

Auto Lane Changing Assist (ALCA) is a driver assistance feature that supports drivers perform a safe lane change maneuver. ALCA adjusts the steering wheel angle to move the vehicle to the adjacent lane after a request is received from the driver. If

there is an object detected next to the vehicle in the lane that the driver wants to move into, the vehicle will wait or adjust its speed until the object has passed or passes before it changes lanes.



WARNING

Fast moving vehicles approaching from behind the vehicle may not be detected when initiating an auto lane change manoever. Always check your surroundings prior to using this feature.

The driver must supervise the system under all conditions and must be available to take over control of the vehicle at any time.

Overtaking restrictions (traffic sign or solid lane) are not used as an activation criterion by the system. The driver is responsible to not activate the system when circumstances do not allow for overtaking.

It is not recommended to use or activate this feature when towing anything such as a trailer, recreational vehicles, etc. Failure to comply may result in property damage, serious injury or death. For more information on trailer towing.



NOTE

Prior to ALCA activation, HWA must be active. The blue HWA icon with gray arrows on both side



indicates that ALCA is turned on tn the settings but not yet satisfies the conditions to be available.

After a lane change is completed by ALCA, HWA shall be reactivated automatically to keep the vehicle centered in it's new lane.

The function operates from 60 -150 kph (38 - 93 mph).

ALCA will only function when there is sufficient space for the vehicle to move into. If an object is blocking the target lane for more than a few seconds, the function will be canceled.

To enable/disable Auto Lane Change Assist settings:

1. Once Highway Assist blue Icon is displayed, press and hold Highway assist button to enable ACLA. Grey arrows icon will be shown



2. Press and hold Highway Assist button again to disable ALCA.

To Request an Auto Lane Change

1. When all preconditions are met the blue arrows icon



will appear in Car Control Area.

- 2. Initiate a permanent left/right turn indicator.
- 3. The arrow will display in blue in the direction of the turn signal.
- 4. The system will then search for a gap in the lane in the specified direction.
- 5. A message will pop-up on screen when the lane change is in progress.

Auto lane change deactivation:

If any of the following conditions are satisfied, auto lane change will be canceled:

- A system or sensor malfunction is detected.
- The lane change function is closed by the driver.

- The target lane is occupied.
- The target lane is not suitable, wide enough or visible.
- · Lane curvature and lane line type are not satisfied.
- · The lane change request is terminated (turn signal off).
- The driver provides a steering input.
- · The driver presses the brake pedal.
- · Driver presses the accelerator pedal.
- The driver over-steers the vehicle.
- The driver over-steers the vehicle.
- · HWA is deactivated.
- Driver turn indicator in Opposite direction when lane change is already start.

A warning message will be shown in Car Control Area when deactivated.



WARNING

Drivers must use their own judgment in assessing whether traffic conditions are suitable to use Auto Lane Change Assist.

Due to system limitations Auto Lane Change Assist may not be able to react to all traffic situations. Always drive according to current traffic conditions.

Monitor traffic conditions and vehicle surroundings closely and take action when needed.

Remain attentive during the lane change maneuver with hands on the steering wheel. If needed apply steering or brake input depending on traffic conditions.

This function may not function properly on roads where there are pedestrians or cyclists, such as at intersections or crosswalks. Drive safely and stay alert at all times.

Traffic Jam Assist

Traffic Jam Assist (TJA) is an extension of Adaptive Cruise Control (ACC) and Lane Centering Control that automatically controls vehicle speed and lane position based on traffic conditions ahead. The system helps alleviate some of the fatigue associated with driving in slow moving traffic that is constantly stopping and starting. Traffic Jam Assist uses both camera and radar along with steering wheel input to track a vehicle ahead and adjust both throttle and brake inputs to maintain a safe distance. The lane centering feature also ensures the vehicle remains safely in the center of its lane while maneuvering through congested highways and traffic jams.

Traffic Jam Assist works automatically whenever Adaptive Cruise Control is enabled and vehicle speed is < 60 km/h (37 mph).



NOTE

If Traffic Jam Assist brings the vehicle to a complete stop for more than 3 seconds the driver is required to either press RES/CAN on the steering wheel controls OR press the accelerator pedal to resume Traffic Jam Assist operation.

If the vehicle remains stationary for longer than 5 mins TJA will be deactivated and the Electric Park Brake applied.



WARNING

Stay alert and prepare to take control of the car if the TJA system is deactivated.

Be sure to keep your hands on the steering wheel when you are using the TJA system.

It is the driver's responsibility to always be aware of his or her surroundings when the system is operating, and be ready to take control of the vehicle at any time.

The steering wheel should be free of any objects (e.g. steering wheel covers) that could interfere with the hand detection sensor.

Lane Assist Systems

Overview

Lane Assist systems are a group of Advanced Driver Assistance technologies which assist the driver in avoiding unintended lane departures and preventing potential collisions via steering intervention. Lane Assist consists of the following features:

- Lane Departure Warning (LDW)
- Lane Keep Assist (LKA)
- Emergency Lane Keeping (ELK) (If available)

Lane Departure Warning (LDW)

Lane Departure Warning (LDW) is a driver assistance system that warns drivers when their vehicle unintentionally drifts towards the lane markers by using a visual warning icon, a warning sound or haptic steering wheel feedback by vibrating the steering wheel. This feature does not actively apply steering intervention.

LDW will be active whenever any Lane Assist mode is enabled.

Lane Keep Assist (LKA)

Lane Keep Assist (LKA) is a driver assistance system that actively supports the driver in maintaining the vehicle within its current lane. When the system detects the vehicle unintentionally drifting towards either lane marker or road edge it adjusts the vehicle path by corrective steering.

LKA will be active whenever **Warning & Steer** Mode is enabled.

Emergency Lane Keep

If available, Emergency Lane Keep (ELK) is a driver assistance system that avoids or lessens the severity of accidents by automatically applying a steering correction

when a vehicle is about to drift beyond a solid lane marking, the edge of the road or into oncoming or overtaking traffic in an adjacent lane.

ELK recognizes lane markings, road edges, and vehicles traveling in the same or opposite direction in the adjacent lane and controls the steering wheel to prevent the vehicle from drifting or colliding with other vehicles in the adjacent lane.

ELK will be active whenever **Emergency Lane Keeping** Mode is enabled.

How Lane Assist Works

The lane keeping assist system works by using a camera mounted on the windshield that collects information about traffic conditions ahead including:

- · Types of lane markings.
- Distance from the vehicle to road markings or road edges.
- · Curvature of the road.
- · Proximity to nearby vehicles.

Based on these inputs Lane Assist will alert or actively provide steering intervention to correct the vehicle path.

Lane Assist Operation

Lane Assist has several modes of operation that can be selected in the Driver Assistance Page. Depending on which mode is selected one or more of the Lane Assist features will be activated.

The system will be automatically activated when the vehicle speed is between **60-150 km/h (37 - 93 mph)**.

Lane Assist Modes

The level of Lane Assist intervention can be configured in Collision Avoidance Settings. There are four Lane Assistance modes with driver feedback as follows:

Lane Assist Mode	Lane Markers Indication	Audible Warning	Haptic Steering Warning	Steering Intervention
OFF	Yes	No	No	No
Warning	Yes	Yes	Yes	No
Warning & Steer	Yes	Yes	No	Yes
Emergency Lane Keeping	Yes	Yes	No	Yes

To change Lane Assist Modes:

inline Rectangle

on the Infotainment screen.

inline Rectangle

- > Driving Assistance
 - **inline** Rectangle
- > Lane.

- 1. Tap Library
- 2. Tap Driver Aids
- Lane Assist Mode, Responsiveness levels and Chime settings can be adjusted through lane assist settings.



NOTE

Lane Assist will default ON at every ignition cycle depend on Market or User Profile selection. Please contact VinFast for more information on applicable for the market.

Lane Assist Displays and Warnings:

Depending on readiness and the presence and type of lane markings in front of the vehicle the Lane Assist system will

project various indicators and alerts on the Infotainment Display. The following lane detection states may be shown:

Lane Assist Activation States		
inline Rectangle	inline Rectangle	inline Rectangle
No Lane Detected	Lane(s) Detected,	Lane(s) Detected, Warning on Left

The presence and color of lane markings for both the left and right side of the vehicle be displayed accordingly:

- No lane detected No lines
 - **inline** Rectangle

- Lane(s) Detected Lane Keeping Assist (LKA) and Emergency Lane Keeping (ELK) settings are disabled: Display white lane markings
- Lane(s) Detected Lane Keeping Assist (LKA) or Emergency Lane Keeping (ELK) settings are enabled: Display a grey icon

- Lane(s) Detected Warning/Alert/Intervention:
- Lane Departure Warning (LDW) Active: A yellow line, an alert sound, and vibration feedback will appear
 - inline Rectangle
- Emergency Lane Keeping Assist (ELK) Active: A notification message will be displayed on the central
 - inline Rectangle

How to Deactivate Lane Assist:

The Lane Assist system is deactivated by the following conditions:

- The speed of the vehicle is less than 10 km/h (6 mph).
- The speed of the vehicle is over 150km/h (93 mph).
- Turning the Lane Assist OFF in Driver Aids.
- The driver uses the turn indicator while changing lanes.
- · Lost detection of lane marking.



on the Infotainment screen.



- > Driving Assistance
 - **inline** Rectangle
- > I ane
- 3. In Lane Assist Mode choose OFF.

throughout the event.

 Lane Keeping Assist (LKA) Active: A single corrective steering adjustment with a mild intervention level will occur. This is indicated by a yellow icon

control screen along with a yellow icon

- Another active safety system intervenes (ABS anti-lock braking system, electronic control system ESC).
- Both lane boundaries are detected, and lane width is narrower than 2.45 m (96.45 in).
- Driver override (apply high steering wheel rotation).

Lane Assist can also be temporarily turned off for an ignition cycle by:

- 1. Tap **Library**
- 2. Tap Driver Aids



NOTE

A malfunction warning will be triggered when a failure is detected in the Lane Assist system and will be shown on the Infotainment screen to notify the driver.



Do not rely on the Lane Assist System to keep the vehicle within it's lane or avoid collisions with other vehicles.

Always pay attention to the road and maintain a proper vehicle position within the lane otherwise vehicle damage, injury, or death could occur.

The functions of Lane Assist have limitations. Always stay on course using the steering wheel and drive with care.

The Lane Assist system does not continuously steer the vehicle.

The Lane Assist system may not detect lane markings under poor weather or visibility conditions. This can occur if the camera is blocked by dirt, snow ice or sun glare.

Turn the system off when driving on slippery roads. Otherwise this could cause loss of control of the vehicle and a crash.

Lane Assist will not warn the driver if the trailer (if available) towed by the vehicle crosses into an adjacent lane. Serious injury or property damage may occur if the trailer moves into another lane. Always monitor the trailer position while towing and make sure that it is within the same lane as the tow vehicle.

It is not recommended to use or activate this feature when towing anything such as a trailer, recreational vehicles, etc. Failure to comply may result in property damage, serious injury or death.

Driver Monitoring System

If available, The Driver Monitoring System (DMS) is a driver assistance system that monitors the state of the driver, to detect drowsiness or a lack of attention to the road ahead. DMS uses a vision system combined with information from the steering system to detect driver inattention.

The system can detect drowsiness or tiredness in a driver based on a combination of the following:

- Eye Tracking: Duration of eye blink, eye movements, eye closure frequency.
- · Head tracking: head position, head movements.
- · Facial behavior: yawning, squinting.
- · Vehicle's speed: The system can trigger a higher warning based on vehicle speed or erratic variation in vehicle speed.
- Time of day: The system can trigger a higher warning when driving outside normal daylight hours.
- · Lane departure warning frequency

The system can detect signs of distraction if the Driver

- has been driving for more than 3 hours. The DMS system will be able to detect user's face changes over time.
- · looks away from the road for too long.
- · is using a phone while driving.



NOTE

The Driver Monitoring System is automatically activated when the vehicle speed is more than 10 km/h (6.2 mph).

If it available, The Driver Monitor System will default ON at every ignition cycle depend on Market or User Profile selection. Please contact VinFast for more information on applicable for the market.

Driver Monitoring Settings

The driver monitoring system Warning and Chimes can be temporarily turned OFF via the settings. To access Driver Monitoring System settings:

1. Tap App Library



on the Infotainment screen.

2. Tap Driver Aids



> Collision Avoidance



3. Use the toggle button to turn the warnings **ON/OFF** or to change warning settings.

The alert will be displayed on the infotainment touchscreen and head-up display together with haptic feedback and audible sound.

Driver Monitoring System Alert Types

DMS system will generate alerts if it:

- · Detects the driver is driving for a long time.
- · Detects driver drowsiness.
- Detects the driver's hands are off the steering wheel.
- · Detects the driver is using a phone while driving.
- · Detects the driver isn't looking at the road.



WARNING

Always drive carefully and do not rely completely on Driver Monitoring System.

Do not drive the vehicle if you feel tired. Always take a break in these situations to avoid the risk of vehicle accident, injury or death.

In some situations, the DMS may not be able to correctly identify the driver's state.

The DMS vision system may be impaired if the driver is wearing sunglasses or eyes are hidden behind the frame of the glasses.

In some situations, depending on the type of mask used, the DMS may not be able to correctly identify the driver's state.

The DMS system may not work if the driver monitoring camera or infrared light emitters are blocked.

5.3. Collision Warning Systems

Forward Collision Warning (FCW)

The Forward Collision Warning system alerts the driver if an imminent frontal collision is detected with objects such as vehicles, motorcycles, bicycles, or pedestrians. This feature does not actively intervene with braking or steering input.



and a warning message is displayed and a chime sounds.

The FCW system takes information from radar and/or cameras to calculate the distance of objects from the vehicle in real time.

Forward Collision Warning Stages

- Stage 1 FCW icon
- Stage 2 FCW icon



and a warning message is displayed and a louder and higher frequency chime will sound.



NOTE

If Automatic Emergency Braking (AEB) is OFF, Front Collision Warning will only issue Stage 1 Warnings.

Forward Collision Warning will default ON after each ignition cycle depend on Market or User Profile selection. Please contact VinFast for more information on applicable for the market.

Forward Collision Warning will be activated when the vehicle speed is in the range of 5 km/h-130 km/h (3 mph - 80 mph).

Front Collision Warning will not activate for stationary vehicles, moving or stationary motorbikes, and vulnerable road users (such as pedestrians, cyclists) when the vehicle speed exceeds 80 km/h (50 mph) due to limitations of the perception system.

To Activate/Deactivate the Forward Collision Warning system:

inline Rectangle

on the Infotainment screen.

inline Rectangle

> Collision Avoidance

inline Rectangle

3. Use the toggle button to turn **ON / OFF** the system.

1. Tap App Library

2. Tap Driver Aids

4. Change the sensitivity of system via the toggle button .



NOTE

The camera(s) and sensors associated with Forward Collision Warning are designed to monitor an approximate area of up to 160m (525 ft) in front of the vehicle driving path.

In some situations, the ability of the FCW system to detect objects may be limited:

- Objects located above the coverage area of the sensors and cameras, such as garage doors that are partially open, or objects that are hanging.
- · Low obstacles
- · Narrow objects, such as barrier chains, poles, or fences
- · Projecting objects, such as trailer draw bars
- · Objects with certain surfaces and structures, such as fabric.



CAUTION

FCW can issue unnecessary warnings when its function is impaired, e.g. if the radar sensor is dirty or its position has been changed. Always make sure all the sensors and cameras in the vehicle are clean before driving.

Do not stick objects, such as stickers, films, or protectors, near or in front of radar and cameras.



The area being monitored by Forward Collision Warning can be adversely affected by road and weather conditions. Use appropriate caution when driving.

Forward Collision Warning is designed only to provide visual and audible alerts. The system does not apply brakes or slow down the vehicle to avoid a collision. When seeing and/or hearing a warning it is the driver's responsibility to take immediate corrective action.

Forward Collision Warning may provide a warning in situations where the likelihood of collision may not exist. Do not depend completely on the system and always pay attention while driving to avoid any type of collision.

Intersection Assist

If available, Intersection Assist (IA) is a driver assistance system that warns the driver with visual and audible warnings when it is unsafe to enter an intersection due to a high collision probability with other vehicles or vulnerable road users. IA will also provide warnings when it is unsafe to attempt a left/right turn due to a high collision risk with traffic approaching in the same lane with no intention to stop.

Depending on the situation, a warning icon will appear on the left, right, or both sides of the Car Control Area display



- Intersection Assist will operate when vehicle speed is between 5 28 km/h (3 17 mph).
- Intersection Assist can be enabled via a Collision Avoidance setting.

To On/Off Intersection Assist:

- 1. Tap App Library
 - inline Rectangle

on the Infotainment screen.

2. Tap Driver Aids



> Collision Avoidance



3. Tap the toggle button to turn ON / OFF.

Automatic Emergency Braking

Automatic Emergency Braking (AEB) can automatically detect an imminent forward or rearward collision and activate the vehicle's braking system to decelerate the vehicle and avoid or mitigate a collision. Autonomous Emergency Braking has the ability to detect other vehicles, motorcycles and vulnerable road users such as pedestrians and cyclists.

If the system senses an impending collision the vehicle will automatically apply the brakes and show a visual warning.

The AEB consist of the following types based on the target area:

- · Front Automatic Emergency Braking
- Rear Automatic Emergency Braking

F-AEB utilizes the data collected from the front camera, the front and two corner radars to detect the distance and the speed of various types of objects on the vehicle's forwarding trajectory such as other vehicles, motorcycles, pedestrians, cyclists.

R-AEB utilizes the data collected from the rear camera and multiple ultrasonic sensors to detect the distance and the speed of various types of objects on the vehicle's reversing trajectory such as pedestrians, roadblocks, pillars.

Front Automatic Emergency Braking (F-AEB) (if equpped)

Front Automatic Emergency Braking (F-AEB) is designed to reduce the risk of frontal collisions. In the event that the system detects a delay or absence of deliberate reaction of the driver to an impending collision, it may automatically apply a strong brake to reduce the severity of the collision.

F-AEB is active when the vehicle is traveling at the speed between 5 km/h and 130 km/h (3.1 mph - 80.7 mph).

Drivers must not rely solely on the performance of the F-AEB feature as it may malfunction or not perform as expected.

Drivers are responsible for remaining vigilant and in control of the vehicle at all times. failure to do so may lead to damage, serious injury, harm or death.

In situations where both the driver and F-AEB initiate braking deceleration, the maximum braking deceleration from both the driver and F-AEB will be selected and applied.



NOTE

The effectiveness of F-AEB may be reduced at the low speed range less than 10 km/h (6.2 mph).

When F-AEB is turned OFF a telltale will be shown in the Car Control Area to inform the driver.

F-AEB is able to interrupt (stop) the emergency braking during its activation when:

- The driver intentionally presses the accelerator pedal to override the braking, or applies a rapid steering input to change the trajectory of the vehicle.
- · The collision risk is no longer impending.

The Front Automatic Emergency Braking (F-AEB) will not activate for stationary vehicles, moving or stationary motorbikes, and vulnerable road users (such as pedestrians, cyclists) when the vehicle speed exceeds 80 km/h (49.7 mph) due to limitations of the perception system.

Activating/Deactivating the F-AEB:

1. Tap Library



on the Infotainment screen.

2. Tap Driver Aids



- > Collision Avoidance .
- 3. Use toggle to turn On/Off front AEB.



NOTE

The toggle button to turn On/Off of the Front Automatic Emergency Braking is disabled if the vehicle speed exceeds 10 km/h (6 mph).



CẢNH BÁO

Drivers must not solely rely on the performance of F-AEB as the feature may malfunction and may not always perform as expected.

Performance may vary based on road conditions or other factors. even when it performs as expected, the feature may only reduce the severity of a collision.

Drivers are responsible for remaining vigilant and in control of the vehicle at all times. failure to do so may lead to damage, serious injury, harm or death.

Due to sensor limitation, the feature's performance may be degraded under specific conditions, including low light, rain, snowfall, and more.

F-AEB may not detect an impending collision and apply the brakes if another vehicle or object is partially in it's path, or if there is debris on the road. It is the driver's responsibility to drive safely and remain in control of the vehicle at all times.

F-AEB does not avoid or mitigate collisions from the side of the vehicle, always pay attention while driving.

Do NOT use F-AEB as a substitute for foot braking.

Do not use or activate this feature when towing anything such as trailer, recreational vehicles, etc. Failure to comply may result in property damage, serious injury or death.

Rear Automatic Emergency Braking (R-AEB) (if equipped)

Rear Automatic Emergency Braking (R-AEB) is designed to detect potential collisions while reversing. If the driver's prompt response to an imminent collision is not detected, the vehicle will automatically apply strong brakes to reduce the severity of a collision.

R-AEB is activated when reversing at the speed ranging from 2 km/h to 10 km/h. It utilizes ultrasonic sensors and parking cameras for detection.

The driver is advised not to rely solely on the performance of R-AEB but to remain attentive and in control of the surrounding environment while reversing. The system may not operate correctly under all conditions.

In situations where both the driver and R-AEB trigger braking deceleration, the maximum braking deceleration from both driver and R-AEB will be selected and applied.

There are situations in which the system might operate unexpectedly, even there are no pedestrians in the detection area:

- Three dimensional objects such as a pole, traffic cone, fence, or parked vehicle.
- Uneven road condition, gravel roads, rails, repairing road or fallen leave on the road.
- Objects reflected in a puddle or on a wet road surface.
- The shadows on the road.
- Reversing when outer rear-view mirror is in folding condition.
- Reversing toward the roadside or a bump on the road.
- · Reversing in incline/decline conditions.
- Vehicle height is extremely changed by the load, or after sales suspension toolkit.
- After sales toolkit such as backlit license plate, fog light, trim strip etc. is installed near the rear camera.
- The sensor orientation (cameras and ultrasonic sensor) have been changed due to collision or other impacts.



NOTE

R-AEB is designed to decelerate the vehicle when imminent collision detected during reversing at the speed greater than 2 km/h (1 mph) to 10 km/h (6.2 mph).

Activating/Deactivating the R-AEB:

1. Tap Library



on the Infotainment screen.

2. Tap Driver Aids



- > Collision Avoidance.
- 3. Use toggle to turn On/Off R-AEB.



NOTE

If vehicle speed is greater than 10 km/h (6.2 mph) the toggle button to turn OFF R-AEB in settings will be disabled.



WARNING

Drivers must not solely rely on the performance of R-AEB as the feature may malfunction and may not always perform as expected.

Performance may vary based on road conditions or other factors. Even when it performs as expected, the feature may only reduce the severity of a collision.

Drivers are responsible for remaining vigilant and in control of the vehicle at all times. Failure to do so may lead to damage, serious injury, harm, or death.

Due to sensors limitations, the performance of the feature may be degraded under specific conditions, such as low light, the direct strong light, light condition change suddenly, rain, snowfall, and more. Additionally, the material or shape of objects may affect the detection reliability of the ultrasonic sensor and braking performance.

R-AEB may not detect an impending collision and apply the brakes if another vehicle or object is partially in it's path, or if there is debris on the road. It is the driver's responsibility to drive safely and remain in control of the vehicle at all times.

R-AEB does not avoid or mitigate collisions from the side of the vehicle, always pay attention while driving.

Do NOT use R-AEB as a substitute for the foot braking.

Do not use or activate this feature when towing anything such as trailer, recreational vehicles, etc. Failure to comply may result in property damage, serious injury or death. For more information on trailer towing, see > Towing a trailer.

Automatic Emergency Brake Fault

A malfunction warning will be triggered when a failure is detected in the AEB system or with other related ADAS systems and will be shown on the Infotainment screen to notify the driver.



CAUTION

The front camera, ultrasonic sensors, surround view cameras and radars may become blocked by mud, rain, frost, or ice causing them to fail in detecting approaching objects. The driver should always ensure that sensors are clean before starting driving.

Do not attach any item such as sticker on the ultrasonic sensors and radars.

Blind Spot Detection

Blind Spot Detection (BSD) is a driver assistance system that monitors the adjacent lanes next to the vehicle and warns if an object is present in the driver's blind spot. It will warn for objects the driver cannot see and warn for objects that approach fast from behind. This feature does not actively intervene or provide steering input.

Using radar, Turn indicator and vehicle speed BSD detects objects in the blind spot and calculates the distance of these objects from the vehicle.

When a moving object is detected in the vehicle's blind spot, the LED blind spot detection lamp



will illuminate on the corresponding side mirror. In addition, if the driver attempts to change lane an audible chime will sound.

- The function will automatically activate as soon as vehicle speed is greater than 15 km/h (~9.3 mph).
- The function will be deactivated if the speed is lower than 10 km/h (~6.2 mph).



To activate Blind Spot Detection:

1. Tap Library



on the Infotainment screen.

2. Tap **Driver Aids**



- > Collision Avoidance.
- 3. Tap On under Blind Spot Detection via the toggle button.
- 4. Tap **On** via the Chime toggle button to Mute/Un-mute audio chimes.

To deactivate system:

• Tap **OFF** via the toggle button to deactivate the system.



NOTE

Blind Spot Detection will default ON at each ignition cycle depend on Market or User Profile selection. Please contact VinFast for more information on applicable for the market.

Conditions under which the BSD may not function correctly

BSD may not correctly detect vehicles and/or objects in the following conditions:

- Bad weather such as heavy rain, fog, snow etc.
- Ice or mud etc. attached to the rear bumper.

- Driving on a road surface that is wet due to rain, standing water, etc.
- There is a significant difference in speed between your vehicle and the vehicle that enters the detection area.
- A vehicle is in the detection area from a stop and remains in the detection area as your vehicle accelerates.
- Driving up or down consecutive steep inclines, such as hills or a dip in the road, etc.
- Multiple vehicles approaching with only a small gap between each vehicle.
- Vehicle lanes are wide, and the vehicle in the next lane is too far away from your vehicle.
- The vehicle that enters the detection area is traveling at about the same speed as your vehicle.
- There is a significant difference in height between your vehicle and the vehicle that enters the detection area.
- · Directly after the BSD main switch is set to ON.
- Towing a trailer.
- · Vehicles traveling in the opposite direction.

BSD may unnecessarily detect a vehicle and/or objects under the following conditions:

- Short distance between your vehicle and guardrails, walls, signs, parked vehicles and similar stationary objects.
- Short distance between your vehicle and a following vehicle.
- Vehicle lanes are narrow and a vehicle driving two lanes across from your vehicle enters the detection area.
- Items such as a bicycle carrier that are installed on the rear of the vehicle.

Warning timing may vary depending on the vehicle that is approaching.

System Malfunction Warnings

If a fault is detected with the BSD system or an associated ADAS system it will trigger an alert message on the Infotainment screen to alert the driver. If a malfunction alert is displayed some or all of the system functionality may be impacted.



The driver is fully responsible for changing lanes carefully and for checking if it is safe to do so.

Drivers must not solely rely on BSD as the feature may malfunction and may not always perform as expected.

The system may not provide alerts under all driving conditions, including when driving around tight curves.

The system also does not alert drivers to vehicles outside of the detection zones.

Performance may also vary based on other conditions or factors.

Drivers are responsible for remaining vigilant and in control of the vehicle at all times. Failure to do so may lead to damage, serious injury, harm or death.



CAUTION

The detection range may vary depending on the speed of the vehicle. Even if there is a vehicle in a blind spot zone, BSD may not activate a warning when passing at high speed.

The BSD sensors may become impaired by mud, rain, frost, ice or other factor. Performance may be subsequently affected and not alert the driver to vehicles in the lane on either side. Always keep sensors clean and remain vigilant at all time.

Warning timing may vary depending on the speed of the vehicle that is approaching.

Rear Cross Traffic Alert (RCTA)

Rear Cross Traffic Alert (RCTA) is a driver assistance system that warns drivers of an imminent collision from objects approaching from the rear of the vehicle whilst reversing. This feature does not actively intervene via steering input or braking but provides both audible and visual alerts.

RCTA uses radar sensors in the rear corners of the vehicle to detect moving objects that are approaching including the following:

- Cars
- Motorcycle
- Bicycles
- · Shopping Carts



CAUTION

The RCTA function will not generate warnings for stationary objects or objects that are not road users, e.g. light poles, garbage containers etc.

Pedestrians may or may not be detected based on size and/or clothing.

RCTA Operation

RCTA Visual and Audible Alerts

If the RCTA system detects an approaching object it will notify the driver by displaying an alert icon



on the reverse camera display. The alert icon will be shown in the direction of the approaching object.

If target objects are coming from multiple directions, multiple alert icons will be shown accordingly.

The RCTA Function generates 2 levels of warning according to the Time to Collision (TTC):

RCTA Alert Icon	Time to Collision	Audio Chime
ON - Solid inline Rectangle	Approximately 1.1 - 3 seconds	Slow Beep
ON - Flashing inline Rectangle	Approximately less than 1.1 seconds	Fast Beep

An audio chime will also sound with the frequency increasing based on time to collision. In addition, the Blind Spot Detection (BSD)



icon will flash in the vehicle side mirror closest to the oncoming object.

To deactivate Rear Cross Traffic Alert (RCTA)

1. Tap Library



on the Infotainment screen.

2. Tap Driver Aids



> Parking Assistance



3. Tap Off on toggle button below Rear Cross Traffic Alert.



NOTE

RCTA will default ON at each ignition cycle depend on Market or User Profile selection. Please contact VinFast for more information on applicable for the market.

Conditions under which the RCTA may not function correctly

RCTA may not detect correctly vehicles and/or objects in the following conditions:

- Bad weather such as heavy rain, fog, snow etc.
- Ice or mud etc. attached to the rear bumper.
- Driving on a road surface that is wet due to rain, standing water, etc.
- There is a significant difference in speed between your vehicle and the vehicle that enters the
 detection area.
- A vehicle is in the detection area from a stop and remains in the detection area as your vehicle accelerates.
- Driving up or down consecutive steep inclines, such as hills or a dip in the road, etc.
- Multiple vehicles approaching with only a small gap between each vehicle.
- Vehicle lanes are wide, and the vehicle in the next lane is too far away from your vehicle.
- The vehicle that enters the detection area is traveling at about the same speed as your vehicle.
- There is a significant difference in height between your vehicle and the vehicle that enters the
 detection area.
- · Directly after the BSD main switch is set to ON.
- Towing a trailer.
- Vehicles traveling in the opposite direction.

RCTA may unnecessarily detect a vehicle and/or objects under the following conditions:

- Short distance between your vehicle and guardrails, walls, signs, parked vehicles and similar stationary objects.
- Short distance between your vehicle and a following vehicle.
- Vehicle lanes are narrow and a vehicle driving two lanes across from your vehicle enters the detection area.
- Items such as a bicycle carrier that are installed on the rear of the vehicle.

Warning timing may vary depending on the vehicle that is approaching.

System Faults:

In the event of a RCTA fault a warning will be displayed on the Infotainment screen. Vehicle alert details can be viewed in the Service app.



CAUTION

The sensors may become impaired by mud, rain, frost or ice and fail to detect approaching objects. Always make sure all sensors and cameras in the vehicle are clean before driving.



Do not rely completely on RCTA to detect a potential collision, always check the surrounding area before reversing.

RCTA timing may vary depending on the speed of approaching vehicle.

Use the side mirrors and check surroundings for vehicles, motorcycles, bicycles or pedestrians that may be approaching the vehicle from the rear.

The system may not react if objects are approaching rapidly.

The rear cross-traffic assist will not provide alerts if your vehicle is parallel parked or if your vehicle is pulled too far into the parking space so that it is hidden by adjacent vehicles.

The RCTA chime may not be heard if the surrounding area is noisy.

Door Opening Warning

Door Opening Warning (DOW) (if available) is a driver assistance system that warns an occupant of an approaching road user prior to opening a vehicle door. The system assists occupants to safely exit a vehicle and prevent serious accidents associated with vehicle doors opening in front of oncoming traffic.

DOW uses radars in the rear bumpers to detect oncoming traffic. If an oncoming vehicle is detected occupants will be alerted via LEDs on the side mirrors. Additionally, ambient lighting will be used as a warning mechanism in combination with directional audible warnings for all people inside the vehicle.

The DOW Function detects and predicts the path of the following target objects:

- Cars
- Motorcycles
- Bicycles
- · Shopping carts



NOTE

The DOW Function will not generate warnings for stationary target objects and elements.

The DOW alert will persist as long as the target object fulfills the warning conditions.

Door Opening Warning Operation





When DOW is active the following will occur:

An



icon will be shown on the corresponding door side view mirror.

- If the impacted door is opened, this icon will start flashing and a chime will be heard.
- If the corresponding door is closed and an oncoming object is still detected then the mirror icon will remain and the flashing and chime will cease.

Door Opening Warning is also shown on the Infotainment screen

Type of warning	Display
Left side warning when door is closed	
Right side warning when door is closed	
Both side warning when door is closed	
Left side warning when door is opened	
Right side warning when door is opened	

Both side warning when door is opened



To Turn ON/OFF: the Door Opening Warning (DOW)

1. Tap Library



on the Infotainment screen.

2. Tap Driver Aids



> Collision Avoidance



3. Toggle Door Open Warning (DOW) OFF/ON.



NOTE

Door Opening Warning system is default ON at each ignition cycle depend on Market or User Profile selection. Please contact VinFast for more information on applicable for the market.

Conditions under which the RCTA may not function correctly

RCTA may not detect correctly vehicles and/or objects in the following conditions:

- Bad weather such as heavy rain, fog, snow etc.
- Ice or mud etc. attached to the rear bumper.
- Driving on a road surface that is wet due to rain, standing water, etc.
- There is a significant difference in speed between your vehicle and the vehicle that enters the
 detection area.
- A vehicle is in the detection area from a stop and remains in the detection area as your vehicle accelerates.
- Driving up or down consecutive steep inclines, such as hills or a dip in the road, etc.
- Multiple vehicles approaching with only a small gap between each vehicle.
- Vehicle lanes are wide, and the vehicle in the next lane is too far away from your vehicle.
- The vehicle that enters the detection area is traveling at about the same speed as your vehicle.
- There is a significant difference in height between your vehicle and the vehicle that enters the
 detection area.
- Directly after the BSD main switch is set to ON.
- Towing a trailer.

· Vehicles traveling in the opposite direction.

RCTA may unnecessarily detect a vehicle and/or objects under the following conditions:

- Short distance between your vehicle and guardrails, walls, signs, parked vehicles and similar stationary objects.
- Short distance between your vehicle and a following vehicle.
- Vehicle lanes are narrow and a vehicle driving two lanes across from your vehicle enters the detection area.
- Items such as a bicycle carrier that are installed on the rear of the vehicle.

Warning timing may vary depending on the vehicle that is approaching.

System Malfunctions

A malfunction warning will be triggered when a failure is detected in the DOW system or with other related ADAS systems and will be shown on the Infotainment screen to notify the driver.



CAUTION

The rear sensors may become blocked by mud, rain, frost or ice and fail to detect approaching objects. Always ensure sensors are clean before starting driving.



WARNING

Opening a door when an object is approaching may cause damage or personal injury. Always use the side mirrors and complete a head check to watch for vehicles, motorcycles, bicycles or pedestrians that may be approaching the vehicle.

Acoustic Vehicle Alerting System

Due to the almost silent operation of an EV vehicle, it is often difficult to hear an electric vehicle in motion. The Acoustic Vehicle Alerting System (AVAS) emits a warning sound to alert pedestrians to the presence of the vehicle. The system operates between 1 to 20 km/h (1 to 12 mph), for when the vehicle is traveling both forward and in reverse.



WARNING

Do not rely on the AVAS system to alert pedestrians of the vehicles presence. Always pay attention to the road and the proximity of pedestrians while driving.

AVAS is a warning system and cannot actively avoid collisions.

If the AVAS system is not functioning correctly contact VinFast Service to have the vehicle inspected.

5.4. Park Assist

Front & Rear Parking Assist

The Front & Rear Parking Assist system assists the driver when parking by alerting them to surrounding objects. The

system provides visual and audible alerts to inform and warn the driver. Ultrasonic sensors located on both the front and rear bumpers to identify surrounding obstacles.





NOTE

Ensure all park assist sensors are free from the build up of snow, ice, dirt or mud which may impact their operation. For details on cleaning the sensors, see Vehicle Cleaning New Cleaning > Radar, Sensor, Camera Care



CAUTION

Do not push, scratch or strike a sensor as this may cause damage.

Do not spray the sensor or its surrounding area directly with high pressure water.

Front Parking Assist

Front Parking Assist (FPA) is a driver assistance system that warns the driver of nearby objects (including the sidewalk) in front of the vehicle when parking.

Rear Parking Assist

Rear Parking Assist (RPA) is a driver assistance system that warns the driver of nearby objects (including the sidewalk) behind the vehicle when parking.

Park Assist operation

The parking assist system will automatically activate when reverse gear is engaged and vehicle speed is < 15 km/h. Colored bands will be shown at the front and rear of the Car Control Area vehicle indicating proximity to objects along with an audible warning.

Front obstacle detected	Rear obstacle detected
inline Rectangle	inline Rectangle

When the Parking Assist is ON:

- The system will automatically activate when the vehicle is shifted into reverse or the rear camera is turned on.
- In the case of decelerates, the system will automatically activate when the speed less than 10 km/h (6.2mph).
- In the case of acceleration, the system will operate within the speed range of 0 15 km/h (0-9.3 mph).

When the Parking Assist is OFF

• The system will activate when the user manually turns on the 360-degree camera or the rear camera.

To On/Off the Parking Assist:

1. Tap Library



on the Infotainment screen.

2. Tap Driver Aids



> Parking Assistance



3. Toggle Park Assist Off / On.

To turn ON/OFF Parking assist chime:

1. Tap Mute



when available on Car Control Area.



NOTE

Parking Assist chime Mute/Unmute button only displays when Parking Assist is activated

Park Assist Faults

Park Assist will display a warning message on the Infotainment screen as well as on the vehicle alerts page if it detects a fault.

If a Park Assist sensor faulted due to dirt or a blockage, clean the impacted sensor. For more details on cleaning sensors, see ≥ Vehicle Cleaning > Radar, Sensor, Camera Care.

There are situations in which the Parking Assist system might operate unexpectedly:

- Uneven road condition, gravel roads, rails, repairing road or fallen leave on the road.
- Driving in incline/decline conditions.
- · Driving in the flooded road.
- · After sales toolkit such as bumper protector etc. is installed in the bumpers.
- Driving in bad weather such as heavy rain, fog, snow or a sandstorm.
- Driving in the heavy traffic jam condition.
- Driving in strong wind are blowing, or beside a big car (truck, bus etc).
- The orientation ultrasonic sensor has been changed due to collision or other impacts.



CAUTION

Do not apply paint on sensors, it will effect on the performance of sensors.



The driver must always remain alert and in full control of the vehicle at all times including during parking maneuvers.

Park Assist may not detect potholes, trenches or drains which are below ground level.

Under certain circumstances, various reflective surfaces, objects or clothing may cause the system to fail to detect obstacles. Special attention has to be paid to low obstacles which can damage the lower part of the bumper.

Always check the surrounding area when reversing and using the rear parking assist system.

It is not recommended to use or activate Rear Parking Assist when towing anything such as trailer, recreational vehicles, etc. Failure to comply may result in property damage, serious injury or death.

Rear View Camera

The Rear View Camera is used to display the area behind the vehicle and to assist with reversing or parking maneuvers. The system uses a camera mounted above the rear license plate and projects an image on the Infotainment screen. See > Advanced Driver Assistance Systems (ADAS) > Park Assist > 360 Surround View Monitoring

How to Activate the Reverse Camera

- The Rear View Camera is automatically activated when reverse gear is selected.
- The Rear View Camera can also be activated manually by selecting the Camera



icon on the left side of the Car Control Area.

When reverse is selected parking assist is also activated and provides guidelines and audio feedback to assist when parking. For more info see > Park Assist

The dynamic guidelines show the driving path relative to the steering wheel position.

How to Deactivate the Reverse Camera

The Rear View Camera is automatically deactivated if the driver disengages reverse (R) gear or when vehicle speed is greater than 18 km/h in Drive (D). The driver can also deactivate the camera view manually by pressing (X) on the display.



Keep the rear view camera lenses clear as unclear lenses will impact vision and objects may not be detected leading to a collision.

Always check vehicle surroundings while using the rear view camera as cameras may not detect objects or barriers that can potentially cause damage or injury.

The camera(s) may not display children, pedestrians, cyclists, traffic, animals, or any other objects outside of the camera's field of view.


The distance of images displayed maybe different from actual.

Do not obscure the rear view camera by installing objects, such as a bumper sticker or a bumper guard, near the rear view camera.

360 Surround View Monitoring

The 360 Surround View Monitoring System uses multiple cameras along with graphical markings to assist the driver in low-speed parking maneuvers.

The system works in parallel with the Park Assist system and provides multiple viewing options from cameras mounted in the side mirrors, front and rear bumpers. Depending on the display mode some of these views are stitched together to provide a complete 360-degree view around the vehicle. Camera locations are shown below:

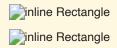



NOTE

To ensure optimum system performance please ensure each camera is free from dirt or obstruction.

Performance of the surround view monitor may be reduced due to heavy fog.



The driver has full responsibility for vehicle operation while using the surround view monitoring system.

Areas near the corners of the vehicle may be obscured from camera view, resulting in some surrounding objects not being detected.

Do not fold in the outside mirrors of the vehicle when using surround view monitoring. Doing so will limit the effectiveness of the vehicles side cameras and display performance.

Objects and obstacles above the cameras are not displayed.

Surround view monitoring is designed to be used on a flat surface. Roads with different heights such as curbs and speed bumps may look different on the display.

The camera visibility can be blocked due to trailer towing or any attachment to the vehicle.

Surround View Monitor Operation

When reverse gear is engaged, the system is activated automatically. A reverse camera view along with a top down 360-degree view will be shown by default.

The Surround View Monitoring system will also automatically activate when autonomous modes are enabled and the vehicle meets the activation conditions.

The Surround View Monitoring system can also be activated manually by pressing the camera button on Infotainment screen.

The system automatically switches off when reverse gear (R) is dissengaged, or the vehicle speed is more than 18 km/h (~11.18 mph) while in Drive gear (D)



WARNING

The camera system is limited to displaying surrounding images around the vehicle. Some obstacle outside of this will not be shown. Always check your surroundings and park with care.

The camera(s) may not display children, pedestrians, cyclists, crossing traffic, animals, or any other object outside of the cameras field of view.

Camera Display Modes using the ZF system

The Surround View Monitoring system offers several camera views and display modes. These views are selected by pressing the respective view on the left of the camera display window.



inline Rectangle	3D View
inline Rectangle	Front View
inline Rectangle	Left View
inline Rectangle	Right View
inline Rectangle	Rear View
inline Rectangle	Towing view (if available)
inline Rectangle	Exit

360 Degree View

Tap on the 360 icon



to view the vehicle in 360 Degree mode. This view provides perspective from outside the vehicle looking down. Rotate the view by touching the vehicle and swiping in any direction.

Return to default view by tapping



again.

Front Camera View

The front camera view provides vision from the front of the vehicle. In addition to the camera view, dynamic guidelines will be projected showing the intended path of the front wheels. The guidelines are also color coded indicating distance to any nearby obstacles.

Front Camera view can also be selected by tapping the Front Camera icon



Side Camera Views

The side camera views use cameras mounted in the side view mirrors to display an image projecting towards the front wheels. This view assists in parking close to gutters or other items that may potentially damage the vehicle wheels or tires. Side view is accessed by tapping either the left or right camera icons.

Rear Camera View

The rear view camera will automatically appear whenever reverse gear is selected. In addition, the rear camera view can also be selected by tapping the rear camera icon



. When activated the reverse camera will work simultaneously with the park assist system. In addition to the rear camera view static and dynamic guidelines will appear to assist guiding the driver during a parking maneuver. The guidelines are colored to indicate distance to an object.

The Rear Camera View is deactivated when the driver disengages reverse gear. The driver can also deactivate the camera view manually by tapping **(X)** on the display.

For more information See > Park Assist > Rear View Camera.

Top Down View:

Top down view shows a view from directly above the vehicle. This is a default view and is shown in conjunction with all of the other views. No static or dynamic guidelines shall be displayed in the top down image.



Top Down View is deactivated when the driver selects zoom mode.

Camera Settings:

1. Tap App Library



on the Infotainment screen.

2. Tap Driver Aids



> Driving Assistance



- > Camera.
- 3. Turn on or off the desired function.

Camera Display Modes using the VinAl system

The Surround View Monitoring system offers several camera views and display modes. These views are selected by pressing the respective view on the left of the camera display window

inline Rectangle



360 Degree View

Tap on the 360 icon



to view the vehicle in 360 Degree mode. This view provides perspective from outside the vehicle looking down. Rotate the view by touching the vehicle and swiping in any direction.

Return to default view by tapping

inline Rectangle

again.

Front Camera View

The front camera view provides vision from the front of the vehicle. In addition to the camera view, dynamic guidelines will be projected showing the intended path of the front wheels. The guidelines are also color-coded indicating distance to any nearby obstacles.

Front Camera view can also be selected by tapping the Front Camera icon

inline Rectangle

Ground View

The Ground View mode provides a wide-angle view from the front or rear of the vehicle. This view assists when parking near gutters or other objects that may damage the wheels or tires. Ground View mode can be selected by tapping the corresponding front/rear Ground View icon on the infotainment screen.

Wheel View

The Wheel View provides vision from the Left/Right wheel and also shows Top view of the vehicle. This view shows static or dynamic guidelines displayed in the Top view image. Wheel view can be selected by tapping the respective front/rear wheel view icon on the Infotainment screen.

Side Camera Views

The side camera views use cameras mounted in the side view mirrors to display an image projecting towards the front wheels. This view assists in parking close to gutters or other items that may potentially damage the vehicle wheels or tires. Side view is accessed by tapping either the left or right camera icons.

Rear Camera View

The rear-view camera will automatically appear whenever reverse gear is selected. In addition, the rear camera view can also be selected by tapping the rear camera icon



. When activated the reverse camera will work simultaneously with the park assist system. In addition to the rear camera view static and dynamic guidelines will appear to assist guiding the driver during a parking maneuver. The guidelines are colored to indicate distance to an object.

The Rear Camera View is deactivated when the driver disengages reverse gear. The driver can also deactivate the camera view manually by tapping **(X)** on the display.

For more information See > Park Assist > Rear View Camera.

Top Down View:

Top down view shows a view from directly above the vehicle. This is a default view and is shown in conjunction with all of the other views. No static or dynamic guidelines shall be displayed in the top down image.

inline Rectangle

Top Down View is deactivated when the driver selects zoom mode




Camera Settings:

1. Tap App Library



on the Infotainment screen.

2. Tap Driver Aids

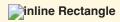

> Driving Assistance



- > Camera.
- 3. Turn on or off the desired function.

Or

1. Tap to Camera icon on Car Control Area



2. Tap to Setting icon



3. Turn on or off the desired function.

You can turn on or off the following features in the camera settings:

- Transparent Car Model
- Dynamic Guidance Line
- Obstacle Warning Overlay
- Automatic Bumper View Switch
- Automatic Curb View Switch

6. Driving

6.1. Starting & Shutting Down Vehicle

Starting the Vehicle

The vehicle is fitted with technology that enables keyless start/stop operation. A valid key fob must be present inside the vehicle in order to turn the vehicle ON.



CAUTION


Ensure the electric park brake is applied and the vehicle is in Park (P) before starting the vehicle.



NOTE

Metal objects and devices with electronic components, such as mobile phones, can interfere with the start/stop system.

To Start Driving the Vehicle:

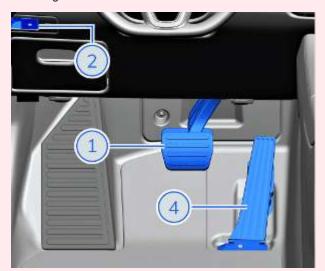



1. Press the brake pedal



- 2. **READY** will be displayed on the Infotainment screen indicating the vehicle is ON.
- 3. Disengage the Electric Parking Brake (EPB) via one of the following methods:
- Manually Press the EPB switch



OR,

- **Automatically** EPB will disengage automatically when the driver's foot is on the brake pedal, the driver's seat belt is fastened and gear is selected.
- 4. Select either Drive (D) or Reverse (R)



5. Press the Accelerator pedal



to start driving. When Creep mode is enabled, the vehicle will move slowly in the selected direction of travel without the need to apply the accelerator pedal.

To Power Off the Vehicle:





1. Press the brake pedal



until the vehicle has come to a complete stop.

2. Push the Park (P) button



3. After exiting and locking, the vehicle will automatically power off.



NOTE

After locking the vehicle it may be possible for the vehicle cooling fan or pump to still be heard for an extended period of time. This is normal vehicle operation and could be contributed by:

- the vehicle high voltage battery is charging the low voltage (12V) battery
- the vehicle is in the process of cooling the HV electric motor
- the vehicle is in the process of a FOTA software update

If this noise continues for an excessive period of time please contact VinFast Service Center to have the vehicle inspected.



Do not shift between Drive (D) and Reverse (R) or Park (P) when the vehicle is in motion.

Do not accelerate while engaging a gear.

Do not press down the accelerator pedal and brake pedal at the same time.

Ensure that all occupants fasten their seatbelt before starting the vehicle.

Vehicle Power Mode Information

The vehicle consists of three main power modes:

- OFF vehicle is powered OFF and no accessories or vehicle drive will be available.
- Accessory (ACC) accessory power mode is active allowing access to infotainment features on the Infotainment screen.
- ON (Ready) both accessory and vehicle drive power ON.

To Transition from OFF to ACC, one of the following scenarios needs to be met:

- Vehicle is unlocked via key fob, VinFast App, or mechanical key.
- Liftgate is unlocked via key fob, exterior button, or foot kick sensor.
- · Brake pedal is pressed.

To Transition from ACC to ON, one of the following scenarios needs to be met:

- Driver is present in the vehicle with a valid key fob.
- Brake pedal is pressed.
- Transmission gear in Park (P).

To Transition from ON to OFF, one of the following scenarios needs to be met:

- 10-minute timer has expired.
- Transmission gear position is in Park (P).
- Pet Mode and Camp mode are not active.
- · HV charging is not active.
- · LV battery charging is not active.
- Vehicle is locked via key fob, VinFast App or mechanical key.


To Transition from ACC to OFF, one of the following scenarios needs to be met:

- · 2-minute timer has expired.
- Transmission gear in Park (P).
- · HV charging is not active.
- · LV battery charging is not active.
- · Vehicle is locked via key fob, VinFast App or mechanical key.

Low Key Fob Battery

If the remote key fob battery is too low, the vehicle can still be started.

To start the vehicle:

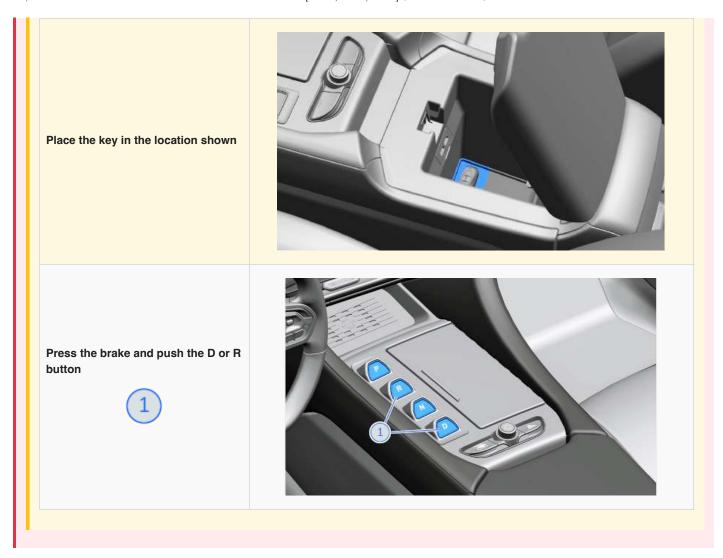

6.2. Drive Systems

Transmission Gear Selector

The vehicle Transmission Gear selector is used to engage different vehicle gear positions, which include Park (P),

Reverse (R), Neutral (N) and Drive (D).

The Transmission Gear Selector is located on the driver's side of the center console.



1	Park (P)
2	Reverse (R)
3	Neutral (N)
4	Drive (D)

To select a gear position:

- 1. Depress the brake pedal and ensure the vehicle is stationary or has come to a complete stop.
- 2. Press the desired gear button.
- 3. The selected gear button will illuminate once selected and be shown on the Infotainment screen.



Do not speed up while engaging a gear.

Do not press down the accelerator pedal and brake pedal at the same time.

Do not use the Park (P) position instead of the park brake.

Turn off the power when leaving the vehicle, apply the parking brake and remove the key.

Never leave the vehicle unattended while the power is on.



NOTE

If the vehicle is turned off in Neutral (N), Reverse (R) or Drive (D) gear positions, it will automatically shift to Park (P).

Neutral

If traffic and road conditions permit Neutral (N) may be selected while the vehicle is rolling. Neutral may also be used to allow the vehicle to be maneuvered in a workshop environment or to be moved onto a tow truck.



CAUTION

Shifting to Neutral will disable regenerative braking resulting in greater than normal brake pressure being required.

Shifting to Neutral should only be done while a driver is present to apply the vehicle brakes when necessary.

Drive Mode

The vehicle may have three driving modes which when selected can change the vehicle's throttle response and power delivery. Drive Modes can be changed via the Infotainment screen.

Available Driving modes include:

- ECO
- NORMAL
- SPORT

To select a drive mode:

- 1. Tap Car Mode on Infotainment screen.
- 2. Select the desired Drive Mode.
- 3. To exit drive mode, tap outside of the card.

ECO MODE	Slowest throttle response and low energy consumption.
NORMAL MODE	Medium throttle response and medium energy consumption
SPORT MODE	Quick throttle response and high energy consumption



NOTE

NORMAL and ECO mode have the same amount of Regenerative braking.

The selected drive mode icon is indicated on the top area of the status bar on the Infotainment screen



NOTE

NORMAL mode is the default mode. The maximum torque and maximum speed are the same in all three modes, only changing the vehicles throttle response and energy consumption.

Creep Mode

The creep mode is useful for driving at lower speeds in stop-and-go traffic or in parking lots. With this function active, the vehicle will move slowly in the selected direction of travel without the need to apply the accelerator pedal.

To activate/deactivate creep mode:

- 1. Tap Car Mode in the Car Control Area of the Infotainment screen.
- 2. Select the three-dot icon.
- 3. Toggle creep mode ON/OFF.



WARNING

Do not rely on creep mode to prevent your vehicle from rolling down a hill. Keep your foot firmly on the brake pedal if you wish to remain stationary or on the accelerator pedal if you wish to ascend a hill. Failure to do so may result in accident causing serious injury or death.



NOTE

When Creep mode is enabled:

Creep mode function is temporarily deactivated when ACC is canceled by using the brake pedal. Press accelerator pedal once to reactivate the creep mode.

The Creep mode feature continues to function when ACC is turned on and subsequently turned off using the CAN button on steering wheel.

Auto Gear P

When the function is activated, it allows the system to automatically switch from Drive (D) or Reverse (R) to Park Mode:

- When the vehicle has fully stopped and the door is opened, and both the brake pedal and the accelerator pedal are released. Or
- · While charging

To activate/deactivate creep mode:

- 1. Tap Car Mode in the Car Control Area of the Infotainment screen.
- 2. Select the three-dot icon.
- 3. Toggle Auto Gear P ON/OFF.



WARNING

Always ensure that the vehicle is securely parked before exiting.

Electric Parking Brake (EPB)

The Electric Parking Brake (EPB) is an electronically controlled parking brake that is designed to hold or stop the vehicle when parked. Additionally, it can be used as an emergency brake in case of an emergency.

When the EPB is active, the



icon is displayed on the Infotainment screen.



To engage the Electric Parking Brake:

The electric parking brake can be engaged by any of the following methods:

- Manually: Make sure the vehicle is in Park (P), then PULL the switch back.
- Automatic: Electric parking brake will get automatically engaged when Park (P) is selected.

To release the Electric Parking Brake:

The electric parking brake can be released by any of the following methods:

- Manually: PUSH the electric parking brake switch to release.
- Automatic: electric parking brake will be automatically released when the driver's foot is on the brake pedal, the driver's seat belt is fastened and when the driver engages Drive (D) or Reverse (R) gear.

To use the Electric Parking Brake in an Emergency:

The electric parking brake can be used in an emergency to stop the vehicle.

- PULL the electric parking brake switch back and hold it.
- The electric parking brake will slow down the vehicle until it is released.



Do not put any objects near electric park brake switch, it may interfere while activating the electric park brake.

Always make sure that the parking brake is applied and the vehicle is in Park (P) mode before exiting the vehicle.

Don't let anyone unfamiliar with the vehicle operate the EPB switch. An unintentional EPB release can result in serious injury.

Ensure that the EPB is only released when the driver is seated inside the vehicle and has depressed the brake pedal firmly.



CAUTION

Do not use the Electric park brake to stop the vehicle, except in an emergency. The brake system may get damaged if the electric park brake is used repeatedly to slow down or stop the vehicle.


Do not pull the switch aggressively, otherwise it may cause the switch to break.

6.3. Steering Wheel

Steering Wheel Adjustment

Prior to operating the vehicle, it is important to adjust the steering wheel to achieve a comfortable driving position. For

additional information regarding a correct seating position, See > Seats > Correct & Incorrect Seating Positions.

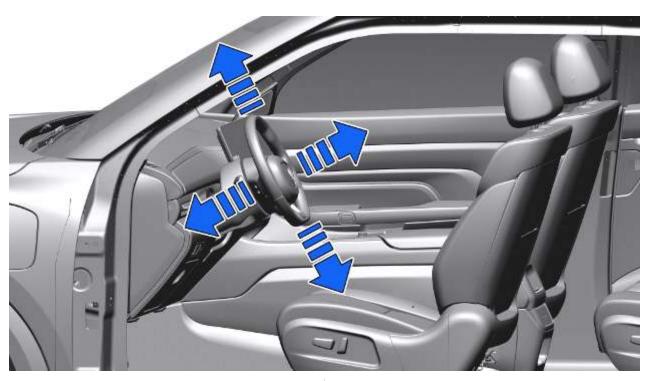

For an ideal steering position:

- The driver should maintain a distance of 13-25 cm (5-10 in) from the steering wheel.
- The driver's arms should be slightly bent (around 120 degrees) and the chest should not be closer than 30 cm (11.8 in) from the steering wheel.
- The driver should have a clear view of the area around the vehicle and of the head up display.
- The driver should always hold the steering wheel with both hands on the outer edges (9:00 and 3:00 position) when driving.

Electric Adjustable Steering Column (if equipped)

To adjust the steering wheel position:



Do not make steering wheel adjustments while driving.

1. Tap the icon



to open the ergonomic control.

2. Tap Steering Adjust



in the Car Control Area area on the touchscreen

- 3. The Steering Wheel Adjustment card will open and show the steering wheel adjustment prompts .
- 4. To adjust steering tilt or height, press the plus [+] or minus [-] button.
- 5. To move the steering wheel forward or back, press the left [<] or right [>] button.
- 6. Close the Steering Wheel Adjustment card.
- 7. Tap Save to confirm steering wheel adjustments. The adjustments will be saved to the active profile. For more user profile settings, See> <u>User Profiles</u>.

Each user of the vehicle can save their preferred steering wheel position to their profile.

Manual Adjustable Steering Column (if equipped)



Manual adjustable steering column allows for up/down



and fore-aft



steering wheel adjustments.

To adjust the steering wheel with manual adjustable steering column:

1. Unlock the steering column by releasing the lever and rotating the lever downwards



- 2. Adjust the steering wheel to your preferred position.
- 3. Lock the steering wheel in the adjusted position by rotating the lever up to its original position.



WARNING

Ensure all steering wheel adjustments are made prior to operating the vehicle.

Do not sit too close to the steering wheel when driving to avoid interference with the deployment of airbags and an increased risk of occupant injury during a collision.

Ensure that the steering wheel column is locked in place before driving.

Do not control the steering wheel by the horn pad. Doing so may result in injury to the driver's arms, hands and head if the airbag deploys.

Steering Wheel Switches

inline Rectangle

The steering wheel controls allow the driver to operate vehicle controls and infotainment features without needing to use the Infotainment screen.

Entertainment Functions

Steering Wheel Control Des		Description
inline Rectangl	inline Rectangle	Volume up/down for current audio i.e. Media, Phone, Navigation, Parking etc. Press once for small adjustments or hold for rapid increase / decrease. Adjustment control for: Head Up Display, Steering Wheel and Side Mirrors.
inline Rectangl	inline Rectangle	Previous / Next favorite radio station. Press to restart / start current or skip to the next media track. Press and hold to fast rewind / forward a media track. Used for adjusting: Head Up Display, Steering Wheel and Side Mirrors.
inline Rectangl	inline Rectangle	Press to accept a Vehicle Warning message. Respond to ADAS prompts. Used for confirming HUD, Steering Wheel and Mirror positions.
inline Rectangl	inline Rectangle	Switch between Entertainment Sources with current source shown on the Infotainment screen.
inline Rectangl	inline Rectangle	Press to trigger native Voice Recognition session. Long press to trigger active phone mirroring voice assistant (Android Auto / Apple CarPlay).
inline Rectangl	inline Rectangle	If no phone is connected, press to open phone setup screen. If a phone is connected, display recent call list. Press to answer an incoming call, press and hold to reject an incoming call. Press to end an ongoing call. Make a call to the highlighted recent call list item. Accept incoming call via call notification banner.

ADAS Functions

Steering Wheel Control		Description
inline Rectangl	inline Rectangle	Press to increase / decrease set speed of vehicle by 1 mph / km/h when vehicle is in Adaptive Cruise Control or Highway Assist. Long pressing the button will rapidly increase / decrease set speed.
inline Rectangl	inline Rectangle	Press or Press & Hold to increase/decrease Adaptive Cruise Control vehicle gap.
inline Rectangl	inline Rectangle	Press to cancel / resume Adaptive Cruise Control or Highway Assist.
inline Rectangl	inline Rectangle	Press to enable Adaptive Cruise Control . See > Cruise Control > Adaptive Cruise Control .
inline Rectangl	inline Rectangle	Press to activate Highway Assist. See > <u>Driving Aids > Highway Assist</u> .
inline Rectangl	inline Rectangle	Press to toggle Intelligent Speed Adaptation ON/OFF. See > Cruise Control > Intelligent Speed Adaptation .



CAUTION

The driver is advised to read all relevant sections in the Owner's Manual and become familiar with all steering wheel controls prior to driving to avoid distraction.



WARNING


Driver aids are not a substitute for appropriate levels of driver attention and judgment. The driver is always responsible to ensure the vehicle is driven in a safe manner.

Heated Steering Wheel (if equipped)

A heated steering wheel warms the driver's hands and provides additional comfort when desired. The heated steering wheel temperature is automatically controlled depending on the ambient temperature.

To Activate / Deactivate the Heated Steering wheel:

- 1. Open the climate control interface..
- 2. Tap the Steering Wheel icon

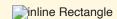

to turn heating ON/OFF.



NOTE

The steering wheel heating will only function when the vehicle is in Drive.

The Heated Steering Wheel function is OFF at startup.

6.4. Mirrors

Side Mirrors

Mirrors mounted on the side of the vehicle provide the driver with visibility behind and to the left and right sides of the vehicle.



to open the ergonomic control.



icon.

3. Select Left/Right side mirror to adjust.

Mirror Adjustment

Side mirrors can be adjusted using Car Control Area controls

- Tap the icon
- 2. Tap Mirror
- 4. Press the left side controls on steering wheel to adjust each mirror in the desired position.
- 5. Tap **Fold Both** to fold the mirrors inwards.



NOTE

The side mirrors can be folded only if the vehicle's speed is below 10km/h.

When the mirror positions are changed, a message will appear on the Infotainment screen prompting to save the new position to a user profile. Tap **Save**, and the mirror position will be stored against the current user profile. This position will be automatically recalled the next time that user starts the vehicle.

Heated Mirrors

The heated side mirror feature reduces the effects of fogging and ice buildup on the exterior mirrors ensuring clear visibility. The heating feature is present on both exterior side mirrors. Side mirror heating is activated/deactivated automatically when the Rear Demist feature is turned ON. See > Climate Control System > Rear Demist.

inline Rectangle

on the Infotainment screen.



> Vehicle

inline Rectangle

> Side Mirrors.

3. Toggle Auto Fold. Tap to Off/On.

Automatic Mirror Tilt in Reverse

If equipped, the side mirrors can automatically tilt downward to aid in parking when Reverse (R) gear is selected. When

inline Rectangle

to open the ergonomic control.

inline Rectangle

icon.

Side View Mirror with Automatic Dimming

If equipped, the auto dimming feature will automatically dim both of the vehicle side mirrors to minimize glare from headlights of the vehicle behind. This function is automatically controlled by the interior rear view mirror light sensor.

Auto Fold

Automatic folding of vehicle side mirrors when locking the doors.

To turn auto fold feature ON/OFF

1. Tap the **App Library** icon

2. Tap on **Settings** app

Drive (D) is selected, the mirrors will return to their normal set orientation.

To turn Mirror Tilt feature ON/OFF:

1. Tap the icon

2. Tap Mirror

3. Tap the toggle button to turn on the feature.

inline Rectangle

NOTE

In the case of an electrical malfunction, the driver can adjust the mirror by gently pressing on the edges of the mirror glass.




When parking, changing lanes or performing an overtaking or turning maneuver, always pay careful attention to the area around the vehicle as objects and other road users may be located in a blind spot.

Always ensure that the mirrors are positioned correctly and that the rear view is not restricted by ice, snow, condensation or other objects.

Do not drive on roads while either side mirror is folded inwards, as visibility of surroundings will be reduced.

During mirror folding operation, ensure that fingers do not get caught between the exterior mirror and the mirror base.

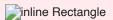

CAUTION

Curved mirror surfaces enlarge the field of view and therefore objects may actually be closer than they appear. To avoid any risk of a collision it is recommended to always check your surroundings by looking over your shoulder prior to changing lanes.

Only fold the exterior mirrors IN or OUT when there is no obstruction in the path of the mirror.

Rear View Mirror

The rear-view mirror is designed to allow the driver to have a clear view of the area behind the vehicle through the vehicle's rear window.

Mirror Adjustment

The rear-view mirror position is adjusted manually by hand. Adjust the angle of the rear-view mirror when the vehicle is stationary and while seated in the correct driving position.

Automatic Dimming

When driving at night the rear-view mirror automatic dimming feature reduces the glare from headlights of following vehicles.





NOTE

The dimming function uses light sensors positioned at the front and rear of the mirror. Do not block these sensors otherwise system functionality may be impaired.

Before driving, always check rear-view mirror position.

inline	e Rectangle

CAUTION

Do not spray glass cleaner directly on the mirror. Use a soft towel dampened with water.



Do not adjust the position of the mirror when driving. Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

Do not place objects in the rear seat, cargo area, or behind the rear head restraints which could hinder vision through the rear window.

To prevent serious injury during an accident, including deployment of the air bag, do not modify the rear view mirror and do not install a wide mirror.

Sun Visor & Vanity Mirror

A sun visor is provided for the driver and front passenger. The sun visors can be positioned to block sun glare coming through both the front and side windows by releasing. The sun visors include an illuminated vanity mirror and card holder.

Sun Visor Adjustment



To adjust a Sun Visor:

The sun visor can be adjusted in several orientations including:

• Rotate the sun visor downwards




to a desired angle.

• Detach from the mounting clip and swing outboard. Once detached, extend the sun visor by sliding it forward or rearward as needed



Illuminated Vanity Mirror

The driver and passenger sun visors have an illuminated vanity mirror. The mirror light switches on automatically when the mirror cover is lifted

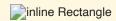

and switches off automatically when the mirror cover is closed.



Driving with the sun visor in the down position and the vanity mirror light ON can reduce vision of the road, particularly at night.

Sun visors should always be folded away if they are not being used.

When using the vanity mirror, do not lean too far forward in front of the airbag. The front airbag could cause serious injury if deployed.



CAUTION

Do not leave plastic cards in the card holder for long periods of time, as direct sunlight can damage them.

6.5. Exterior Lighting

Exterior Lighting - Front

inline Rectangle

Overview

inline Rectangle	VinFast Signature Light
inline Rectangle	Low beam & High beam Lights (LED Matrix Lights)
inline Rectangle	Fog & Cornering (if available)
inline Rectangle	Turn Signal Light in Side Mirror assembly
inline Rectangle	Daytime Running Light, Position Light, Turn Signal

LED Matrix Headlights

inline Rectangle

LED Matrix headlights consists of one LED Matrix Module

inline Rectangle

and one LED Bi-Function Module



. The LED Bi-Function module controls the High beam and Low beam lights. The LED Matrix Module consists of an array of individually controllable LED's which adaptively illuminates select regions of the lamp according to the driving conditions.



on the Infotainment screen.

Exterior Lighting Controls

The vehicle exterior lighting can be controlled via the Infotainment screen and the left multi switch stalk.

Lighting control via Infotainment screen:

- 1. Tap Lighting Control
- 2. Select the desired lighting function to enable.

inline Rectangle	Auto headlights On/Off
inline Rectangle	Low Beam On/Off
inline Rectangle	Parking Lights On/Off
inline Rectangle	All Lights On/Off
inline Rectangle	Front Fog Lights On/Off (if available)
inline Rectangle	Rear Fog Lights On/Off (if available)

The headlights turn on automatically when the exterior light control is set to **AUTO**

inline Rectangle

and the ambient light level is low.

inline Rectangle

NOTE

Headlights may turn ON momentarily if the vehicle passes through a darkened area e.g. beneath a freeway overpass.

Exterior lighting control by the multi switch (Left Hand stalk):

inline Rectangle

inline Rectangle

inline Rectangl	Up (when Vehicle on) – Right indicator
	Up (when Vehicle off) – Right Parking Light
inline Rectangl	Down (when Vehicle on) – Left indicator
	Down (when Vehicle off) – Left Parking Light
inline Rectangl	Pull – High beam flash / AHB override
inline Rectangl	Push – High beam on / AHB re-enable
inline Rectangl	Press – Scroll through trip computer menu

High Beam

High beam headlights can be operated manually or by using the Auto function.

Adaptive Driving beam

Adaptive Driving Beam (ADB), with the use of LED Matrix headlight, is a technology adjust the lighting area according to input from camera signal to avoid dazzling light to coming or preceding vehicles, while maintaining illumination on pedestrians, animal and other objects.

When the user has activated this feature, it automatically turns off the high beams partially when camera detect there are coming or preceding vehicles, the portion of the high beams that are turned off changes according to the direction and distance of the vehicle, remaining high beams are on to

illuminate the widest possible area. On the other hand, the low beams always illuminate a certain range to ensure visibility in front of driver.

The feature will be activation when speed >60 km/h and deactivation when speed <50km/h. This feature does not actively intervene in the dynamic driving task.

The following scenarios will cause ADB system to dip from high beam to low beam:

- If oncoming or preceding vehicles are detected.
- In urban areas with sufficient streetlights, at junctions with traffic lights or in tunnels
- · In heavy rain or when fog lights are turned ON

The ADB system will turn the high beam back on once the conditions listed above are not detected.



NOTE

The vehicle headlight control must be set to AUTO and Fog lights (if available) OFF to enable the Adaptive Driving Beam

To activate the Adaptive Driving beam feature:

inline Rectangle

on the Infotainment screen.

inline Rectangle

> Light Settings

inline Rectangle

> Exterior .

1. Tap App Library

2. Tap Settings

3. Use the toggle button to turn the feature On/Off.



NOTE

Pushing or pulling the lighting stalk will override the ADB system.

The ADB system uses the front windscreen camera to detect oncoming and preceding light of vehicles, motorcycles, and bicycles.



NOTE

The ADB system can not detect all types of vehicles.



To manually activate / deactivate high beam:

To manually activate the high beam headlights, push the left multi switch stalk forward. The indicator light



will appear on the Car Control Area display and the high beams will be switched on. To return to the low beams pull the multi stalk switch towards you. To flash the high beam headlights, pull the stalk towards you momentarily.



NOTE

Do not cover the front windshield camera.

Do not clean the front windshield camera sensor with window cleaner or any hazardous solutions as it may leave a film which could affect sensor operation.

Do not apply any coating on the front windshield as this may impact ADB headlight performance.

A light sensor is located on top of the windshield. Make sure that the sensor is not covered otherwise headlights may turn on when not required.

Use manual operation to turn ON the headlights when required when driving at night or in rain, fog or in tunnels and parking facilities.



Do not use high beam when oncoming traffic is present. Doing so may dazzle oncoming drivers leading to an accident.

When using the ADB feature the vehicle may not detect oncoming vehicles in all conditions. Always check for oncoming vehicles and switch to low beam when required.

Automatic headlights are only intended to assist the driver. Full control of vehicle headlights always remains the responsibility of the driver.

Auto Leveling

Auto leveling for the high beams can be activated / deactivated via the Lighting Settings on the Infotainment screen. See> Exterior lighting > Auto leveling.

Turn Signals

The vehicle turn signals are controlled using the multi switch stalk on the left-side of the steering wheel.

To operate the Turn signal:

- inline Rectangle
- . To flash signal 3 times: Tap the multi switch stalk up or down lightly
 - inline Rectangle
- To flash continuously: Push the multi switch stalk up
 - pinline Rectangle

or down

inline Rectangle

fully

When active the left or right turn indicator will flash on the Infotainment screen.

- inline Rectangle
- inline Rectangle

To cancel the Turn signal:

The turn signal will be canceled when:

- The steering wheel is returned to its central position.
- The stalk is pushed up or down while indicators are active.
- The 3-flash sequence has ended, if not on continuously.



NOTE

The Daytime Running Light (DRL) will turn off while the indicator light is flashing.

Hazard Warning Flashers

The hazard warning flashers warn other drivers to take caution. It should be used in the event of an accident, if pulled over on the side of the road or when the vehicle is stopped on the motorway.

The hazard button is located in the center console.

To activate/deactivate the Hazard Warning Flashers

- inline Rectangle
- Press the Hazard light switch





NOTE

The red light on the hazard button will flash when the hazard warning flashers are activated.

The hazard warning flashers can operate even if the vehicle is off.

Hazard warning flashers are automatically activated in the event of an Emergency Braking situation or airbag deployment.

The individual turn signals do not work when the hazard warning lights are on.


Exterior Lighting - Rear

Overview





Rear Tail lights

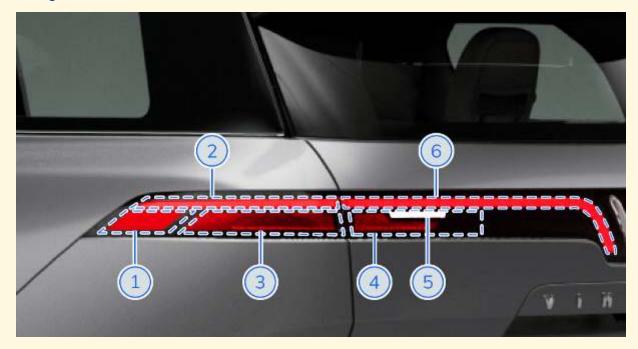



Stop/Brake Lights

The brake lights turn ON when the brake pedal is depressed to alert other road users that the vehicle is slowing down.

There are several brake lights equipped on the vehicle including:

- Center High Mount Stop Light (CHMSL)
- · Rear Tail light
- Rear Lamps

Center High Mount Stop Light (CHMSL)

The center high mount stop light (CHMSL) turns on with the brake light and is located at the top of the tailgate.

Turn Lights

Turn Lights are used to signal that the driver will change lanes or make a turn. They turn on when the driver initiates a turn using the left indicator stalk.

Reverse Lights

The reverse lights turn on when the ignition is on and Reverse gear (R) is selected.

License Plate Lights

The license plate light allows the license plate to be visible in dark conditions. The license plate lights are activated when either the headlights or parking lights are onRear Reflectors

Rear reflectors are used to reflect the light from other vehicles behind so to assist in vehicle identification at night.

Rear Fog Light (if avaiable)

A rear fog light provides a powerful, concentrated beam of red light that will penetrate fog and heavy rain, making the vehicle more visible to others.



In order to avoid dazzling following traffic the rear fog lights should only be turned on according to the legal requirements in the country where the vehicle is operated and poor visibility conditions.



NOTE

Do not use a dry cloth or sponges to clean headlights or tail lights, as they could scratch or damage the lens surface.

In cool or damp weather, the inside of the headlights, turn signals, fog lamps and tail lights may develop condensation. This will clear shortly after switching them on and will not impact the service life of the lights.

Daytime Running Lights

The Daytime Running Lights (DRLs) increase the vehicle's visibility on the road. The DRLs switch ON/OFF automatically depending upon the surrounding lighting conditions.



NOTE

The Daytime Running Lights are on the front of the vehicle only.



During low visibility conditions, the daytime running lights system may not be able to provide adequate lighting. When needed, turn on the headlights during conditions of low visibility. Failure to do so may result in a crash.

The DRL's will turn OFF when:


- · The position lights are ON.
- · The indicators are active.
- · The vehicle is turned OFF.

The DRL's will illuminate with low intensity when:

- · Position lights are ON.
- · Low beam is ON.

Decoration Lights

Decoration lights

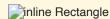

are used with Position Light to provide a lighting feature of vehicle and are not intended to illuminate the road ahead.



Decoration light operation:

- Turn on when the lighting mode is set to Position Lights.
- Turn on when the Headlamps are on.

Follow Me Home Lighting

When the Follow Me Home feature is enabled, the exterior lights will stay illuminated for a period of time after exiting the vehicle, before turning off.

To Activate / Deactivate Follow me home:

1. Tap App Library



on the touchscreen.

2. Tap Settings



> Light Settings



- > Exterior.
- 3. Choose the time delay for lights to remain ON OFF / 30s / 60s / 90s / 120s.
- 4. To activate the Follow Me Home feature, after turning it ON and setting the light duration, the user needs to flash the high beam.



NOTE

This feature will not automatically remain active after each vehicle restart, so the user must flash the high beam before exiting the vehicle to reactivate it.

Welcome Lights

The vehicle welcome light feature automatically turns on exterior lighting when the driver approaches or unlocks the vehicle.

To Activate / Deactivate Welcome Lights:

1. Tap App Library



on the touchscreen.

2. Tap Settings



> Light Settings



- > Exterior.
- 3. Use toggle to turn off the Welcome lights or choose the vehicle unlock option.

Auto Leveling Headlights

The Auto Leveling Headlight feature automatically adjusts the High and Low Beam headlight angle to ensure it is focused on the road in front and prevents dazzling on coming traffic. Auto leveling compensates for headlight angle change due to vehicle loading conditions. The adjustment takes place when the vehicle is stationary.

Fog Lights

Front Fog Lights (If equipped)

The vehicle front fog lights are located on the front bumper and can be used to improve visibility in conditions of fog, snow, and rain.

Fog lights can be activated/deactivated via the Car Control Area Lighting Controls.

To activate front fog lights:

1. Tap Lighting Controls



in Car Control Area on the Infotainment screen.

2. Tap Front Fog icon



The fog lights are turned OFF when any of the following conditions are met:

- · Vehicle state is OFF.
- · Position Light Switch is turned OFF.
- Front Fog Lamps are deactivated from the light setting page.

When to use fog lights

Fog lights are designed for use when visibility is severely limited through fog, snow, or heavy rain. Fog lights are designed to make your vehicle visible rather than help light your way and therefore will not be necessary to improve visibility at night. The driver should only use fog lights when the vehicle's main lights aren't sufficient enough to make you visible to other road users.

Rear Fog Lights (if equipped)

Rear Fog Lights are installed on the rear bumper to indicate the vehicle's position on the road when driving in fog, snow, or other conditions where visibility is limited.

To Activate Rear fog lamp:

1. Tap Lighting Controls



in Car Control Area on the Infotainment screen.

2. Tap Rear Fog icon



The Rear fog lights are turned OFF when any of the following conditions are met:

- · Vehicle state is OFF.
- · Position Light Switch is turned OFF.
- Rear Fog Lamps are deactivated from light setting.

When to use fog lights:

Fog lights are a safety device that should only be used during low visibility conditions like heavy rain or fog. The rear fog light should be used only when the visibility conditions are poor and are not a substitute to headlights.

Cornering Lights

If available, the front fog lights of the vehicle incorporate a cornering light function which projects light in the direction of the turning vehicle.

To activate the Cornering Lights

The Low beam lights must be On, and Fog lights turned Off.

Turning the steering wheel will activate the relevant cornering light. The system monitors the steering wheel angle
and will keep the cornering light illuminated while the vehicle is making a turn. Once the turn is completed the
cornering light will turn Off.

inline Rectangle

NOTE

In order for the cornering lights to function the headlights must be On.

Puddle Lights

Puddle lights are located in each of the four doors which illuminate when the door is opened and the headlights are active. The puddle lights will turn off when the door is closed. The white light emitted from the bottom of the door helps to make entry and exit from the vehicle safer in low light conditions.

6.6. Interior Lighting

Infotainment screen Brightness

Brightness Control

The vehicle's Infotainment screen display and switches are Illuminated to assist in viewing during varying ambient light conditions. When the position lights or headlights are activated, the switches are automatically illuminated. Brightness of the Infotainment screen can be adjusted via

inline Rectangle

on the Infotainment screen.

inline Rectangle

> Light Settings

inline Rectangle

> Interior .

the Quick control menu or under Light settings in the vehicle settings menu.

To adjust brightness settings via Quick Controls:

- Swipe down from the top on the home screen to open Quick Control.
- 2. Use the **Display Brightness** slider to select preferred brightness.

To adjust brightness settings via Light Settings:

- 1. Tap App Library
- 2. Tap Settings
- 3. Use the **slider** to adjust brightness.




Never adjust the brightness while driving. This could result in loss of control of the vehicle and may lead to an accident which may cause damage, serious injury or even death.

Rear Reading Lights

There are four rear Reading Lights located on the headliner trim of the vehicle. Two for the 2nd row seats and two for the 3rd row seats.

Second Row Lights

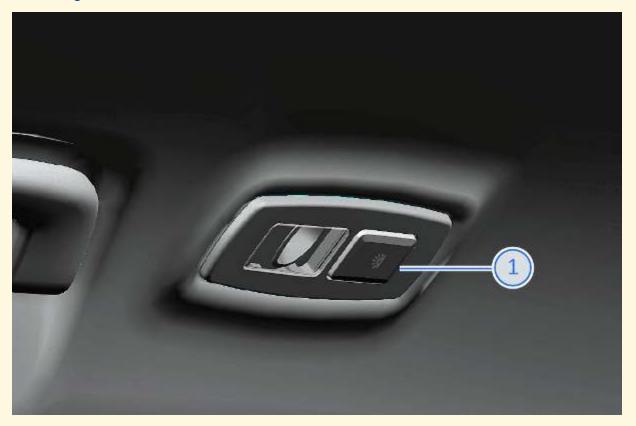

Activation/Deactivation:

· Press the reading light button



to turn ON/OFF.

Rear reading lights also turn ON when the doors are opened and the vehicle Dome Lamp setting is set to AUTO.
 See > <u>Drive Systems > Roof Lights</u>.

Third Row Lights

Activation/Deactivation:



- Press the lamp itself once to turn the light ON.
- · Press the lamp again to turn OFF.



Do not use the reading lights when driving in the dark. The reading lights may obscure the drivers vision and lead to an accident.

Front Roof Lights

The Front Roof Lights are located on the roof at the front of the vehicle and can be illuminated in two modes:

- 1. Vehicle Dome Light
- 2. Front Reading Lights

Vehicle Dome Light

The vehicle dome light combines both the front and rear reading lights to illuminate the entire cabin. The dome lamp feature is operated via the Infotainment screen and has two operating modes:

- AUTO all reading lights will illuminate when any door is open.
- MANUAL all reading lights will illuminate when activated via the Infotainment screen controls.


To Activate/Deactivate the dome light:

1. Tap App Library



on the Infotainment screen.

2. Tap Settings

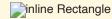

> Light Settings



- > Interior.
- 3. Toggle Dome Light Off / On / Auto.



NOTE

In the event of an accident where the airbags have deployed, the dome lights will turn ON automatically.

Do not use the interior lights for extended periods of time when the vehicle is turned off otherwise the battery will discharge.



Do not use the interior lights when driving in the dark. The interior lights may obscure the driver's view and may cause an accident.

Front Reading Lights

The two front reading lights can also be activated separately when a driver or passenger requires to illuminate their own area of the cabin.

To activate/deactivate a front reading light:


- 1. Press the lamp itself once to turn the light ON.
- 2. Press the lamp again to turn OFF.

Cargo Light

The cargo light is located in the rear luggage compartment area and provides a source of light while loading and unloading items in the cargo area. There are two lights on either side of the cargo area and two lights on the inner side of the liftgate.

To Activate/Deactivate cargo light:

The light is automatically switched ON when the liftgate is opened and is turned OFF when the liftgate is closed.

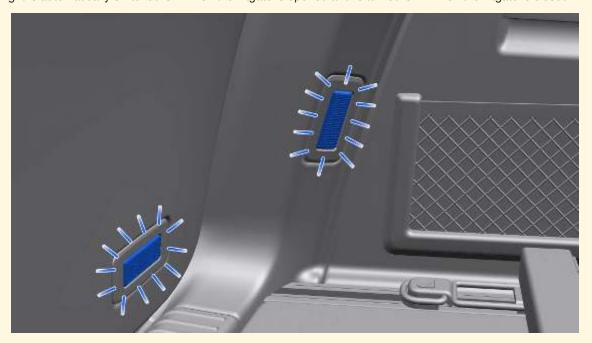



To avoid breaking the cargo light, care must be taken when loading and unloading items in the rear.

Battery Power Protection

Battery Power Protection feature helps prevent battery drain by ensuring the lights, infotainment system or other electrical systems are not left on for long periods of time. The maximum time these systems will remain on (if driver remains in vehicle) is 10 minutes.

Ambient Lighting

Ambient lighting provides a soft illumination around the vehicle interior. Illumination colors and lighting themes can be customized based on the user's preference. It also aids a as warning, See > <u>Door Opening Warning</u>.



NOTE

Ambient Lighting also acts as a warning when the passenger/driver opens the door and a vehicle is approaching from the rear. The ambient lighting system is also used to alert drivers as part of the door opening warning system.(See > Door Opening Warning). The color and flash frequency of the ambient lighting will change depending on the warning urgency.

Ambient Lighting Activation

Ambient Lighting can be controlled from both **Quick Controls** and the **Settings App**.

To activate Ambient Lighting using Quick Controls:

- 1. Swipe down to access the Quick Controls.
- 2. Use the **Ambient Light Brightness** slider to select preferred intensity.

To activate Ambient Lighting using Settings App:

1. Tap **App Library**



on the Infotainment screen.

2. Tap Settings



> Light Settings



- > Ambient Light.
- 3. Toggle Ambient light ON/OFF.
- 4. Toggle between different Ambient Light Effects to change the way the light is displayed.
- 5. Use the brightness Slider to control Ambient Lighting intensity.

6. Use the Color Wheel for changing Ambient Lighting color.

6.7. Wipers and Washers

Front Wipers

The Front wipers are used to remove water, rain, ice, snow, or debris from the vehicle's front windshield. The wipers operate across the front window to give the driver better visibility.

- inline Rectangle
- inline Rectangle
- inline Rectangle
- To turn off the wipers from Speed 1 or Speed 2, gently move the wiper stalk downward or upward to the central
 - inline Rectangle
- . Ensure the stalk clicks into place to confirm it is in the OFF position.
 - inline Rectangle
- When wipers are set to Auto and water is detected on the windshield, the wipers will automatically wipe the
 - inline Rectangle
- Wiper On Speed 1 (Low Speed).
- inline Rectangle
- Wiper On Speed 2 (High Speed).
- inline Rectangle
- , will initiate the windshield wiper to wipe once. Continuous speed 1 if held.
- inline Rectangle
- sensitivity adjustment of Low Speed.
 - inline Rectangle
- . The windshield wipers will automatically turn on at low speed.

Courtesy Wipe:

Wiper Controls

The front wiper stalk is located behind the steering wheel on the right hand side. To use the front wiper, turn the vehicle ON and then move the stalk up or down to one of the operating positions.

Central Position

position

End Press (Auto ON/OFF)

front windshield.

- Up 1
- Up 2
- Down Pushing the wiper stalk downwards
- · Thumb Wheel
- To spray windshield washer fluid, pull the lever toward you

The courtesy wipe feature removes excess water from the windshield after the washer system cycle is complete.



NOTE

The Wiper/Washer will only activate when the vehicle is ON.

Check the washer fluid level regularly.

Fill the washer fluid reservoir until full.

To prevent icing on the windshield during the colder months, turn on the defroster to heat the windshield before and during washer use.



When washing the vehicle, set the wiper stalk in the OFF position to stop the auto wiper operation. The wiper may operate and get damaged if the switch is set in the AUTO mode.

To prevent possible damage to the washer pump, do not operate the washer when the fluid reservoir is empty.

To prevent possible damage to the wipers or windshield, do not operate the wipers when the windshield is dry.

To prevent damage to the wiper arms and other components, do not attempt to move the wipers manually.

To prevent possible damage to the wipers and washer system, use anti-freezing washer fluids in the winter season or cold weather.

To help prevent damage to the windshield wiper and washer system components, do not continue to hold in the wiper stalk when there is no washer fluid being sprayed otherwise the washer motor can get damaged.

Clear ice or packed snow from the wiper blades before using the wipers to avoid the damage.

Always use VinFast-approved washer fluid in the washer reservoir. Failure to follow this instruction may severely impact visibility when washer fluid is sprayed on the windshield, and might damage the vehicle's paint.

Rear Wiper

The Rear Wiper is used to remove water, rain, ice, snow, or debris from the vehicle's rear window for better driver visibility.

Rear Wiper Controls

The Rear wiper is operated by twisting the rear wiper switch which is present at the end of the right stalk.



Off	Rear wiper is OFF 1				
On	Rear wiper is ON				
Rear Windscreen Wash	Twist away from driver until stop Rear windscreen wash will activate then return to Wiper ON mode once released Twist towards driver until stop				
	Rear wiper will perform a single wash cycle				

To turn ON/OFF Auto Rear Wipers:

The auto rear wiper function will automatically cycle the rear wiper when the front wipers are activated and Reverse (R) gear is selected.

1. Tap vehicle icon



in car control area in the Infotainment screen.

2. Tap Wipers icon.



3. Toggle Auto Rear Wiper Off / On.



CAUTION

Before using rear wiper, clear the ice or snow from the rear window otherwise it will prevent wiper blade from moving. It may also cause damage to the wiper motor.

Do not use radiator antifreeze in the windshield washer reservoir. It can severely impact visibility when sprayed on the rear window, and may damage the vehicle's paint.

6.8. Braking and Stopping

Traction Control System

The Traction Control System (TCS) is an active safety feature that reduces wheel slip of the driven wheels during vehicle acceleration. TCS monitors the speed of each



will temporarily flash on the Car Control Area section of the Infotainment screen when the TCS system is actively applying brakes. If the TCS malfunctions, the TCS light will individual wheel and if slip is detected will apply brake pressure to that slipping wheel to maximize traction. It is recommended that TCS be enabled at all times for maximum safety.

The TCS light

remain on, in which case please contact a VinFast Service Centre to have the vehicle inspected.

The Traction Control System default setting is ON.



NOTE

Turning off the Traction Control System when driving on snow, mud, sand or very loose surfaces, or if using snow chains, may improve forward travel if in a bogged situation. It is recommended however to turn TCS back ON as soon as the vehicle is mobile again.

Traction Mode

If the vehicle has difficulty gaining traction in snow, mud or other loose surface and all attempts have failed to maneuver out, **Traction Mode** may be used temporarily. Traction Mode allows additional wheel slip in an effort to move the vehicle forward passed the immediate area of low traction.

When Traction Mode is enabled Electronic Stability Control (ESC) will remain ON.

To Enable Traction Mode (Disable TCS):

1. Tap Car Mode



on the touchscreen.

- 2. Tap the three-dot icon.
- 3. Scroll down to find Traction Control System (TCS).

4. Tap ON to activate it.



NOTE

Traction Control will also be disabled when ESC is turned OFF.

_			
in	line	Recta	nale

Traction Control System should be kept on at all times to maximize safety of the vehicle and its passengers.



Traction Control System does not compensate or prevent collisions caused by dangerous driving or turning sharply at high speeds.

Anti-lock Braking System

The Anti-Lock Braking System (ABS) prevents the wheels from locking and helps maintain steering during hard braking events. This enables the vehicle to reduce braking distance and enhances drive-ability in varied road surface conditions. The speed of each wheel is monitored and braking pressure on each wheel is adjusted so that the wheels continue to rotate and don't lock and slide.



NOTE

A pulsating sensation will be felt through the brake pedals while ABS is operating. This characteristic is part of the normal operation of the system.



Maintaining strong and steady pressure on the brake pedal during an emergency braking situation is of utmost importance. Pumping or removing the foot from the brake pedal can lead to increased braking distance.

Drive at reduced speed when the terrain consists of snow, ice or covered in dirt or gravel as system performance may be impacted.



If the ABS warning light



is on and remains on, a problem with the ABS system has been detected. Do not drive the vehicle, contact the nearest VinFast Service Center as soon as possible.

If the Brake warning light



is on and remains on, a problem with the braking system has been detected. Do not drive the vehicle, contact the nearest VinFast Service Center as soon as possible.

ABS does not compensate or prevent collisions caused by dangerous driving or turning sharply at high speeds.

Electronic Brake Distribution

Electronic Brake Distribution (EBD) optimizes the braking performance of the vehicle under different operating conditions. It electronically adjusts the brake bias from the front to rear wheels or rear to front wheels of the vehicle based on the traction available between the tires and road surface.



EBD System does not compensate or prevent collisions caused by dangerous driving or turning sharply at high speeds.

Electronic Stability Control

The Electronic Stability Control System (ESC) helps to stabilize the vehicle during cornering and braking events if traction between the road surface and tires is reduced. ESC monitors individual wheel speed and driver steering angle and applies brake pressure to individual wheels to prevent vehicle understeer and oversteer and aids the driver to keep the vehicle on its intended path.

The ESC light



will temporarily flash on the Car Control Area section of the Infotainment screen when the ESC system is actively applying brakes. In case of a malfunction the ESC light will remain on in which case contact a VinFast Service Center to have the vehicle inspected.

To Enable/Disable ESC:

1. Tap Car Mode



on the touchscreen.

- 2. Tap the three-dot icon.
- 3. Scroll down to find Electronic Stability Control (ESC).
- 4. Change ESC setting to OFF/ON using toggle button.



NOTE

ESC by default will be ON every time the vehicle is turned ON.

Turning off ESC does not disable ABS or the braking system of the vehicle.



It is recommended to maintain a strong and steady pressure on the brake pedal during an emergency braking situation. Do not remove your foot from the brake pedal or pump the brake pedal, as doing so can increase the braking distance.



Electronic Stability Control does not compensate or prevent collisions caused by dangerous driving or turning sharply at high speeds.

Hill Start Assist

Hill Start Assist (HSA) temporarily prevents the vehicle from unintended roll back when positioned on a hill or incline. The system remains activated for a period of 3 seconds after the driver releases the brake pedal. HSA works by temporarily holding brake pressure after the brake pedal is released by the driver.



HSA remains active only for a period of 3 seconds after releasing the brake pedal. Always be careful of the surroundings and be ready to press the brake pedal.



Do not rely on HSA. It does not replace human input and intuition in any way or form. Always pay attention to the surroundings and drive safely.

A heavily loaded vehicle may cause the vehicle to roll backwards slightly.

Brake Assist System

The Brake Assist System (BAS) recognizes when the driver has applied the brake suddenly and applies additional brake pressure to assist the driver in minimizing vehicle stopping distance. BAS works to assist the vehicle braking system engage ABS as fast as possible and will disengage upon release of the brake pedal.



The Brake Assist System does not compensate or prevent collisions caused by dangerous driving.

Rollover Mitigation

Rollover Mitigation is a safety feature which anticipates the potential for wheel lift by monitoring the driver's steering wheel angle, vehicle speed and acceleration. Rollover Mitigation analyses the rate of change of steering wheel angle and the vehicle speed to determine the possibility of a vehicle roll. The system reduces the possibility by applying appropriate brake pressure to individual wheels.

Rollover Mitigation cannot prevent wheel lift caused by factors such as:

- Road conditions
- · Rough terrain
- · Collision with other vehicles or objects



NOTE

The curtain airbag remains inflated in the event of a side impact or rollover accident.

The curtain airbag is also designed to cover the side windows when inflated to mitigate any passenger ejecting from the vehicle in an the event of an accident.



Factors, such as road conditions, driving conditions, and vehicle loading may influence the chances of wheel lift or rollover.

Rollover Mitigation cannot prevent wheel lift or rollover in every situation.

Rollover Mitigation is a safety feature; it should not be exploited by driving the vehicle recklessly and causing danger to driver, passengers, and others.

Regenerative Braking

The vehicle is equipped with a regenerative braking system. The system can convert kinetic energy usually released as heat during a braking event into electrical energy. The recovered energy can be used to replenish the batteries, leading to increased vehicle range.

The system gets activated as soon as the accelerator pedal is released. It will gradually slow the vehicle down and start recharging the batteries.



The energy recovery can be monitored from Power and Regen Gauge



on the Infotainment screen just below the Drive mode icon in the status bar.

Regenerative Braking will be deactivated if the battery State Of Charge (SOC) is above 95%.




NOTE

The amount of Regenerative Braking may be reduced when the vehicle is fully charged or when the battery is very cold.

The color of Regen Gauge coresponds to the drivermode.

Driving Style

Driving Style can be accessed using Car Mode

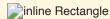

settings from Car Control Area. It provides the option to select the level of regenerative energy generated and used to recharge the vehicle's battery.



The vehicle provides levels of regenerative braking to choose from (i.e. **OFF** (if available), **Low**, **Medium** and **High)**. The levels can be switched using the toggle button under Regenerative Braking.



Regenerative braking should not be considered as a primary form of vehicle charging. It is a supplementary feature. Follow proper charging instructions to charge the vehicle.

Emergency Signal System

If available, the Emergency Signal System (ESS) will activate the hazard lights temporarily when the vehicle detects an emergency braking situation. Rapid flashing of the hazard lights helps warn nearby vehicles of a rapidly slowing vehicle and encourage them to maintain a safe distance and avoid an collision.

The hazard lights will stop flashing once the emergency braking event has finished. If the hazard lights continue to flash, contact a VinFast Service Center.

For information on the Hazard Warning Flashers, See > Exterior Lighting > <u>Hazard Warning Flashers</u>.

Auto Vehicle Hold

Auto Vehicle Hold (AVH) helps keep the vehicle stationary without needing to continuously press the brake pedal, such as when stopped at a red light or in traffic jams. When AVH is activated, after you press the brake pedal to bring the vehicle to a complete stop, the system will automatically hold the brakes even if you release the brake pedal. To continue moving, simply press the accelerator, and the system will automatically release the brakes.

When the vehicle is in the AVH active state, to ensure safety and achieve optimal system performance, the system will automatically engage the electronic parking brake (EPB) in certain situations, such as:

- Turning off the AVH function via the infotainment screen without pressing the brake pedal.
- When the driver's door is opened.
- Auto Hold active more than 5 minutes.
- When the vehicle is stopped on a slope greater than 25%.
- The system detects that the vehicle is rolling.
- The driver shifts to Park (P) gear.

How to Activate/Deactivate Auto Vehicle Hold:

To activate the AVH feature:

Press the Car Mode



button on the infotainment screen.

- Tap the three-dot icon.
- Scroll to Auto Hold, press switch ON to activate the Auto Hold function.

To deactivate AVH feature:

- Scroll to Auto Hold, press switch OFF on the infotainment screen.
- The Auto Hold indicator light will turn off when the function is disabled.

When Auto Hold is in the Active state, if the user turns off the feature without pressing the brake pedal, system will automatically engage the electronic parking brake (EPB).

Recognize the status on the infotainment sreen

CONDITION	LAMP			
CONDITION	SYMBOL	DESCRIPTION		
AVH OFF	inline Rectangle	[OFF]: AUTO HOLD off.		
AVH Ready	inline Rectangle	[White]: when Auto Hold feature is enabled via infotainment screen and Auto Hold is in READY state.		
AVH Active	inline Rectangle	[Green]: The green icon indicates that the Auto Hold feature is enabled and in the active state. At this point, the driver can release the brake pedal. Auto Hold transitions to the Active state when the vehicle is stopped, the brake pedal is firmly pressed, and the feature is activated via the screen.		
AVH Failure	inline Rectangle	[Yellow]: When the Auto Hold feature malfunctions.		




NOTE

Auto Hold only operates in Drive (D), Reverse (R), and Neutral (N) gears (in cases where shifting from Drive or Reverse to Neutral). It does not work in the Park (P) gear.

If the user enables both Creep Mode and Auto Hold simultaneously, Creep Mode will not activate while Auto Hold is in the active state. The user can disable Auto Hold if necessary.

When ACC Stop and Go mode is activated, the system prioritizes ACC control, ensuring no conflicts occur with the Auto Hold feature.

When the user stops the vehicle on a slope, presses the brake to keep the vehicle stationary, and activates the Auto Hold feature, the indicator will turn green immediately.

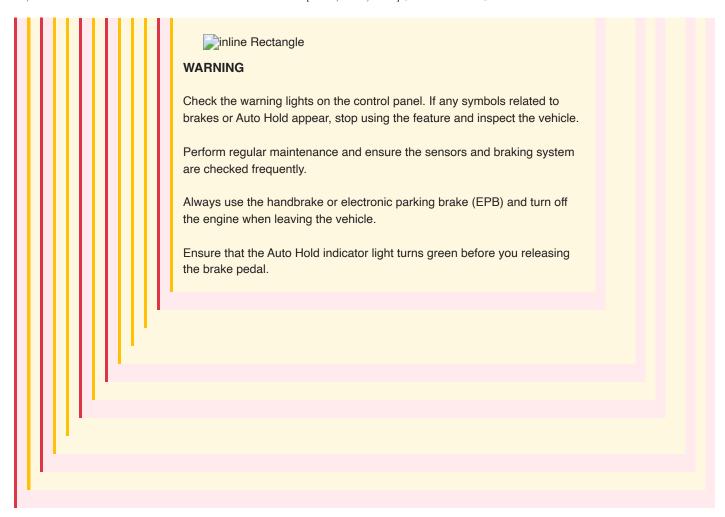

6.9. Economy & Environment

Economical Driving

Economical driving is a way of driving which can help to improve road safety and prevent wear on your vehicle.

Please refer to the following recommendations for economical driving:

- Avoid Harsh Braking: Regenerative Braking System is the key factor for economical driving. Regenerative Braking System will convert some of the vehicle's kinetic energy into electrical energy to recharge the batteries. Regenerative braking is maximized by reducing the use of friction brakes and the best way to do so is to avoid harsh accelerating and breaking.
 See > Braking and Stopping > Regenerative Braking.
- Maintain Speed: High speed increases energy consumption and discharges the battery at a faster rate.
 Driving the vehicle at an efficient speed will maximize the battery lifetime.
- Reconsider use of heating and air conditioning: Reduce the use of the vehicle's Heating, Lighting, Climate Control, Audio and Infotainment systems whenever it is convenient and safe to do so, as they consume power from the battery.

- Tire pressure: Make sure that tire pressure is at the optimal level to reduce unnecessary rolling resistance that decreases efficiency of the battery. See > Wheel and Tires > Tire Pressure.
- Battery management: Keep the vehicle in a well-maintained condition will help to slow degradation of the battery. The greater the battery health, the more energy it will hold, providing longer range.
 Minimize the use of DC Fast Chargers, particularly Super-Fast Chargers, to maximize the Battery life. Also, plug the vehicle into a charger whenever the vehicle is not in use. Do not allow the battery charge to drop to a very low level of charge.
- Remove unnecessary weight: Energy consumption can be reduced by removing unnecessary weight such as unused child seats, disposable and personal items, roof carriers etc.
- Maintain Distance: Maintain an adequate distance to other vehicles to avoid emergency braking.
- Wheel alignment: Have the wheel alignment checked per the maintenance schedule. Incorrect wheel alignment can lead to increased tire wear and power consumption.

 Windows: It is recommended to drive with all the windows closed if possible.

Driving Statistics

Driving Statistics displays the history of the battery consumption, distance, and power use of the vehicle over a chosen period. This data is also available to view via the VinFast App.

inline Rectangle

NOTE

This menu is only shown when fitted (for the markets that has internet connection).

To open driving statistics:

inline Rectangle

1. Tap Profile Name on the status bar.



.

inline Rectangle

will be displayed on the screen.

Time Ranges

inline Rectangle

icon.

- 2. Select the Time Duration or customize the Date Range as required.
- 3. Tap **Apply** to apply the Time Duration for Custom range.
- 4. Statistics will be shown for the selected Time Duration.

To select the view:

The driver can select from the following different views for statistics:

- Distance
- · Avg. Consumption
- Power

To change the view, select the desired view from toggle button.

To Zoom In/Out:

To zoom in, drag two fingers over the Infotainment screen.

2. Tap My Profile > Driving Statistics

3. Driving Statistics Graph

The driver can see the statistics by selecting time ranges or by customizing the time range.

To select time ranges:

- 1. Tap Expand
- To zoom out, pinch two fingers on the Infotainment screen.

To view next/back page:

Viewing next and back page depends on time range selected.

- Swipe right to left to view the next page.
- Swipe left to right to go back to previous page.

Trip History

For Primary and Secondary drivers, Trip History displays a list of recent vehicle journeys. Tap on any recent trip in the list to view the following information:

- Start Location
- Destination
- Stopping Locations
- · Departure Time
- Date
- Trip Distance



NOTE

This menu is only shown when fitted (for the markets that has internet connection).

To view Trip History:



1. Tap Profile Name on the status bar.



3. Tap Trip Card to open trip details.



icon on the top right corner of the trip detail page.

6.10. Flood Precautions

Flood Precautions



If it is mandatory to drive through a flooded area, to prevent the vehicle from being damaged, it is necessary to pay attention to the following precautions:

 Check water depth before driving through water. The water level should not exceed the vehicle's ground

2. Tap My Profile > Trip History

To delete a Trip History:

1. Tap Delete

It is not recommended to drive in flooded roads or areas.

clearance.

- Drive at a low speed (less than 10 km/h). Otherwise, waves may form in front of the vehicle, damage the motor controller and other components, and make the vehicle unable to drive.
- 3. Do not park or reverse in water under any conditions.



WARNING

Apply the brakes several times to restore braking function after driving through water.

The presence of water, mud, or silt in the braking system can reduce braking efficiency and increase stopping distances. Drive carefully, maintain a safe following distance, and avoid sudden braking.

Driving through deep water can damage your electrical motor. This damage is not covered by the warranty.

Other systems like transmission, driving and electrical may also be seriously damaged upon submersion. This damage is not covered by the warranty.

Influence of waterlogging on high-voltage parts

If your vehicle is submerged in water or if you drive through water that reaches or exceeds the doorsill, water may enter the high-voltage system, this can pose serious safety risks. Servicing flood-damaged vehicles by unauthorized workshop cannot guarantee, please contact VinFast for support and bring vehicle immediately to VinFast authorized dealers for checking and repair if vehicle is flooded.

7. Displays, Connections and Climate

7.1. Touchscreen

Infotainment screen Overview

The vehicle Infotainment screen allows control of many vehicle features and functions that traditionally would be provided by physical buttons and switches. The Infotainment screen also replaces a traditional instrument cluster to display important information related to vehicle speed, drive status, warning and indicators and Advanced Driver Aid messages.

Images and features in this chapter are for illustration purposes only and may vary depending on vehicle variant and selected software.

The vehicle consists of two Infotainment screens:

- 1. Front Infotainment screen
- 2. Rear Infotainment screen (if equipped)

Front Infotainment screen

Key vehicle information displayed includes:

- · Speed and odometer
- · Warning lights and indicators



· Vehicle battery state of charge

Key functions controlled by the Infotainment screen include:

- · Media, phone and navigation
- · Vehicle lighting (exterior and interior)
- · Climate control
- · Adjustment of mirrors, steering wheel, head up display
- · Access to front and rear cargo areas

Rear Infotainment screen (if equipped)

A rear Infotainment screen is provided for the 2nd row passengers in the 6-seater variants of the vehicle. This allows the rear passengers to control necessary functions, such as climate control and infotainment.

Key functions controlled by the rear Infotainment screen include:

- Media
- Climate Control

Front Infotainment screen Layout

inline Rectangl	Car Control Area	Displays vehicle status and driving related messages including vehicle speed and warnings. Provides controls for headlights, mirrors, steering wheel port, vehicle access.
inline Rectangl	Infotainment Area	Display detailed content and entertainment information Provides access to climate control functions.
inline Rectangl	Quick Control	Provides quick controls for some function
inline Rectangl	Ergonomic controls	Provides controls for mirrors, steering wheel, and HUD.
inline Rectangl	Lighting controls	Provides controls for headlights
inline Rectangl	Car modes & Regen levels	Provide access to change drive mode
inline Rectangl	Home button	Back to home page
inline Rectangle	App Library	Display the available Apps
inline Rectangl	Climate Controls	Provides access to climate control functions.
inline Rectangl	Status Bar	Displays key information related to connectivity and user profiles.

Status Bar

Displays information related to the apps & notifications on the top portion of the Infotainment screen homepage. It may provide quick access to the following:

inline Rectangle	Connection type	Indicates type of connection.
inline Rectangle	VinFast Logo	Tap to activate Voice Assistant. See > Infotainment > Virtual Assistant
inline Rectangle	Sharing data to cloud	Indicates data is being shared or synced to the cloud.
inline Rectangle	Sharing GPS to cloud	Indicates GPS info is being shared to the cloud.
inline Rectangle inline Rectangle	Alexa Status (if available)	See > Infotainment > Virtual Assistant
(c / >)	Wireless Charging	Indicates if a device is charging on wireless charging Pad. See > Phone and Projection > Wireless Charger
√×	Chime Mode status	Indicates Chime mode is on mute or reduced.
4	Notification icon	Tap to access Notification Center. See > Infotainment screen > Notifications
11:30 AM	Time	Tap to access Date & Time Settings. See > Settings > General Settings
AlexMark	Active Profile	Tap to access Profile Settings or Profile drop down. See > Infotainment screen > User Profiles
Alex's Phone	Connected device name	Tap to access Device Connect settings or connected devices drop down menu. See > Settings > Device Connect
⊋75%	Downloading status	Tap to access Firmware update page. See > Connected Services > Remote Software Update

**************************************	Passenger Airbag Status	Indicates passenger Airbag Status See > <u>Airbags > Operation and Occupant Detection</u>
ODO 3686 KM	ODO Meter	Indicates current ODO reading. See > Economy & Environment > Trip History

Apps

Apps are located on the bottom right corner of the homepage. To view all the apps, tap on **App library**



The App library shows all the apps available on the infotainment system.

To open App Library:

1. Tap App Library



To Launch an App:

1. Tap App icon on the Home page to open it.

App Library

2. All available apps will be displayed.



icon.

2. Enter keywords in the Search field.

Widgets

This feature permanently displays essential information from apps directly to the Homepage.

To add a new Widget:

1. To add a widget to the home screen, tap Add or Edit Widget.

To search for an app:

- 1. To Search for an app on the app drawer, tap Search
- 2. Select, pick up, and arrange the available widgets in the desired order.

To delete Widgets:

- To add a widget to the home screen, tap Add or Edit Widget.
- 2. To remove a widget, pick up the widget from the home screen and drop it into the trash bin.



NOTE

Editing the Homepage feature is not accessible while driving.

Infotainment screen Use

The Infotainment screen allows the driver to control/set many vehicle settings like infotainment and climate control for an optimal driving experience.

It is recommended that the vehicle owner familiarize themselves with all Infotainment screen-related content presented in the Owner's Manual. This not only ensures they will experience the best performance and features the system has to offer but also lowers the risk of driver distraction associated with Infotainment screen use.

_	
inling	Rectangle
	1 lectarique

When driving, avoid using Infotainment screen controls or reading lengthy text. Driver distraction can lead to accidents, potentially causing serious injuries or death.

inline Rectangle

CAUTION

To remove any marks or fingerprints from the Infotainment screen use a high quality clean microfiber cloth, do not use abrasive materials or cleaning solutions on the Infotainment screen.

Touch display operation

Selecting a function:



- 1. Tap on any function to select it.
- Example: To open an app, tap on it.

Zooming In/Out



- 1. To zoom into maps, images, or web pages, put your finger and thumb on the Infotainment screen and spread them apart.
- 2. To zoom out, put your finger and thumb on the Infotainment screen and pinch them together.

Browsing lists and Panning

Browsing Lists:



- 1. To scroll down the browsing lists, drag from bottom to top.
- 2. To scroll up the browsing lists, drag from top to bottom.

Panning:

inline Rectangle

This allows the user to change the view to another location by dragging on the screen, without changing its magnification.

 View another location on a map or a zoomed in image without changing its magnification by using the panning function.

Notification

Notifications from an application will be shown in the form of a popup on the Infotainment screen. Tapping on a notification will launch the associated app. If untouched, the notification will be automatically dismissed.

Notification Types

There are five different types of notifications:

Notification	Description
Volume Indicator	Indicates volume level of all programs, including Media, Voice Assistance, Parking, and Phone in the vehicle (includes Mute and Minimum variations).
Banner	Notifications inform of an event currently in progress. (Options may be provided related to the event).
ADAS Prompts	Driving related messages/notifications with recommended actions (May also provide instructions directly related to current driving conditions).
Dialog	Messages notify of a task and can contain critical information or seek confirmation or direction from the user.
Warnings and Alerts	Informs the user of a vehicle related issue. (They are shown in Car Control Area and can be reviewed at any time via the vehicle alerts page. Vehicle warnings will be colored depending on importance).

Notification Center

This feature provides a list of all non-critical vehicle messages or status indications.



NOTE

For a list of all active critical vehicle warnings, see > Service > Vehicle Status > Alerts.

To open Notification Center:

- 1. Slide down from top status bar of touchscreen.
- 2. Notification Center window will open directly.
- 3. Tap on any notification from list to view details on the respective App.

To Clear notification in Notification Center:

- 1. To clear all notifications, tap Clear All
- 2. Swipe left to right on any notification to remove it from the list. OR Tap X .

To close Notification Center:

1. Scroll up from the bottom of the touchscreen to Close the Notification Center OR Tap Close.



NOTE

Notification center cannot be accessed while driving or when valet or guest profile mode is enabled.



Reading detailed information on the touchscreen while driving may lead to distraction causing a vehicle collision, injury or death.

User Profiles

Using this feature you can create a profile unique to your likes and preferences. The vehicle will automatically recall the saved settings when the appropriate profile is selected.

Primary profile of the vehicle is linked with a VinFast account. The account must be created on the cloud and approved by the owner before binding to the vehicle.

Secondary profile of the vehicle is linked with a VinFast account. The account must be created on the cloud and approved by the Primary driver before binding to the vehicle.

Examples of vehicle settings that may be saved against a profile:

- · Sound Settings
- Language and System Settings
- Device Connection Settings
- Light Settings
- Navigation Favorites



NOTE

A total of 10 profiles can be created, 1 each for Driver/Owner/Guest/Valet Profiles and 7 Custom Profiles.

Creating new profiles or switching profiles is disabled when the vehicle is not in Park (P).

To create a new Profile:



- 1. Tap Profile Name > Create New.
- 2. Select Profile type if required.
- 3. Enter a name in the text field.
- 4. Tap Next.
- 5. After confirmation, the newly created profile will be saved, and a notification will pop up on Infotainment screen.

To delete a profile:



- 1. Tap Profile Name > My Profile.
- 2. Tap All Profiles

inline Rectangle

3. Tap Three Dot



icon.

4. Tap Delete Profile

inline Rectangle

224

5. Tap **Delete** to confirm.



NOTE

Driver can create, edit, delete, duplicate depending on the active profile roles.

Profile Settings

This allows the user to adjust/recalibrate the following settings:

- Personal Info settings
- · Authentication settings
- Remote control settings
- · Personalization settings

To access the Profile Settings:

• Tap Profile Name > My Profile .

Personal Info

This page displays the following information about the user profile:

- Full name
- Phone number
- VinFast account
- Avatar image

To edit Name, Profile picture:

- inline Rectangle
- Open Profile settings > Personal info .
- Tap Edit



icon.

To login VinFast Account:



1. Tap Link now



2. Enter valid VinFast Account Email

inline Rectangle

3. Tap Link

inline Rectangle

To unlink VinFast account:

inline Rectangle

• Tap Unlink

inline Rectangle

icon.

To edit Avatar Image:

- 1. Tap Edit icon near Avatar image.
- 2. Select from available images.

OR

Tap Image from USB.

- 3. Select an image from the available images on the USB.
- 4. Edit avatar image with Rotate/Flip icons.
- 5. Tap Save.

Authentication

This page allows the user to adjust/recalibrate the following settings:

- PIN
- · Key Fob Linking (if equipped)

To set PIN:



- 1. Open Profile settings > Authentication
- 2. Tap Set Up.
- 3. Enter 6 Digit PIN.

To Edit/delete PIN:



- 1. Open Profile settings > Authentication
- 2. Tap Edit/Delete PIN.
- 3. Enter PIN to confirm.

To Link a Keyfob (if equipped):



- 1. Open Profile settings > Authentication.
- 2. Place the key Fob into the center console See > <u>Driving > Starting and Shutting Down the Vehicle > Low Keyfob</u> Battery.
- 3. Tap Link Key Fob.

To Edit and Remove Key Fob Linking (if equipped):



- 1. Open Profile settings > **Authentication**.
- 2. To activate/deactivate Key Fob Linking, tap Activate/Deactivate.
- 3. To unlink key fob, tap on Unlink.

Remote Control (if available)

To Link VinFast App:

- 1. Tap App Linking > Start Linking .
- 2. To link from VinFast app, scan QR code.
- 3. After confirmation, a notification will pop up on screen.



NOTE

Only one phone can be paired at a time. Guest profile can't change profile's settings.

To Unlink VinFast App:

1. Tap Unlink



icon.

2. Tap Unlink to confirm.

Personalization

If equipped, this allows the driver to save/set Steering Wheel, Side mirror and Driver's Seat positions to a profile. These settings will be available upon the next profile login.

To save/delete positions:



- 1. Tap Personalization.
- 2. To save the current position of Steering Wheel / Side mirrors / Driver's Seat, tap Save new.
- 3. To delete a saved position, tap Delete.

Valet Mode

This feature, when activated, disables certain system features and functions preventing unintended use by another person or access to personal information.

Valet mode can control the following when active:

- · Restrict access to user profiles.
- Prevent the viewing of Home and Work navigation locations.
- Front trunk and glove box are locked. (Rear tailgate can still be accessed).
- Multimedia: Audio, Video, Image and radio locked.
- · Wi-Fi, Bluetooth, USB locked.
- Vinpilot disabled.
- · Prevent viewing of repair history.
- · Navigation disabled.
- · Voice commands disabled.
- · Self-learning driving behavior feature OFF.
- Games, entertainment (watching movies, listening to music), web browsing unavailable.
- Smart Homes control unavailable.
- · Prevent viewing of Calendar and schedule.
- Firmware updates/Software updates disabled.

Activation

Valet mode can be activated by any of the following methods:

- · Changing profile to Valet.
- · VinFast App (if available).

To activate Valet Mode by changing Profile



1. On the status bar, tap Profile Name



2. To activate Valet Mode, tap on Valet

inline Rectangle

227



NOTE

Guest profiles cannot activate Valet Mode.

To activate Valet Mode by VinFast App (if available)

- 1. Ensure that the VinFast App is successfully paired with the vehicle.
- 2. From the home screen, tap on Remote Control.
- 3. On Valet Mode feature, select On/Off.

Valet Mode Settings Overview

Following settings can be adjusted:

- Valet PIN Edit Valet PIN.
- Speed Limit Limit the maximum speed of the vehicle.

To access Valet Mode settings:

4. Tap App Library



on the Infotainment Screen.

5. Tap **Settings**



> Security Settings



> Valet Mode.



NOTE

The speed limit can be adjusted in the range of 40-110km/h.

Deactivation

Valet Mode can be deactivated by any of the following methods:

• By using Valet Mode PIN.

To deactivate by using Valet Mode PIN:

1. Tap Valet mode > Exit Valet Mode.
OR

Tap Exit Valet Mode.

2. Enter a valid PIN.

Camp Mode

This feature enables the user to extend use of Infotainment screen to access music, web surfing and watch media files in the car without the vehicle accessory power shutting down. Both front and rear (if equipped) Infotainment screen will

be operable in the Camp mode.

Activation

Camp mode can be activated by using:

- · Car mode on the infotainment
- VinFast App (if available)

Preconditions for camp mode activation:

- The vehicle must be in Park (P).
- · The Electric Parking Brake must be applied.
- Battery state of charge must be greater than 25%.

To activate Camp Mode:

1. Tap Car mode



on the Infotainment Screen.

2. From vehicle mode selection list, tap Camp Mode




To activate Camp Mode by VinFast App (if available)

- 1. Ensure that the VinFast App is successfully paired with the vehicle.
- 2. From the home screen, tap on Remote Control.
- 3. On Camp Mode feature, select On/Off.

Deactivation

To deactivate/exit Camp Mode:

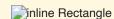

Tap Exit Camp Mode



on the Car Control Area.



NOTE

The vehicle cannot be started when in Camp Mode. All the infotainment features will be functional.

Camp mode cannot be accessed if the battery percentage is below 25%.

Camp Mode will be automatically deactivated if battery percentage is below 15%.

Unfasten the seat belts before activating the mode.

The touchscreen will be locked automatically if no user activity is detected.

Wash Mode

This feature prepares the vehicle by closing all windows, locking the charge port door and disabling the windshield wipers before entering a car wash. The vehicle is in Park (P) the whole time when Wash Mode is activated.

To activate Wash mode:

- 1. Tap Car mode on the Infotainment Screen.
- 2. From vehicle mode selection list, tap Wash Mode.
- 3. Make sure all the pre-conditions are met to start Wash Mode.
- 4. If any of the pre-conditions are not met the X icon will be displayed on Infotainment screen.
- 5. Tap Start Wash Mode.
- 6. The vehicle systems will check a list of additional conditions which are required to be compliant for Wash Mode activation.



NOTE

Ensure that the car wash is suitable as per the vehicle dimensions.



The vehicle's braking system effectiveness may be reduced after washing the vehicle. Brake carefully while paying attention to the road until braking system effectiveness is fully restored.



CAUTION

Ensure the vehicle remains in Wash mode until the vehicle car wash process is complete.

Automatic car wash machines can damage the vehicle, such damages are not covered in Manufacturer Warranty.

To deactivate Wash Mode:

1. Tap Exit Wash mode.



NOTE

Wash Mode will be automatically deactivated if the driver engages Drive (D) and speed exceeds 16 km/h (10 mph).

Pet Mode (if available)

This feature allows the pets to be left unattended in the vehicle by creating and maintaining a comfortable environment. A notification will be displayed on the touchscreen when this feature is activated.



Pet Mode is not intended for people.

Always stay in close proximity to the vehicle when using Pet Mode.

Check the countries laws and regulations for any restrictions on leaving pets unattended in vehicles.

Do not completely rely on Pet mode. Never leave pets in the vehicle unattended for long periods of time.

Constantly monitor the vehicle temperature from mobile device.

Always monitor battery charge levels from your mobile device, since a low battery state of charge will deactivate Pet Mode.

Activation

Preconditions for activating Pet Mode

- Pet mode is activated only if the vehicle's battery state of charge is greater than 25%.
- Vehicle Gear position must be in Park (P) and seatbelt should be unfastened.

Pet mode can be activated by any of the following methods:

- Via the VinFast app (if available).
- Car mode on the Infotainment screen

To activate Pet Mode using Car mode on the infotainment:

1. Tap Car mode



on the Infotainment screen.

2. From vehicle mode selection list, tap Pet Mode



To activate Pet Mode by VinFast App (if available)

- 1. Ensure that the VinFast App is successfully paired with the vehicle.
- 2. From the home screen, tap on Remote Control.
- 3. On Pet Mode feature, select On/Off.

Deactivation

Pet mode will be deactivated automatically if:

- Climate control is turned off.
- When Park (P) is disengaged.
- The vehicle's battery state of charge is less than 5%.

To deactivate Pet Mode

Tap Exit pet mode

To change the default message:

1. Tap Edit



icon.

- 2. Enter the message in text field, E.g. phone number.
- 3. Tap Change.



WARNING

When the battery state of charge reaches 20%, 15% and then 10%, notifications will be sent to the owner via the VinFast app. When the battery level reaches 5% the system will send another warning to the VinFast app and Pet Mode will be deactivated.

7.2. Infotainment

Infotainment Overview and Key features

The infotainment system can be controlled by using the Infotainment screen, center console controls, steering wheel controls, and voice assistant. It is used for playing various types of media sources.

- Radio The Radio app allows the listening of FM radio frequency band. See > Infotainment > Radio.
- Bluetooth Audio When connected to a valid Bluetooth device you can listen to stored or streamed audio via Bluetooth Media. <u>See > Infotainment > Bluetooth Audio</u>.
- USB Media When connected to a valid USB device you can listen to available audio and video via USB Media. See > Infotainment > USB Media.



- Podcast The Podcast app allows you to download digital audio files on a variety of topics. <u>See ></u> <u>Infotainment > Podcasts</u>.
- Browser The Browser allows drivers and passengers to browse the Internet from the vehicle's Infotainment screen. See > Infotainment > Browser.
- Video Streaming <u>See > Infotainment > Video</u> <u>Streaming.</u>
- Games See > Infotainment > Games.

Media widget

When you touch on a media widget, the associated media source will open in full screen.

Widget overview:

Widget overview:

inline Rectangle	Thumbnail
inline Rectangle	Heading (song name, channel etc.)
inline Rectangle	Sub Heading (Artist name)
inline Rectangle	Media Controls (Previous, Play/Pause, Next)
inline Rectangle	Media Source Information

Media widget list:

- Radio FM
- Bluetooth
- USB Media
- Alexa Media
- Android Media
- Apple CarPlay



Radio

The Radio app allows to tune into FM radio frequency bands and is available as part of the Music App. The Radio app can be operated from both front and rear (if equipped) Infotainment screens.

Operating the Radio

Radio Overview

inline Rectangle	Favorites toggle
inline Rectangle	Media source: Radio/USB/Bluetooth/
inline Rectangle	Seek/scan/station skip

Launching the Radio App

inline Rectangle

inline Rectangle

> Radio

inline Rectangle

inline Rectangle

Radio can be accessed using any of following methods:

- 1. On the touchscreen, tap App Library
- 2. Tap **Media**
- 3. Press the **SOURCE** button on the steering wheel controls and select **Radio**

To launch Radio app on Rear Infotainment screen

1. Tap Media



> Radio



inline Rectangle

NOTE

Any media selected from the rear Infotainment screen media player will also be shown and can be controlled from the front Infotainment screen.

When media is selected and starts playing from the rear Infotainment screen any previously played content from the front Infotainment screen will stop.

Station List

The radio station list is automatically updated with nearby stations for each radio frequency band. If available, the station name and radio frequency is displayed on the



icon on top right corner.

2. Enter station frequency in Search field.

screen. The **Radio Bar** below the list of stations allows the seek/scan and station skip functions.

To manually search a station:

- 1. Tap Search
- Matching stations will appear below the search field.Select your preferred station.



NOTE

The station list will automatically refresh after a period of time.

To control the radio via the steering wheel controls:

• See > Steering Wheel > Functions

Radio Favorites

Favorites can be saved from FM stations lists.

To save a Favorites station:

- 1. From FM station list tap the heart icon next to the station you wish to add as a Favorites.
- 2. The Heart icon will illuminate.
- 3. The station will now appear in Favorites list.

To view Favorites:

• To view the list of Favorites Stations, tap **Favorites** in the Radio App.

To remove/rename a Favorites station:

 From Favorites list, tap Three Dot icon next to a Favorites and select Unfavorite OR

• To remove from Favorites, from the main station list tap the **Heart** icon.

To rename a favorite station:

- Select the favorite station to be renamed and tap Three Dot icon.
- 2. Tap Rename.
- 3. Change name.
- 4. Tap Done.

To rearrange favorite Stations:

- 1. Tap and hold the station to rearrange in the station list.
- 2. Drag the station to desired position.
- 3. Release station. The Favorites station will drop and snap into highlighted position.



NOTE

The Favorites list will be sorted in sequential order with the most recently added station at the top.

Some radio stations may be out of range. These stations will remain stored under Favorites but will not be visible in the Station list

The maximum number of characters allowed when renaming a station is 16.



Continuous use of Infotainment screen controls when driving may lead to distraction causing an accident, leading to serious injuries or death.


Sustained exposure to high sound levels greater than 85 decibels may cause hearing damage.

Bluetooth Audio

Use Bluetooth to connect to a valid Bluetooth device and listen to stored or streaming audio/video via Bluetooth Media. Bluetooth Media is available as part of the Music App.

For more information about Bluetooth connections. See > Settings > <u>Device Connect.</u>

Bluetooth Audio Overview

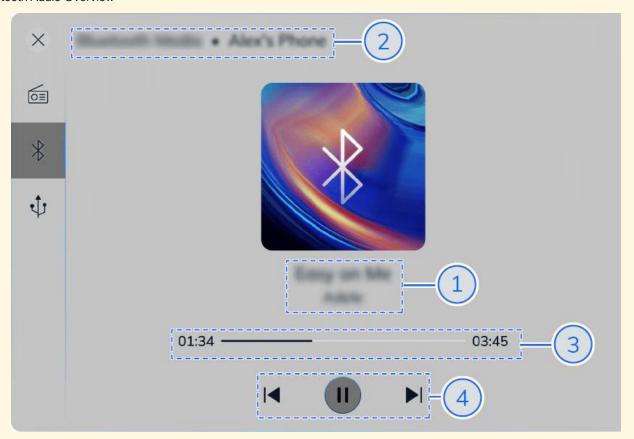

1	Current Track/Artist
2	Device Switch
3	Progress bar
4	Play/Pause/Track skip

Playing Media

To launch Bluetooth Media:

Bluetooth Media can be accessed by any of the following:

1. Tap App Library

inline Rectangle

on the Infotainment screen.

2. Tap Media

inline Rectangle

> Bluetooth Media

inline Rectangle

1. Press SOURCE button on the steering wheel controls and switch to Bluetooth Media



To launch Bluetooth Media on Rear Infotainment screen:

1. Tap Media

inline Rectangle

> Bluetooth Media

pinline Rectangle

To change Bluetooth devices:

inline Rectangle

1. Tap Drop down arrow

pinline Rectangle

2. Select available Bluetooth device from the list

inline Rectangle

To change track:

1. To change track, use Controls
inline Rectangle
2. You can change track via connected Bluetooth device
OR
Use steering wheel buttons to change the track.
See > Steering Wheel > Functions.



Do not operate a mobile device while driving. This can cause distraction leading to accident.



NOTE

When Bluetooth is selected and sound is inaudible, check the volume of the infotainment system and mobile device.

USB Media

Connect to a valid USB storage device to play the available audio and video content. USB Media is available as part of the Music App.

For more information about USB connections, see > <u>USB Ports & Power Outlets</u>.

To launch USB Media:

- 1. Insert a USB containing Media content in the front USB Data Port.
- 2. Tap App Library



on the Infotainment screen.

3. Tap Media



> USB Media



OR

1. Press the Source button on the steering wheel controls and switch to USB Media



To launch USB Media on Rear Infotainment screen:

- 1. Insert a USB containing media content in the front USB data port.
- 2. Tap Media app



> USB Media tile .





NOTE

A USB must be inserted into the front USB Data port to access media content via the USB media player.

Any media selected from the rear Infotainment screen media player will also be shown and can be controlled from the front Infotainment screen.

When media is selected and starts playing from the rear Infotainment screen any previously played content from the front Infotainment screen will stop.

Supported USB Media file types:

- Music: M4A, AAC, AMR, WAV, MP3, OGG, FLAC
- Video: MP4, TS, WEBM, MKV, 3GP

USB Media Player

Media Player Overview

The USB media player provides details of the current playing media and media playback controls.



inline Rectangl	Expand Icon
inline Rectangl	Album Title
inline	Song Title/Artist Name
inline Rectangl	Song Progress Bar
inline Rectangl	Media Controls- Shuffle, Previous, Play/Pause, Next, Repeat
inline Rectangl	Show/Hide Track Queue

To access USB Media Player:



• Tap the 'currently playing' song bar at the bottom of the USB Media page



or swipe up anywhere on the Media Player Bar.

USB Media tabs

On main screen of USB Media you may find:

- Recents
- Artist
- Genres
- Videos
- Folder

Recents

This page shows a list of recently played media through the USB Media device.

To open Recents page:

• To open Recent window, tap Recent tab.



NOTE

Recents shows maximum of 20 recently played songs.

Artists


This page shows a list of available Artists on the USB Media device.

To open Artists page:

- 1. Tap **Artists** tab.
- 2. Tap any Artist name from the list.

Artist page Overview



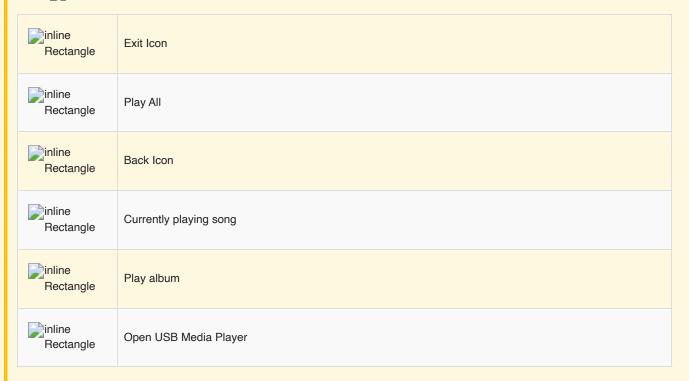

Genres

This page shows a list of available music Genres on the USB Media device.

To open Genres page:

- 1. Tap Genres tab.
- 2. Tap any Genre name from the list.

Genre page overview inline Rectangle inline Back Icon Rectangle inline Rectangle Shuffle Play All inline Genre Name Rectangle inline Add track to Queue Rectangle inline Media Controls - Previous, Play/Pause, Next Rectangle

Videos

This page shows a list of available Video files in the USB Media device.

To open Videos page:

- 1. Tap Videos tab.
- 2. Tap any Video file from the list.

Videos page overview



inline Rectangle	Expand Icon
inline Rectangle	Video player queue
inline Rectangle	Show/Hide Track Queue
inline Rectangle	Folder Name
inline Rectangle	Full-screen Mode
inline Rectangle	Video Title
inline Rectangle	Video progress bar
inline Rectangle	Media Controls - Shuffle, Previous, Play/Pause, Next, Repeat



NOTE

In full screen mode, the media controls time out after 5 seconds of inactivity. When you touch the screen again, the video will be paused and media controls will appear.

Video is disabled while driving.

Folders

This page shows a list of available Folders that contain media files on the USB Media device.

To open Folders page:

- 1. Tap Folders tab.
- 2. Tap any Folder name from the list.



NOTE

Only Folders containing media files are displayed on screen.

Folder page overview



inline Rectangle	Back Icon
2	Shuffle Play All
3	Add Track to Queue
4	Media Controls - Previous, Play/Pause, Next
5	Currently playing song

USB Search

This feature can be used to search for any media content in the USB media device by pressing the Search icon.

To Search a file in USB Media:

1. Tap Search



icon.

- 2. Type Media name in the Search field.
- 3. Tap Search.



NOTE

Search icon and keyboard will be disabled while driving.

Podcasts

Use this feature to download and listen to Podcasts in digital audio files on a variety of topics.

To launch VNE Podcasts:

1. Tap App Library




on the Infotainment screen.

2. Tap VNE Podcast



OR

1. Press the Source button on the steering wheel controls and select VNE Podcast	
inline Rectangle	
VNE Podcast Player overview	
inline Rectangle	
inline Rectangl	Podcast Topic, Release Date, Title
2	Playback Speed
3	Progress Bar
4	Download Podcast
5	Media Controls - Previous, Rewind, Play/Pause, Forward, Next
6	Queue List
7	Auto Play Toggle
8	Exit Icon
9	Expand Icon
10	Queue Icon
Library Downloaded podcasts are saved in the Library.	
To open Podcast Library:	

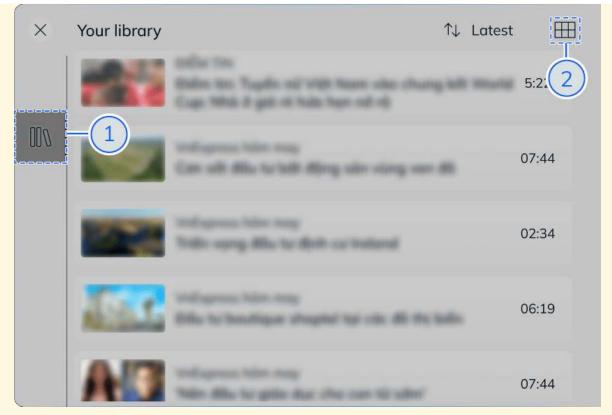

• Tap Library



To change Library View:

• Tap Change View



icon.

To delete a Podcast:

• Tap Delete




icon on the top right corner of VNE Podcast player.

• Tap **Delete**.

Recents

The list of Podcasts that have been played will automatically be saved in Recents.

To view recently played Podcasts:

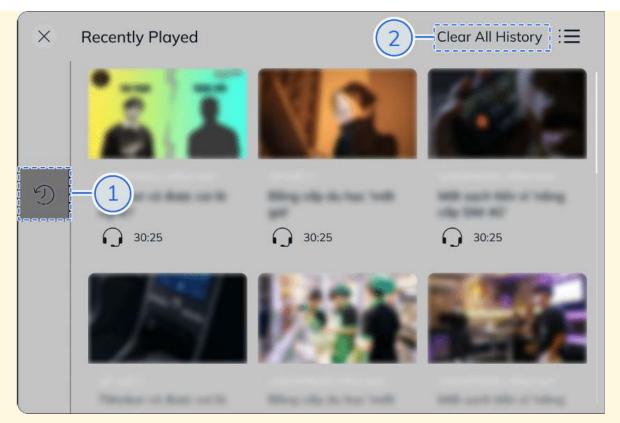

• Tap Recents



To clear recently played Podcasts:

• Tap Clear All History



Podcast Search

To Search for Podcasts:

1. Tap Search



icon .

- 2. Type name of the podcast in the **Search** field.
- 3. Tap Search.
- 4.

Browser

If available, the Browser allows the driver and passengers to browse the Internet from the vehicle's touchscreen. The vehicle must be connected to either a Wi-Fi access point or have an active eSim subscription to launch the browser.



NOTE

The Web Browser requires a Wi-Fi or cellular connection, local carrier charges will apply.

Do not use the browser when driving. Failure to follow this can cause server injuries.

To launch the Browser/Internet App:

1. On the touchscreen, tap App Library



2. Tap Internet



Games

The Infotainment system may includes some fun games to enjoy while in camp mode or while waiting for the vehicle to charge. Games will be listed in the App library, when launched will be displayed on the front Infotainment screen with sound provided by the vehicle's sound system. Examples of games that may be included:



· Baga Big Air



Nancy Drew



• Sugar Pop Paradise

Detail on how to play each game can be found inside each app once launched.

To launch a game:

1. Tap App Library



on the Infotainment screen.

2. Tap the game you wish to launch.



Never attempt to play games on the Infotainment screen while the vehicle is in motion. Always ensure the vehicle is parked safely, the vehicle park brake is engaged and Park (P) is selected before launching a game app.



NOTE

Availability of games on the infotainment system may vary depending on the car variant and market region.

Voice Assistant

If available, this feature allows the user to activate and use many of the vehicle functions by using their own voice. The user can use specific terms to get certain activities done by the system. Using Voice Assistant ensures the drivers attention is focused on the road.

How to Trigger Voice Assistant



Voice Assistant can be triggered by any of the following methods:

- 1. By using the term "Hey VinFast / Alexa" (if available).
- 2. Short pressing **VA button**



on the steering wheel.

3. In the status bar, tapping the VinFast logo.

To Trigger Mirrored Phone's Voice Assistant:

Mirrored Phone's Voice Assistant can be triggered by any of the following methods:

- 1. By using the term "Hey Siri" / "Hey Google".
- 2. Long pressing the VA button on the steering wheel.



NOTE

Mirrored Phone's Voice Assistant (VA) can only be accessed if CarPlay or Android Auto is connected.

Only one Mirrored Phone's Voice Assistant can be used.

To End a Voice Assistant session:

- 1. Short press the VA button on the steering wheel.
- 2. Press anywhere around the VinFast logo in the status bar.
- 3. Use the term "Exit" or "Cancel".

To Access command list Help (VinFast Voice Assistant):

- 1. Use the term "Hey VinFast" and ask about "Help", "Guide" etc.
- 2. Command list will be displayed on touchscreen.
- 3. Scroll down to see all available options.
- 4. Tap any option to expand it.



NOTE

Command list Help is only shown when the vehicle is in Park (P). A voice prompt is provided to guide the user if the car is in Drive.

Examples of VinFast Voice commands:

Category	Command
Apps	Open Settings app Open EV app Open ADAS app
Phone	Call James, Call Mom Open Recent call Read Message
Navigation	Navigate to coffee shop
Media	Turn on Bluetooth
Climate control	Increase temperature Decrease temperature Turn off the air conditioner
Calendar	Scheduled appointment What is todays date?
Settings	Open lighting settings Open Wifi settings Open display settings
General	Tell me about vehicle features How to fix vehicle issues example (how to fix TPMS issue) Book charging

To access Voice Assistant settings:


To access Voice Assistant Settings, See > Settings > Voice Assistant

7.3. Car Control Area

Car Control Area Overview

Car Control Area is located on the left side of the Infotainment screen which displays vehicle and system status information along with providing access or adjustment to key vehicle controls. Car Control Area replaces many of the displays and controls traditionally supplied by a driver's instrument cluster or physical switches and buttons. The Car Control Area display is dynamic and will change view mode depending on the current vehicle state, gear selected or feature or function activated. Key features of Car Control Area are listed in Display Overview.

Display Overview

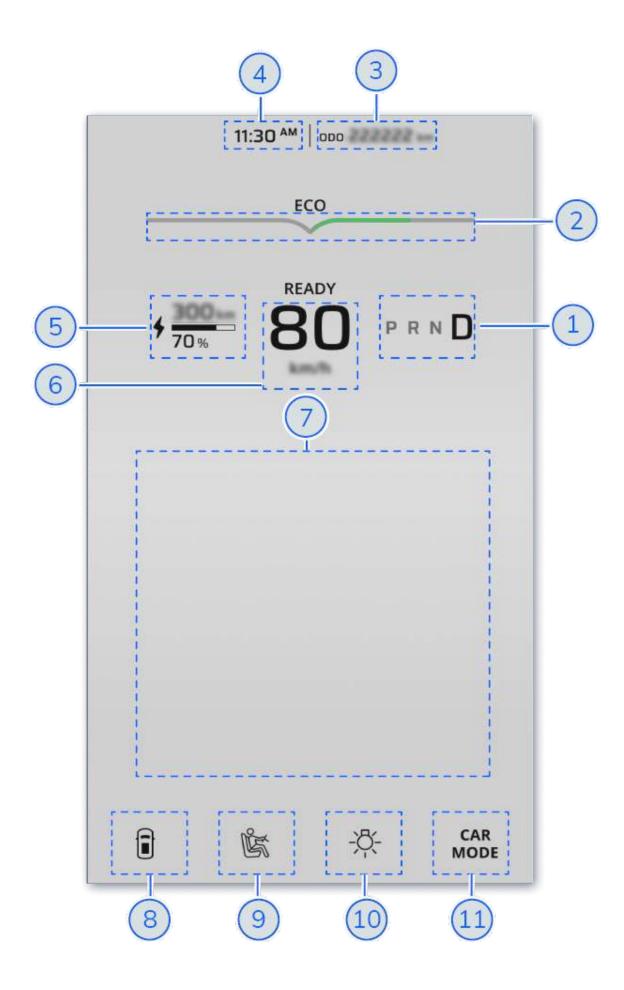

1	Gear Selected	A indicator will display on status bar on the top of Car Control Area
2	Power and Regen Gauge	
3	Odometer	Odometer reading of vehicle
4	Time	
5	Battery State of Charge / Vehicle Range	Touch to access EV Battery App
6	Speedometer	Current speed of the vehicle in km/h or mph
7	Car Control Zone	
8	Quick Control	Tap to adjustment the liftgate, Hood, Sunroof Open/Closed and Wiper.
9	Ergonomic control	Tap to access adjustment the HUD, Mirror, Steering wheel
10	Lighting Controls	Tap to access exterior lighting controls including headlights
11	Car mode	Tap to access adjustment the car mode and regen level

Car Controls via Car Control Area

Depending on the Car Control Area view mode access to control and adjustment of certain vehicle features will be provided. When control is available a round touch target will appear alongside the vehicle feature. Tapping on the touch target will open the controls card.

Viewing Modes

Depending on vehicle speed and selected gear the Car Control Area vehicle will automatically change view mode.

In addition Car Control Area will also show dynamic representations of the following:

- · Liftgate and Hood open/closed
- · Headlights and Taillights
- · Charge Handle and Charging Status
- · ADAS features Enabled or Active

Car Control Area Chase Me View

Chase Me View will be displayed whenever the vehicle is in motion. In Chase Me View access to rear cargo compartment, hood and steering wheel adjustment control cards will be disabled. Depending on which features or functions are currently active the following may be displayed:

- · Lane assist guidelines
- Forward Collision Warning System status and Gap Setting

- Adaptive Cruise Control System status
- Highway Assist and Auto Lane Changing Assist status

Car Control Area Parked View

Parked View will be displayed whenever the vehicle is stationary. In Park View the following car controls will become available:

- Camera
- · Turn warning sound on/off
- · Parking assistance (if equipped)

Warning Lights and Indicators


All important vehicle system related warnings and alerts will be shown on the Infotainment screen display in the lower section of Car Control Area. The driver may tap on the popup to view further detail of each warning. See > Vehicle Alerts.

In addition to a warning notification a corresponding telltale may illuminate in the upper section of Car Control Area.

Telltales will stay illuminated until the vehicle fault is repaired or resolved.

Telltale Icons:

	Airbag Malfunction
Ä	Seatbelt Reminder
(ABS)	ABS Malfunction
OFF	Automatic Emergency Braking (AEB) Off
■	Auto High Beam
	High Beam
和	Front Fog Lights
○ ≢	Rear Fog Lights
	Child Presence Detection Off (if available)
OFF	ESC/TCS Off
دن	EV System Malfunction

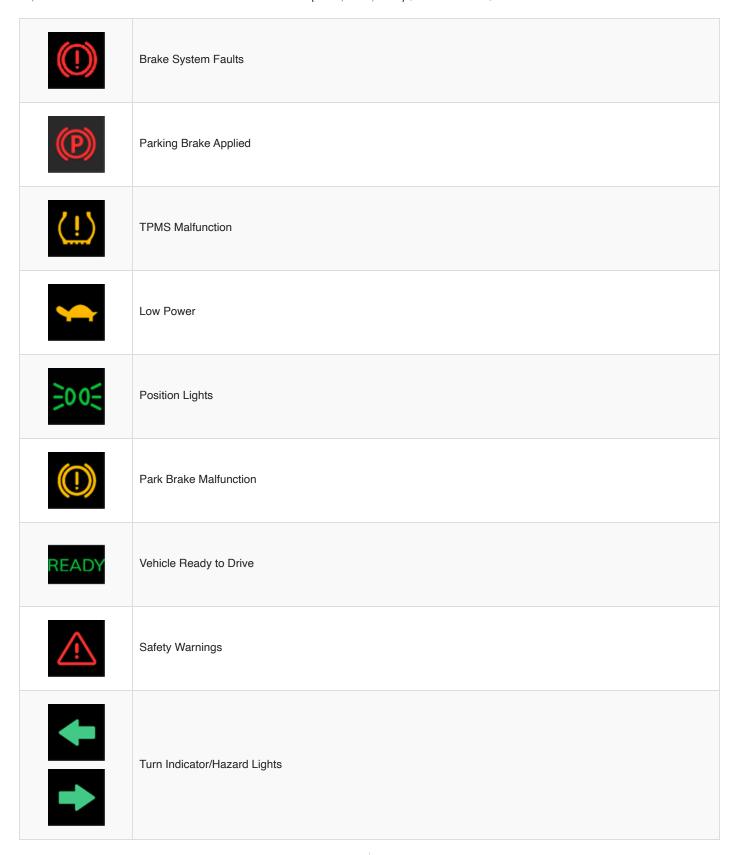

ADAS Indicators

ADAS indicators appear on the Car Control Area screen, directly below the speedometer. Content includes important information related to ADAS features such as; Traffic signs, Adaptive Cruise Set speed and ADAS related telltales.

Trip Information

The Trip information app calculates key driving statistics about each vehicle journey and displays them on the Infotainment screen.

A summary of trip information is displayed in the status bar above Car Control Area and a more detailed summary of trip history and driving statistics can be found in Trip History.

Trip Type





There are three separate trip meters available:

- 1. A
- 2. B
- 3. AUTO

to Toggle through Trip A / B /AUTO

To reset the currently displayed trip information:

on the left stalk

Trip Information Page

on the Infotainment screen.

A summary of the above information is shown in the status bar.

To Toggle trip between trip meter displays on the status bar:

Press



• Long press of TRIP button



To open the detailed trip information page:

• Tap ODO/Trip info



To select a trip meter:



• Tap **Trip** to select



• Tap Reset

To reset trip from infotainment screen



Tire Pressure Monitoring System

As an added safety feature, the vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale



when one or more tires is significantly under-inflated. Tap on the warning will take the user to the vehicle alerts page.

Accordingly, when the low tire pressure telltale illuminates, the driver should stop and check the tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel

efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. See <u>> Vehicle Alerts</u>.

If the vehicle loses the connection with a tire sensor, a **Sensor Connection Lost** warning will show up. For more information, See > Maintenance > Wheels and Tires > TPMS.



WARNING

If the TPMS sensor gets damaged it may not function.

To access Tire pressure from the Vehicle Health page:

1. Tap App Library



on the Infotainment screen.

2. Tap Service



> Vehicle Status



> Tire Pressure.

Tire Pressure Warnings

TPMS system warns the driver if the tire pressure is below or above the recommended pressure. If an issue or missing sensor signal is detected, a TPMS alert symbol



will be displayed on the Infotainment screen. In addition an alert popup will be shown on the screen and an audible chime will be generated at the same time.

For more details, See > Maintenance > Wheels and Tires > TPMS.



NOTE

Tire pressures should be checked regularly, using an accurate pressure gauge when the tires are cold. Inflate the tires to the recommended pressure as specified by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.



WARNING

Driving with incorrectly inflated tire(s) can affect the vehicle handling, steering and braking. This can lead to an accident, causing serious injury or risk to life.

Always adopt the correct tire pressure in accordance with the driving condition and vehicle load. Overloading can lead to loss of vehicle control and increase the risk of an accident.

Incorrect tire pressure increases tire wear and has a negative effect on driving and braking behavior, which increases the risk of an accidents.

TMPS Failure

TPMS failures can occur for a variety of reasons, including the installation of replacement or alternate tires or wheels, which prevents the TPMS from functioning properly. After

replacing one or more tires or wheels on the vehicle, always check the TPMS malfunction indicator light to ensure that the replacement tires or wheels allow the TPMS to continue to function properly.



NOTE

The TPMS malfunction indicator and the tire pressure indicator light are combined



. When the system detects a malfunction, the indicator flashes for about one minute before remaining lit continuously. This sequence will be repeated on subsequent vehicle starts as long as the malfunction exists. When the TPMS malfunction indicator is activated, the system may fail to detect or signal under- or over-inflated tires as intended. Please visit a VinFast Service Center for more information.

Vehicle Alerts

Vehicle Alerts page shows all vehicle related alerts and warning messages that are currently present on the vehicle. The alerts page will also provided additional information or recommended user actions associated with each vehicle warning.

When a vehicle alert is triggered it will first be displayed in a notification below Car Control Area along with a matching telltale icon.

To view Vehicle Alerts:

1. Tap the **Popup Message** below Car Control Area OR,

Tap App Library



on the Infotainment screen.



2. Tap Service



> Vehicle Alerts > Alerts

3. Tap **Expand** icon to view details of alerts.



WARNING

Vehicle alerts will remain in the Alerts tab until the fault is repaired by an approved technician. Follow all warning message instructions and if required contact the nearest VinFast Service Center as soon as possible. Failure to do this may result in vehicle damage or personal injury.

7.4. Head Up Display

Head Up Display

The Head Up Display or HUD is a feature that is used to help keep the driver's attention on the road ahead while

displaying all the necessary information on the windshield. The HUD projects the selected information on the windshield, in the driver's field of vision.

Head Up Display shows the following information:

- 1. Navigation
- 2. Speedometer, Gear position and Range
- 3. ADAS Content
- 4. Notifications and Alerts



NOTE

Unfavorable lighting conditions may affect the visibility of the display.

Visibility of the HUD might be affected if the driver is wearing a pair of polarized sunglasses.

It is recommended to stop the vehicle before adjusting the HUD settings.



CAUTION

Do not tint or add metallic coatings to the front windshield glass. This can obscure the Head-Up Display image.

Don't attach any objects to the windshield glass or place anything on the crash pad.

Install only approved windshield glass designed for operation with the Head-Up Display when replacing the front windshield glass. Failure to do so may cause images to appear duplicated on the windshield glass.

Head Up Display Adjustment Settings

To access Head Up Display Settings:

• Tap Ergonomic icon



in the Car Control Area area of the Infotainment screen.

· Tap to Head up display icon



to open the Head up display setting.

Content Options

Use Head Up Display Settings to customize the content displayed on the Head Up Display.

The following content options are available in Head Up Display Settings:

- Show/Hide Navigation
- · Show/Hide Driver Assistance.
- Show/Hide Turn Indicator
- · Show/Hide Blind Spot Detection
- Show/ Hide Rear Cross Traffic Alert
- · Adjust the brightness of the HUD using the slider.
- Select the primary color: Green, Blue, or White.
- · Change Battery Unit display on HUD screen
- Turn on/off HUD
- · Adjust HUD position

Height and Rotation

You can adjust the Head Up Display position on the windshield to suit your driving position from the Head Up Display Settings.

To adjust Head Up Display height:

- 1. Tap Position adjustment.
- 2. Press Up (+) or Down (-) buttons on the steering wheel controls to adjust the height of Head Up Display.

To adjust Head Up Display Rotation:

• Press Left (<) or Right (>) arrow buttons on the left steering wheel controls to adjust rotation of Head Up Display.

7.5. Navigation

Navigation Overview

The Navigation app allows the driver to navigate to a selected destination by displaying the route information on the touchscreen and on the Head Up Display (HUD).

To open Navigation App

- 1. On the home screen, tap the Navigation widget OR,
 - 1. On the touchscreen, tap App Library



2. Tap Maps



Live traffic

If available, through Infotainment System and/or C-App, Live traffic shows real-time traffic status that helps you to keep a

check on the traffic situation so that you can better plan your route.

When on map view screen, choose Live traffic.



NOTE

Functionality and availability may vary depending on the market and vehicle version. Contact an authorized VinFast dealer for more information

Satellite view

If available, through Infotainment System and/or C-App, the satellite view enables you to get satellite images on the map.

It can be handy to see a real-world top-down view of the location.

When on map view, choose Satellite view.



NOTE

Functionality and availability may vary depending on the market and vehicle version. Contact an authorized VinFast dealer for more information

Navigation Safety

Ensure the following instructions or warnings have been read and fully understood before using the navigation system.



WARNING

Failure to use the navigation system safely can lead to an accident, serious injuries, or death. Ensure that the user is aware of all local traffic laws and road characteristics. It is always the driver's responsibility to determine the safety of the route being suggested. Driver should operate the vehicle appropriately according to current road and environment conditions.

Road Traffic Regulations must always be followed even when driving with the assistance of the Navigation System. The Navigation system is not a substitute for safe driving and with due care.

Destination Search

The user can Search for a destination using the Search box, Point Of Interest (POI)/ Category, and Saved destinations.

To search for a Destination:

- 1. Tap on Search field.
- 2. Enter Name of the destination.
- 3. Tap on Search.



WARNING

Do not use Search feature while vehicle is in motion, as it can cause distraction and lead to accidents causing serious injuries or death.

Search by Category

Destinations can be searched by category.

To search by Category/Point Of Interest (POI):

1. Tap Search



icon.

2. Select desired Category from the available options.

Place Detail Card

The Place Detail Card will be displayed on the Infotainment screen after selecting a destination. The Place Detail Card shows detailed information about the selected destination including (when available):



NOTE

You can also make a call by tapping on phone number displayed on the Place Detail Card.

Saved Places

Places can be saved as Favorites, Home or Work.

To save a Place:

1. Tap **Heart** icon on the Place Detail Card to save a place as Favorite.

OR

Long press Heart icon to open Saving Options.

2. Select an option from the list to save/set a place as Favorite /Home/ Work.

To remove Saved Places:

- 1. Tap on **Favorites**.
- 2. Select the desired Saved place from the list.
- Long press the saved place and tap **Delete favorite**.

OR

• Tap Home icon then tap Remove Home.



NOTE

Only one place can be saved as Home/Work. Also, same place cannot be saved in both Home and Work category, at the same time.

The Navigation App requires a cellular connection for some functionality. Local carrier fees will apply.

Route Preview

A Route Preview is displayed on the My Route card when a destination has been selected.

To open My Route Card:

Tap Directions.

Alternative Route

All the available routes are displayed in My Route card. Select the route according to your preference.

To select a Route:

Tap any of the available Route options.

Route Details

This shows detailed information of a selected route. It displays the information on Travel Time, Current Battery State of Charge, Remaining distance to the Destination, Approximate Battery State of Charge Upon Reaching the Destination and Turn by Turn Navigation on the selected route.

Navigational Route Preference

Use Route Preference to select specific route types and route options. Some of the available route preferences are:

- · Auto -Add Charging
- Route type Fastest, Shortest
- Route options such as Avoid Toll roads, Avoid Highways

To add a Stop on a Route:

- 1. Tap Add Stop.
- 2. Enter destination name in the Search field or select a Category from the list.
- 3. Select the place from the list or category.
- 4. Tap Add Stop.

To Remove a Stop:

- 1. Select any place from the list.
- 2. Tap Remove Stop.

To change Route order:

- 1. Tap Edit Route on the Route Details card.
- 2. Tap and hold Three Dash icon to move it up or down.
- 3. Tap Finish.


To delete Route:

• Tap Delete icon.

Navigation Guidance View

Navigation Guidance View and turn by turn navigation information is displayed on the Infotainment screen once a navigation route is selected. If another native App is opened, the turn by turn navigation information is displayed on Head Up Display (HUD).



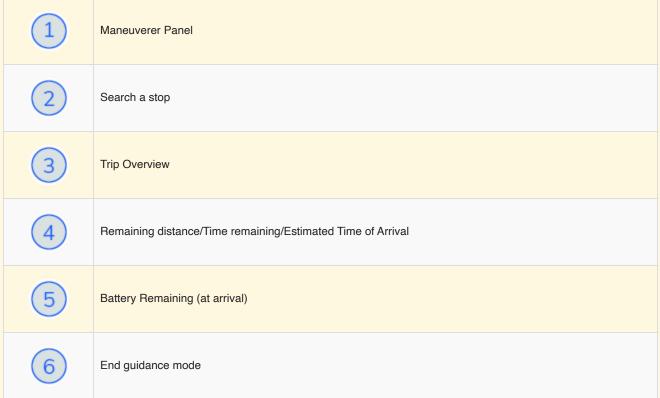

To add a stop in the route:

1. Tap Search a stop



- 2. Select any Category.
- 3. Select a place from the list.

4. Tap Add Stop.

To remove a stop:

• Tap Remove Stop.

Navigating with an EV

The Navigation system equipped in this vehicle has a series of unique features specifically designed to support driving and navigating with an Electric Vehicle.


Charging Station Finder

Driver can find and add a charging station as a destination using Destination Search. See <u>> Navigation > Destination</u> Search.

Automatic addition of charging stations along a route

The system will automatically add charging stations to a chosen route if it determines the battery state of charge will not be sufficient to complete the journey or satisfy the minimum state of charge settings as chosen by the driver.

To enable Automatic addition of charging stations to the route:

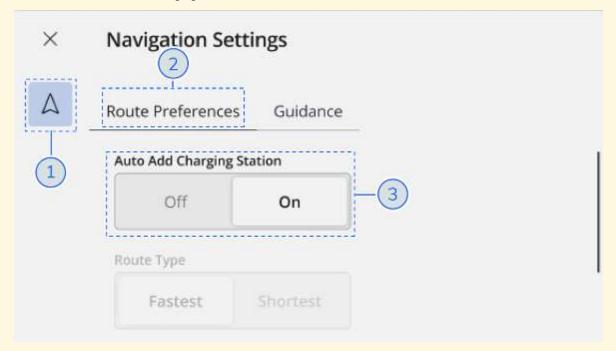

1. Tap Navigation Settings



> Route Preferences



2. Toggle Auto-add charging Station



to turn ON/OFF automatic addition of charging stations to the route.

Specific EV Settings

EV Settings allows driver to set:

- · Charge limit.
- · Plan time for charging setup.
- · Charging target at charging stations.

For more detail, See > Navigation > Navigation Settings.

VinFast App and Navigation

Prior to a journey, the driver can create a navigational route on their VinFast App and send it to the vehicle's navigation system. The vehicle navigation system will then use this route to complete the journey.

To send a navigation route to the vehicle:


- 1. Select a destination in the VinFast app using the Navigation System.
- 2. Tap Share to Vehicle.
- 3. The Navigation route will be sent to the vehicle.
- 4. On Infotainment screen, tap **Navigate Now** to accept the route on the Infotainment screen.
- 5. The vehicle's Navigation system will then guide the driver to the destination.

Navigation Settings

The Navigation Settings page consists of the following settings:

- Navigation Settings for navigating a journey.
- EV Settings Specific Settings for navigating with an EV.
- Maps Settings for customizing map.
- About Map software stored data and version information.

To access Navigation Settings:

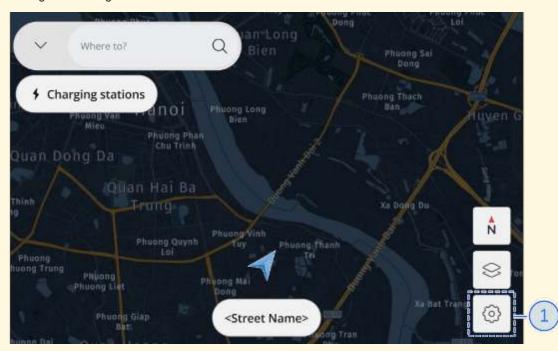

1. Tap App Library



on the Infotainment screen.

2. Tap Maps



> Settings



Navigation

You can set Route Preferences and Guidance Options through Navigation Settings.



NOTE

Route preferences will be applied to all route maps.

EV Settings

Use EV settings to select the minimum state of charge allowed for the EV Battery at the end of a journey. The navigation system proposes a navigation route that ensures the minimum state of charge is maintained once the destination is reached.

Upon reaching a waypoint or destination

The system allows you to select an appropriate battery percentage for remaining journey before reaching a waypoint or destination.

 Tap any of the available options to set what battery percentage is to be remaining upon reaching a waypoint or destination.

Upon reaching a Charging Station

The system allows you to select an appropriate battery percentage for the remaining journey before reaching a charging station.

• Tap any of the available options to set a battery percentage to be remaining upon reaching a charging station.

At a Charging Station

The system allows you to set a charging percentage so that the battery is at a desired level upon arrival at a charging station.

Tap any of the available options to set a target for the battery to charge to a desired level.

Map

Following settings can be accessed in Map tab:

- Offline Maps
- POI Categories
- Theme

Offline Maps:

The Navigation system relies on Internet connection to cache and present map information on the Infotainment screen. This ensures map data is always up to date. However, you may select to download maps offline directly to the Infotainment system. Offline maps can be beneficial in areas of poor or no Internet connectivity and can be enabled automatically if previously downloaded.

To download a new Offline Map:

- 1. Tap Map tab > Offline Map.
- 2. Tap Select map from catalogue.
- 3. Select Continent from the list.
- 4. Select Country/Region from the list.
- 5. Tap Download icon.

POI Categories

Point of interest categories can be customized, this feature allows driver to select specific POI categories which will be displayed on the map.

Following POI categories are available:

- · Charging Station
- Map
- · Select map from catalogue
- Parking
- About
- Food & Drink
- Service Center
- Shopping
- Hospital

To select POI Categories:

- 1. Tap Map tab > POI Categories.
- 2. Choose categories to display on springboard.

Theme:

This allows driver to change map themes as per requirement.

To change theme:

- 1. Tap Map tab > Themes.
- 2. Select desired theme to set.

About

This page displays Software Version number. Also, you can delete history and all data from app. Default settings can also be restored from about page

To Clear History:

1. Tap About tab > Clear history > Clear.

To Clear all data:

1. Tap About tab > Delete all my data > Delete.

To Restore default settings:

1. Tap About tab > Restore default settings > Restore.



NOTE

If there is no historical data available or historical data has just been deleted. The delete option or delete icon will be disabled.

7.6. Phone & Projection

Phone

The Bluetooth capable Infotainment system in conjunction with the embedded Virtual Assistant and steering wheel

controls allows hands-free calling and receiving of phone calls.

A compatible Bluetooth phone must be connected to use the phone app.



NOTE

Not all Bluetooth phones support all functions.



CAUTION

In order to minimize driver distraction, prior to driving and while the vehicle is parked:

- 1. Complete all pairing of mobile devices.
- 2. Familiarize yourself with all system functionality and controls.
- 3. Organize contact and call lists clearly and avoid duplicates.

To Launch the Phone App:

1. Tap App Library



on the Infotainment screen.

2. Tap Phone App



Using the Phone App:

The following tabs/pages are available on the phone app:

- Recents Shows all call history when phone connected
- Contacts Lists all available contacts from phone
- Keypad Allows manual entry and dialing of phone numbers



NOTE

Upon initial connection, please allow time for all contacts to be synced from phone.

Steering Wheel phone button behavior:




Certain Phone app functions can be controlled via the steering wheel **Phone button**




. Based on which **Phone** app screen is currently active the phone button may perform a different task summarized below:

Function	Phone Button
Recent Contacts Search Keypad	Short/Long press
Incoming call	Short press to Accept call Long press to Reject call
During an Active call / Single call	Short/Long press to End Active Call
2 Active calls	Short/Long press to End Current Call & Switch to second call
During an Outgoing call	Short / Long press to End Outgoing Call
1 Active call + 1 Incoming call	Short press to Accept Incoming Call and put 1 st Call on Hold. Long press to Reject 2 nd call

Phone App General Overview:

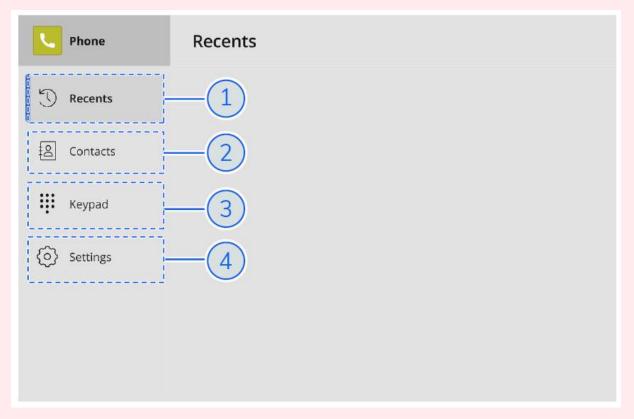

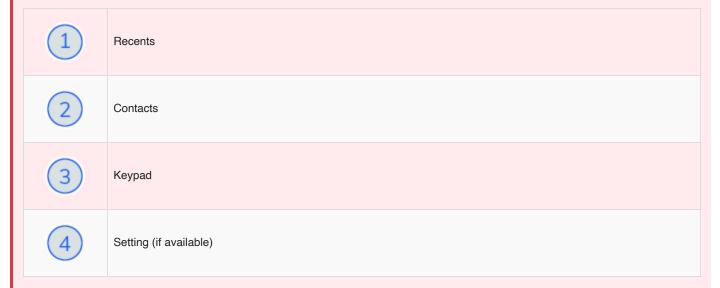




NOTE

If DND is on, incoming calls are not allowed and are diverted as per phone settings.

Recent

The **Recent** tab lets the user see past calls from their phone. The recent call list can be viewed by tapping on the **Recent** tab at the **Phone** app window. Tapping on any entry in the **Recent** list will initiate a call to that number.

Types of call icons:

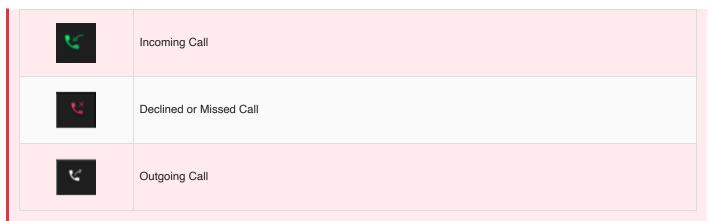

Contacts

Phone contacts can be viewed by tapping on the **Contacts** tab on the **Phone** app window. Contacts stored in the memory of a paired phone will be synced to the vehicle's contact list. The contact list is synced each time the phone is connected to the system.



NOTE

The search box appears in its disabled state if there is data indexed but the car is in motion and keyboard use is not permitted.

To search for a contact:

1. Tap Search



icon on the contacts page.

- 2. Enter Contact Name/Number in the Search field.
- 3. Tap Search.



NOTE

Previously searched contacts will be displayed in Recent searches.

Up to 10 recent searches are displayed in the recent list below the search text field.

Keypad

Dial the phone number manually using the keypad.

To call a number, enter the phone number using the keypad. If the number entered matches with a saved contact, it will show the contact details on the screen.



NOTE


Pressing and holding "0" will enter "+" in the text box.

Incoming Call

During an incoming call, the caller ID will appear on the Infotainment screen. If the contact is saved in the user's phone then the person's name and number is also displayed. To answer an incoming call, tap on the green **Accept** button on the screen or short press the **Phone** button on the steering wheel. To Decline a call, tap on the Red **Decline** button on the screen or long press the **Phone** button on the steering wheel.


The following options are available during a call

Full Incoming Call Window

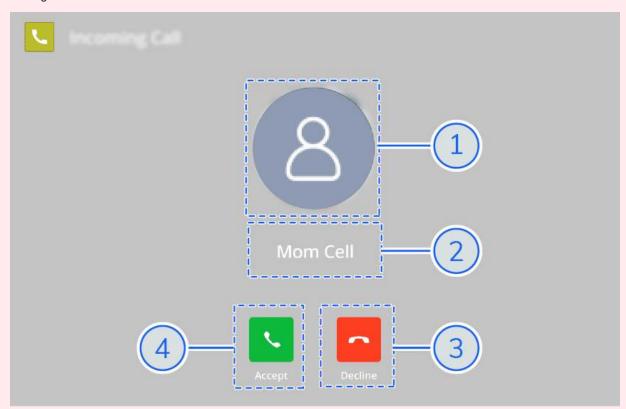



Incoming Call Banner

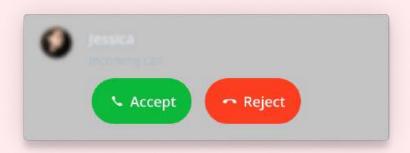

When a new incoming call is present an **Incoming Call** notification will appear on the Infotainment screen. The notification will contain a caller ID, Accept and Decline options. Taping on the notification will take the user to the incoming call window.




NOTE

If the Do Not Disturb (DND) function is ON, incoming calls are not allowed and are diverted according to the mobile phone settings.

Active call / Single Call:

While a call is active the call duration and contact details will be shown.

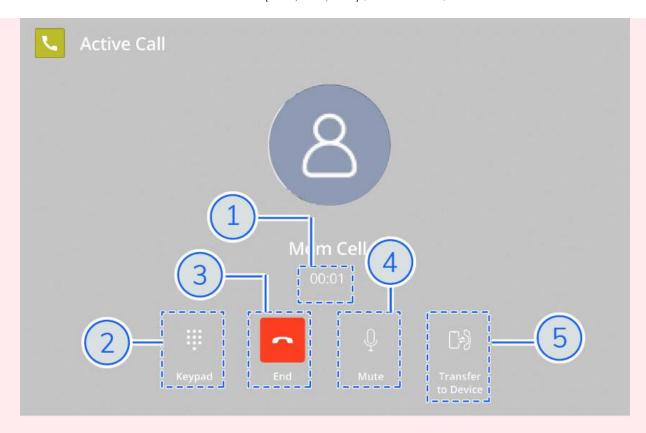





NOTE

When the user exits the Active call window to use other apps or go to the home screen, the active call window minimizes and docks a card on top of the Infotainment screen.

Incoming Call over an Active Call:



Accepting a second call will put the active call on Hold and switch to the new call. The call on hold will be displayed on the right side of the **Active Call** window.

Tap on the Caller ID to switch back to the call on Hold. This will put the second call on hold and it will be displayed on the right side of the Active Call window.

USB Ports & Power Outlets

USB Ports

The vehicle is equipped with nine USB ports:

- Front row Two USB ports are located in the front center console storage bin.
- Second row Three USB ports are located on the rear side of the front center console below the AC vents. Two are located in the second row center console storage bin (if captains chair fitted).
- Third row Two USB ports are located at the right and left side of the third row seats.

Front USB Ports:



The front center console comes complete with 2 Type A USB ports



. One of these USB ports can be used to transfer data and must be used when any of the following services are to be accessed:

- Android Auto
- Apple CarPlay
- Smart Phone Mirroring
- USB Media playback from a USB stick or phone.

Each USB ports is labeled to identify whether it is a data or charge only port as shown:




NOTE

One USB port can be used to transfer data (i.e. play music, connect Android Auto & CarPlay) and charge devices.

The second USB port can be used only for charging (capable of fast charging).

Second Row USB Ports:

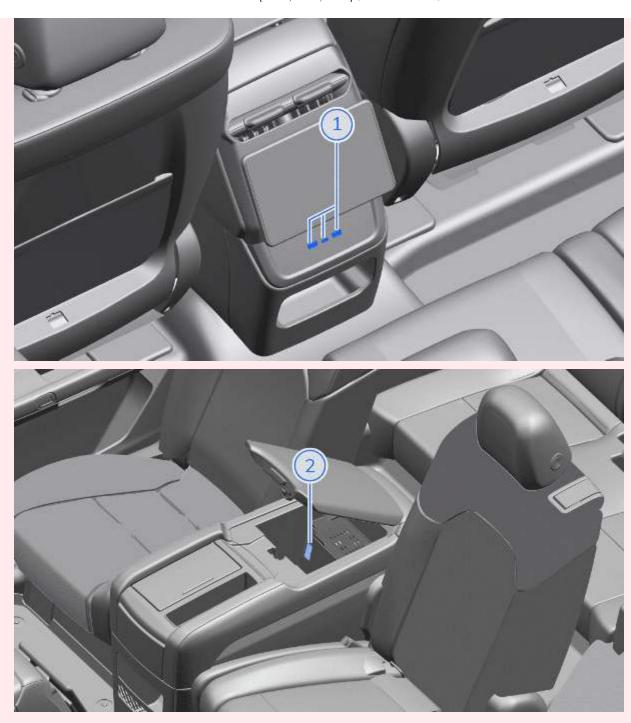

The second row center console consists of the following charge only USB ports:

• 2 Type - A USB Ports



• 1 Type - C USB Port (90W)





• 2 Type - A USB Ports



(if equipped with captains chair).

Third Row USB Ports

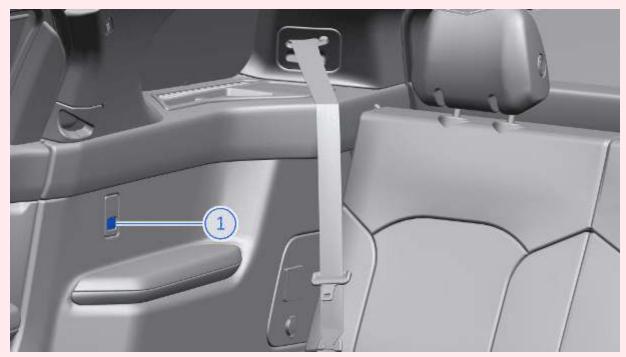

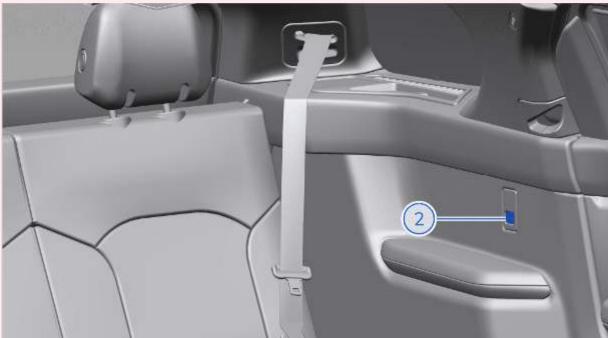

The third row seating consists of the following USB ports:

• 2 Type - A USB Ports



and





NOTE

All rear USB ports are for charging devices only.

The single USB Type-C port is rated at 90W.

All the USB ports are illuminated for ease of access in dark conditions.

Always disconnect the USB cable after use.



CAUTION

Connecting multiple devices using a USB hub is not recommended, this can prevent connected devices from charging or from being recognized by the Infotainment system.

Unplug all accessories when not in use to prevent an electrical short. An electrical short can occur if the unconnected end contacts another power source or liquid.



WARNING

It is recommended to connect an input device only when the vehicle is stationary. Trying to connect an input device while driving may distract driver's attention and can lead to an accident.

Power Outlets

The vehicle is equipped with two power outlets located in the right side of the rear luggage compartment. To access the power outlets, remove the protective cap and cover. The power outlet is suitable for accessories requiring up to 12V (120W) Max



and AC power outlet (if available) is suitable for 220V (400W)







Only use 12 volt electric accessories which consume less than 120W.

Some electronic devices and accessories can cause electronic interference when plugged into a vehicle's power outlet. These devices may cause excessive audio static and cause a malfunction in other electronic systems or devices used in the vehicle.

Use devices equipped with batteries with reverse current protection. Otherwise the current from the battery may flow into the vehicle's electrical system and cause Only use 12 volt electric accessories which consume less than 120W system malfunction.



WARNING

Close the power outlet cap when not in use.

Do not allow children to use or play with the power outlet. Children may get seriously injured.

Never use the power outlet for electric heaters while sleeping. Doing so can cause serious injury or death.

Never insert foreign objects into the power outlet. Doing so can cause serious injury or death.

Never use faulty electrical appliances. Doing so can cause serious injury or death.

Never insert inappropriate or badly fitting plugs into the power outlet. Doing so can cause serious injury or death.

Never jump start a vehicle using the 12 volt power outlet.

The power socket and an accessory's connector can become hot. Touching hot surfaces can cause injury.

Wireless Charger

The wireless charger provided in the front and rear (if available) console of the vehicle can charge Qi compatible devices wirelessly. To charge a Qi compatible device, place the device on the charging pads to start charging the device. The wireless charger can be set to On or Off depending on the user's preference.

The charger will show charging status and any relevant notifications of the phone on the Infotainment screen. It also reminds the user if the phone is left behind in the car upon exit (phone forget reminder).



NOTE

The vehicle must be on and all doors closed to enable wireless charging.


The wireless phone charger does not charge if the vehicle's high voltage Battery is discharged.

The wireless phone charger may not work if your phone case is too think or is made of metal. Try removing the phone from its case before placing it on the charger.

Front



Rear (if available)

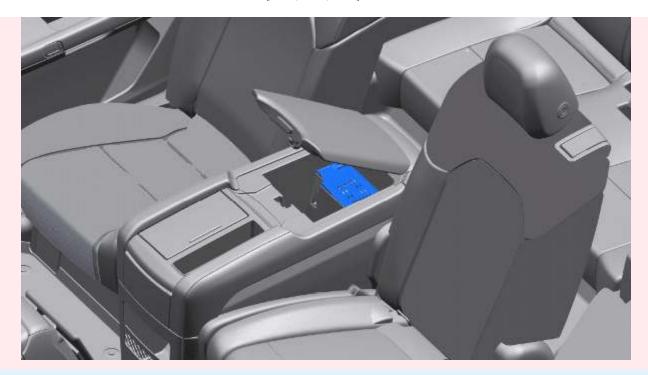



NOTE

To correctly charge the phone it must be in direct contact with the wireless charger.



Do not place objects between the phone and the charger (for example, credit cards, key cards, coins, keys, metal objects, etc.).

Placing foreign objects such as coins, cards, keys etc on the wireless charger pad will trigger foreign object detection warning and cut of power supply to the charger.

Near Field Communication (NFC) enabled cards may get damaged if kept on the wireless charger pad.

Avoid spilling water or other liquids on the wireless charger as excessive or repeated spillage can cause malfunction. (The charger is IP52 rated).

The **Lightning Bolt**



icon on front and rear Infotainment screen status bar indicates when wireless charging is active.



NOTE

When the device is completely charged the lightning bolt icon disappears.

How to Turn On/Off Wireless Charging:

1. Tap the App Library icon



on the Infotainment screen.

2. Tap on **Settings** app



> Vehicle Settings



- > Wireless Charging .
- 3. Toggle to turn On/Off front wireless charging .
- 4. Toggle to turn On/Off rear wireless charging .

To turn On/Off Wireless Charging from quick controls from the front Infotainment screen:

- 1. Swipe down from top of the Infotainment screen.
- 2. Toggle to turn On/Off wireless charging.



To turn On/Off Wireless Charging from quick controls from the rear Infotainment screen (if available):

- 1. Swipe down from top of the Infotainment screen.
- 2. Toggle to turn On/Off wireless charging.



Wireless Charing Fault

If there is a fault with the wireless charging system, a corresponding warning will be shown as a notification on the Infotainment screen.

Android Auto™

Android Auto™ is used to mirror features of an Android device, such as a smartphone, on the vehicle's Infotainment screen. Android Auto™ can be launched on the Infotainment screen when a compatible device is connected.



NOTE

Android Auto™ is provided by Google and is subjected to Google's terms and conditions. Local data plan rates may apply.

Connecting to Android Auto™

Android Auto[™] can be launched by connecting a compatible device either via a USB cable or Bluetooth. For more information about connecting your device for the first time, see > <u>Settings</u> > <u>Device Settings</u>.



NOTE

Setup of Android Auto™ can be done only when the vehicle is in Park (P).

To launch Android Auto™:

- 1. Connect the android device to the vehicle via a USB cable or Bluetooth.
- 2. Tap App Library



on the Infotainment screen.

3. Tap Android Auto™



4. Follow the on-screen instructions to connect via USB or Bluetooth.

If multiple audio sources including Android Auto™ are active and playing media then:


Press the Source button on the steering wheel controls to switch to Android Auto™



Android Auto™ can be launched by any of the following methods:

- Via pop-up after connecting with USB
- Via pop-up after connecting with Bluetooth
- Via Device Settings

Connecting via USB Cable:

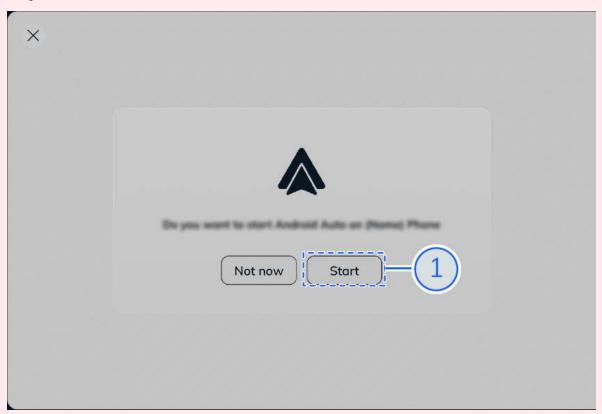


- 1. Connect a compatible device to the vehicle via a USB cable.
- 2. Tap Start



to launch Android Auto™.

Connecting via Bluetooth:

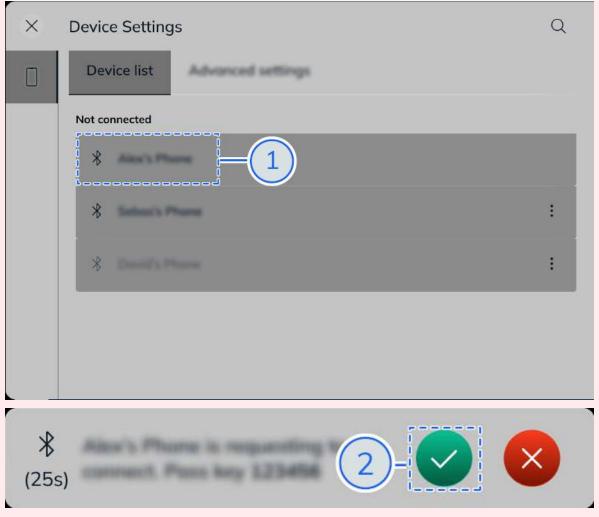

- 1. Turn **ON** Bluetooth in your compatible device.
- 2. Tap a Device Name



in the Bluetooth list to start the pairing process.


3. Tap on the Green check



icon on the popup notification.

- 4. Tap Pair in your device.
- 5. Now your device will be displayed in the connected Devices list.
- 6. A **Pop-up card** will automatically prompt to launch Android Auto™ for the paired device.
- 7. Tap **Start** to launch Android Auto™.

Launching via Device Settings:

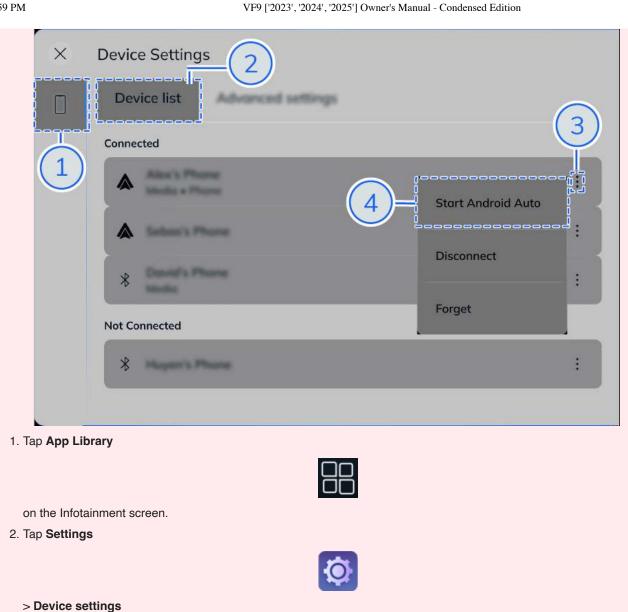



3. Tap Device list



4. Tap Three dots



icon.

5. Tap Start Android Auto™



For more information about connecting your device, <u>See > Settings > Device Settings</u>.

To disconnect Android Auto™:

- 1. Disconnect the USB cable from the phone or the vehicle.
- 2. Disconnect Bluetooth device from Bluetooth settings.
- 3. Disconnect from Device Settings, <u>See > Settings > Device Settings</u>.

To use Google Assistant™ when Android Auto™ is connected:

Long Press the Voice Assistant button on the steering wheel to wake up Google Assistant™.

Apple CarPlay™

Apple CarPlay[™] is used to mirror features of an iOS device, such as a smartphone, on the vehicle's Infotainment screen. Apple CarPlay[™] can be launched on the Infotainment screen when a compatible device is connected.



NOTE

Apple CarPlay™ is provided by Apple and is subject to Apple's Terms and Conditions. Local data plan rates may apply.

Connecting to Apple CarPlay™

Apple CarPlayTM can be launched by connecting a compatible device via Bluetooth. For more information about connecting your device, see > <u>Settings > Device Settings</u>.



NOTE

The setup of Apple CarPlay[™] can be done only when the vehicle is in Park (P).

To launch Apple CarPlay™:

- 1. Connect the iOS device to the vehicle via Bluetooth.
- 2. Tap App Library



on the Infotainment screen.

3. Tap Apple CarPlay™




4. Follow the on-screen instructions to connect via Bluetooth.

Apple CarPlay™ can be launched by any of the following methods:

- · Via pop-up after connecting with Bluetooth
- · Via Device Settings

Connecting via Bluetooth:

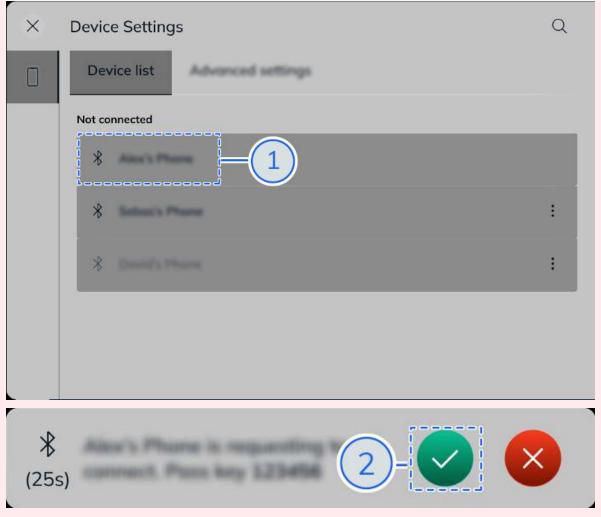

- 1. Turn **ON** Bluetooth in your compatible device.
- 2. Tap a Device Name



in the Bluetooth list to start the pairing process.


3. Tap on the Green check



icon on the popup notification.

- 4. Tap Pair in your device.
- 5. Now your device will be displayed in the connected Devices list.
- 6. A **Pop-up card** will automatically prompt to launch Apple CarPlay[™] for the paired device.
- 7. Tap **Start** to launch Apple CarPlay™.

Launching via Device Settings:

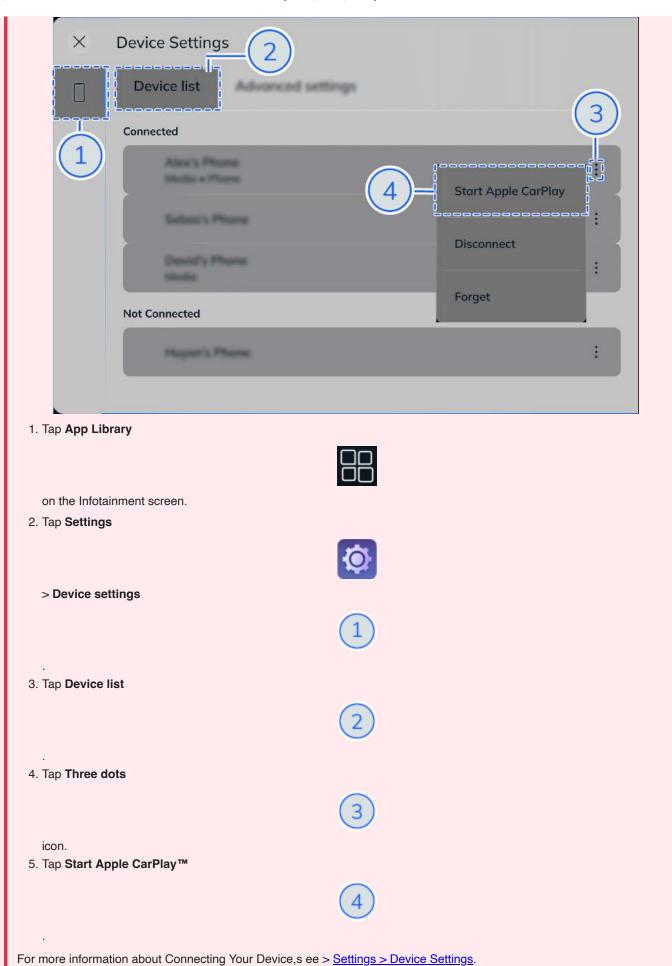

To disconnect Apple CarPlay™:

- 1. Disconnect Bluetooth Device from Bluetooth Settings.
- 2. Disconnect from Device Settings, see > Settings > Device Settings.

To use SIRI™ when Apple CarPlay™ is connected :

Long Press the Voice Assistant button on the steering wheel to wake up SIRI™.

7.7. VinFast App

Overview and Key Features

The VinFast application is a mobile app that provides various useful services for VinFast vehicle owners.

Information regarding the features of the VinFast application in this user guide is for reference only. The actual interface and functionalities may vary depending on the region, vehicle model, and release version.

Some key features of the VinFast application include:

- · Viewing battery charging status and vehicle condition.
- Using remote control features such as air conditioning, door locks, etc.
- Searching for charging stations, scheduling services, or requesting support online.
- Planning trips and sending routes directly to the vehicle (if applicable).
- Monitoring the current vehicle status.
- Accessing the user manual.



The VinFast application requires a WiFi or mobile network connection. Data charges may apply.

Registration and Sign In

To use the VinFast application, you need to download the app and create an account.

Downloading the Application:

- 1. Access the Apple App Store (iOS) or Google Play Store (Android).
- 2. Search for and download the VinFast application.

Registering an Account:

- 1. Open the application and tap Register on the login screen.
- 2. Read and agree to the Terms & Conditions.
- 3. Enter your username (email address) and create a password.
- 4. Check your inbox for the verification email and confirm your registration.
- 5. Set up fingerprint/Face ID authentication (optional).

Logging In:

- 1. Tap the VinFast icon on your phone to open the application.
- 2. Enter your registered email and password.

Forget password:

If you forget your password, you can reset it by:

- 1. Selecting Forgot Password on the login screen.
- 2. Entering your registered email address.
- 3. Choosing Reset Password.
- 4. Checking your email and following the instructions to create a new password.

Vehicle and User Management

Guest Homepage

Before owning a VinFast vehicle, you can use the app to explore detailed specifications and services. When you launch the app and register, the guest home page will appear.

Linking VinFast App with a vehicle

Vehicle Owner

When purchasing a VinFast vehicle, the dealer will assist you in creating a VinFast ID, which identifies you as the vehicle owner.

- Use the email address registered with your VinFast ID when creating your account in the VinFast App for automatic linking to your vehicle.
- If the vehicle information does not sync automatically in the app or if your vehicle is not linked to your account, please contact your VinFast dealer for support.

For Secondary Drivers

You can also add or remove secondary drivers to use the VinFast App.

- 1. Contact the vehicle owner and ask to be added as a driver.
- 2. The owner will use Role Management to add the additional driver's ccount to their vehicle.
- 3. The additional driver should provide the same email address they used to register the VinFast App.
- 4. The vehicle owner will send an invitation for the additional driver to add a vehicle.

The additional driver may:

- · Access and control owner's vehicle using the VinFast App.
- · Add / Remove one additional driver account.
- 1. Home VinFast ID. Tap on General Info on the Guest Homepage for more information.

Overview of the Owner's Home Page

The home page provides users with key features, including:

- · Current vehicle information
- Remote control (if available)
- · Battery and charging status
- Driving assistance (if available)
- · Vehicle settings
- · Vehicle services
- Notifications
- · Switching between owned vehicles

Current Vehicle Information

Displays an overview of the vehicle, including:

- · Battery capacity
- · Estimated driving range
- Vehicle status (parked or in motion)
- · Total mileage



NOTE

These details may vary depending on the vehicle model or market.

Remote Control (if available)

If supported, this feature allows quick access and control of certain vehicle settings, such as: Air conditioning control, door locking/unlocking...



NOTE

Features may differ based on the vehicle model or market.

Battery and Charging

The VinFast App provides battery and charging status to help you monitor and manage your vehicle efficiently.

To access Battery and Charging details: Tap Battery & Charging from the home page

Battery & Charging Page Displays:

- · Charging target
- Battery level (%)
- · Charging status
- · Battery leasing information (if applicable)
- · Nearby charging stations and availability

To change the charging target (if available):

- 1. Tap Charging Level.
- 2. Use the slider to set a new target.
- 3. Tap Save.

Battery leasing (if available):

VinFast offers a battery leasing option for customers. This feature allows you to track leasing details.

Charging History:

Tap Charging History to view past charging sessions by date.

Each session includes:

- · Charging date & time
- Charging cost

Driving Assistance (if available)

This feature is only applicable to vehicles equipped with advanced driver assistance systems (ADAS).

Vehicle Settings

Some features may not be available depending on your vehicle version and region.

Features include:

- Software updates (if available)
- · Vehicle information
- Virtual assistant (if available)
- Driving data

Vehicle Software Updates

You will receive a notification when a new software update is available. Check notifications or go to Vehicle Software Updates for details.

Virtual Assistant (if available)

The virtual assistant allows you to control the vehicle using voice commands.

Open the Virtual Assistant section. Add a new command or select a suggested command.

Vehicle Information

Provides details related to your vehicle.

Driving statistic

Driving statistic includes:

- Distance
- Energy
- Energy electricity

Services

Some vehicle support services may not be available, depending on your vehicle version and market.

Available services:

- Service booking
- · Roadside assistance
- Vehicle alert
- · Test drive

Service booking

The VinFast App allows easy scheduling of service appointments.

To book a service:

1. Tap Book Service in the Vehicle Services section.

- 2. Fill in the required information and follow the instructions.
- 3. A confirmation notification will appear in the app.

Your request details will be stored in the Notifications section.

Roadside Assistance

The VinFast App allows you to request roadside assistance directly from your mobile device.

To request roadside assistance

- 1. Tap Roadside Assistance in the Vehicle Services section.
- 2. Tap Create A Request.
- 3. Fill in the required information and follow the instructions.

A confirmation notification will be displayed in the app.

Vehicle Alerts

You can check for any vehicle warnings in the VinFast App. Even if someone else is driving the car, you will receive alerts about any detected issues.

Based on the type of warning, the app may suggest:

- · Booking a service appointment
- · Requesting roadside assistance
- · Referring to the user manual with a direct link

To check for vehicle alerts:

- 1. Tap Vehicle Alerts in the Vehicle Services section.
- 2. A list of current alerts will appear (if any).
- 3. Tap an alert for more details.
- 4. Follow the prompts to book a service, request roadside assistance, or view the relevant user manual section.

All actions related to vehicle alerts will be synced with your vehicle.

Test Drive

The app provides an interface for booking test drives for VinFast vehicles.

Notifications

Please note that app functionality may vary depending on your country, vehicle model, or app updates. The VinFast App may send notifications and messages at any time.

Notification Types:

- Vehicle alerts
- Transaction activities
- Messages from VinFast

To access notifications:

1. From the Home Page, tap the notifications icon.



- 2. Use the search bar to find specific notifications or browse the list.
- 3. Filter notifications by type.

Switching Between Owned Vehicles


This feature allows users to switch between multiple owned vehicles and view their details.

To switch vehicles: Tap the switch icon in the top corner of the screen.



Maps

Maps overview

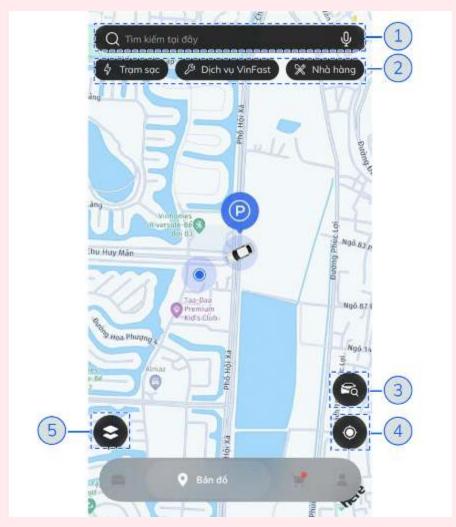

1	Search bar
2	Quick search
3	Find my car
4	Location tracking
5	Map view

Find locations

Search for your destination by entering an address in the search bar or selecting from quick search suggestions.

Find My Car

To locate your vehicle, tap the Find My Car button. The app will pinpoint its location and display key details about your car.

Map View

In addition to the default view, you can select additional map features such as:

- · Satellite view
- · Traffic conditions
- Dark mode

Shopping

This section provides information about:

- Your orders
- Current VinFast vehicle models
- Car accessories

You can easily track your order status, explore the latest VinFast models, and find suitable accessories for your vehicle.

Account

This section provides key features such as:

- Promotional offers
- Payments
- Settings
- Help & Support
- My Vehicles

Payments

You can choose to pay via credit card or ATM card.

To add a payment card:

- 1. Go to Payment Methods.
- 2. Tap Add Card.
- 3. Select your card type.
- 4. Enter the required details.
- 5. Tap Save.



NOTE

You can add multiple cards and set a primary payment card.

To make a payment:

- 1. Tap Bill List.
- 2. Select an invoice to pay (Charging / Battery subscription).
- 3. Tap Pay and follow the instructions.
- 4. A confirmation notification will be sent after successful payment.



NOTE

If you have a pending invoice, a payment reminder will appear on the home screen.

Settings

Users can customize and access the following key functions:

Feature	Description
Setting	Customize language, measurement units, notifications
Driver Management	Transfer vehicle ownership, add secondary drivers
Account Information	Edit owner name and phone number
Password & Security	Reset password, delete account, login options

Help & Support

This section includes:

- FAQs
- Support Requests
- About App
- Owner Manual
- Terms & Conditions

7.8. Climate Control System


Climate Controls

The climate control system cools, heats, filters and dehumidifies the air in the passenger compartment. Generally, the system works most efficiently when the windows are closed.


Climate Control Overview

Below is an overall description of all the functions that can be equipped on the vehicle. Therefore, depending on the market and vehicle variant, the display of some functions may vary or may not be available on your vehicle.

Front Zone Controls

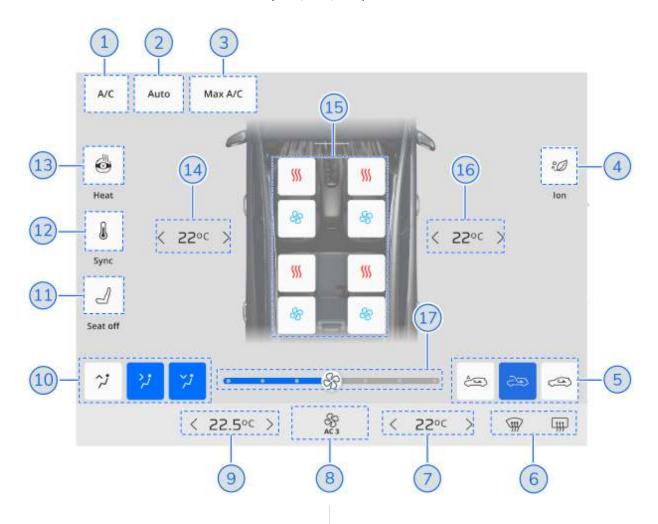

1	Air conditioner (AC) off/ on
2	Auto mode
3	Maximum air conditioning ON / OFF
4	Air Ionizer off/on (if available)
5	Air recirculation (Auto/Inside/Outside: Off), (Auto/Inside/Outside: On)
6	Defrost toggle ON/OFF
7	Temperature controls (Passenger zone)
8	Fan button (To open climate screen)
9	Temperature controls (Driver zone)
10	Air distribution control (Windscreen, face, foot: Off), (Windscreen, face, foot: On)
11	"Seats Off" button to turn off all heating/cooling seats.
12	Sync temperature of all zones off/on
13	Control heated steering wheel (if available)
14	Temperature controls (Driver zone)

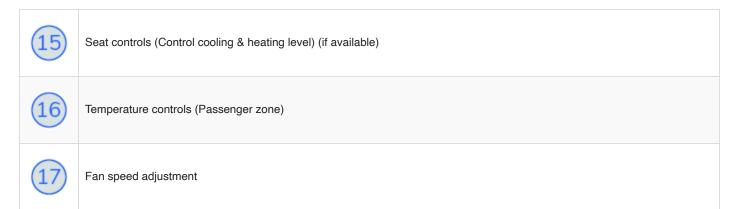

To open Climate Control Menu:

Climate Control Menu can be accessed by any of the following methods:

• Tap Fan button icon on the Climate Control Bar.

Cooling / Air-Conditioning

To turn on/off the Air Conditioning system:

- 1. Tap on the A/C button to turn the air conditioning On.
- Tap on the A/C button again to switch Off air conditioning.



NOTE

Water may drip from underneath the vehicle when it is in cooling mode. Traces of water on the ground are normal and are not a sign of leakage or malfunction.

If no cooling is required, switch off the A/C cooling system to increase range efficiency.

Under certain conditions when the vehicle is charging, the A/C cooling performance may be reduced. For example, when using Fast Charging while in hot ambient conditions, the vehicle prioritizes the battery cooling, to ensure optimum lifetime performance of the battery.

Maximum Cooling

To turn on/off the Maximum Cooling:

 Tap on Max A/C icon to activate maximum cooling mode. 2. Tap again to turn it Off.

Air Vents





1	Windscreen Defrost/Demist Vents
2	Front Side Windows Defrost/Demist Vents
3	Driver Side Air Vent
4	Passenger Side Air Vent
5	Front Central Air Vent
6	Front Footwell Air Vent
7	Rear Air Central Vent
8	Rear Air Vent for 2nd row, on B pillar
9	Rear Air Vent for 3rd row, on roof (if fitted)



NOTE

The air distribution is adjusted by pressing the appropriate buttons on the Infotainment screen.

Adjustable Vents



To adjust Air Vents:

The vehicle is equipped with adjustable air vents.

 Use the lever for changing the air flow direction (left/right/up/down) and for opening/closing of the Air vents.



NOTE

During the cooling process, at least one vent must be opened to prevent the evaporator from freezing due to lack of air movement.

The Climate Control can be switched ON only if the blower is ON and motor is running.



Do not place any objects on the slats of the ventilation holes.

Clear away any ice, snow, or leaves from the air inlets at the base of the windshield that could block the flow of air into the vehicle.

Air Temperature, Speed & Distribution

Temperature

The driver and passenger can adjust the cabin temperature to suit their individual comfort needs.

Temperature settings can be adjusted from both front and rear (if equipped) Infotainment screens.

To adjust the cabin temperature:



- 1. To decrease the temperature, tap (-)
- 2. To increase the temperature, tap(+)
- 3. Use button
 - inline Rectangle

to adjust driver side area temperature.

4. Use button



to adjust passenger side area temperature.

5. To adjust temperature of third row seats. Open the Climate Control card for third row and adjust the temperature



NOTE

In cold conditions it will take few minutes for the heater to warm up and reach a desired temperatures.

Air Flow

To adjust the air flow following options are available:



• To open Climate Control card, tap Fan icon



• To change fan speed, tap or Press & Swipe



Alternatively, Press and Hold the fan icon then move the slider left OR right to adjust fan speed.

If the fan is switched OFF the Climate Control is also Deactivated.

Air Distribution

To adjust Air Distribution throughout the cabin:



Automatic Operation

The Climate Control System controls the air speed, distribution, temperature, and recirculation. In addition, it also governs the operating temperature cycle of the air conditioning system. When AUTO mode is activated, the system operates automatically.

How to activate auto mode:

- 1. Open the Climate Control Drawer.
- 2. To activate auto mode, tap AUTO or 3RD AUTO (nếu có).



NOTE

Changing the fan speed, blower direction, or selecting defrost mode, A/C, Max A/C while in AUTO mode will cause the climate control system to change to MANUAL mode.

In hot ambient conditions, recirculation may be automatically selected to increase the speed of cooling of the cabin and to reduce energy consumption.

For convenience and comfort the following is recommended:

- Tap AUTO
- · For optimized air distribution, open all air vents.
- · Set temperature. Adjust the temperature as needed for the best comfort.

Manual Operation

The driver can control and adjust all climate control settings manually.

To activate manual mode when auto mode is activated:

1. Manual mode is activated when any of the following settings are manually changed; fan speed, blower direction, Windshield mode, A/C, Quick cool.

The following settings can be controlled when the MANUAL mode is activated:

Function	State On / Off	Description
A/C	inline Rectangle	Turn A/C ON and OFF.
Max A/C	inline Rectangle	Turn Max A/C ON and OFF.
Recirculation	inline Rectangle	Tap to switch between different recirculation modes.
Air Flow Distribution	inline Rectangle	Tap to change air flow mode.
Temperature / Air Flow	Temperature	Swipe left/right to increase/decrease temperature.
	inline Rectangle Air Flow	Drag the slider left/right to increase/decrease air flow.
SYNC	inline Rectangle	Tap to sync driver and passenger settings.

Front Windscreen Defrost / Defog

The front windscreen and a portion of the front windows can be defrosted or defogged using this function.

To turn on the front windscreen defrost/defog:

- 1. Open the Climate Control Drawer.
- 2. Tap Front Defrost/Defog.
- 3. The button will become illuminated



to indicate it is active.



NOTE

In warm and very humid ambient air conditions, the windscreen may mist up from the outside when cold air is directed at it. If the windscreen mists up from outside, activate windscreen wiper and defrost.



Damage may occur to the windscreen and/or wipers if they are used when ice or snow is present. It is recommended to use the Defrost/Defog function or water over the windscreen to melt the ice.

An ice/snow scraper can also be used to clean the windscreen. Be gentle in using the scraper as not to damage the windscreen by scraping the glass surface.



WARNING

Do not defog the windscreen using cold air distribution directed towards the windscreen, this may lead to fogging up of the windscreen and causing poor vision, which can result in serious injuries or accident for the driver.

Cabin Filtration

The Climate Control System filters the incoming air to remove dust, pollen, and contaminants. For best performance, the Cabin Air Filter requires replacement within the specified maintenance interval. See > Cabin Air Filter for replacement instructions.

When driving through very dusty or polluted air, it is recommended to use the recirculation function to reduce the amount of contaminants that enter the vehicle cabin. This, however, will decrease the life of the Cabin Air Filter.

Air Ionizer

If available, the Air Ionizer is a feature that adds ions to the air to trap air contaminants. Harmful particles and germs in the air can be reduced by ionization. This helps to improve air quality for individuals in the passenger compartment and aids in Cabin Filtration.

To activate the Air Ionizer:



- 1. Tap Air Ionizer.
- 2. The feature will be activated.



NOTE

Regular cleaning of the vehicle interior is recommended, as this will help maintain the Cabin Air Filter and Climate Control System.

Recirculation Mode

Recirculation mode circulates the AC air within the vehicle's cabin.

The following options are available in recirculation mode:

Type of Mode	Icon	Description
Outside	inline Rectangle	When outside mode is enabled, fresh air will be drawn into the vehicle cabin from outside.
Inside	inline Rectangle	When inside/recirculation mode is enabled, the existing cabin air inside the vehicle will be circulated and filtered.
Auto	inline Rectangle	When Auto recirculation mode is enabled, recirculation mode is controlled automatically.

How to change recirculation mode:

- 1. Open the climate control drawer.
- 2. To switch modes, tap the **Recirculation** button.



NOTE

Air Recirculation mode will turn off automatically after a set period of time.

Keep the exterior air intake vents clean at all times, to ensure optimal performance of the climate control system.

Switch off the air recirculation mode when it is no longer required.



WARNING

If the recirculation mode is on and cooling is off this can cause air humidity to increase in the vehicle cabin, causing the windows to fog up which can be dangerous while driving.



Do not keep the recirculation mode on in normal conditions. The quality of air inside the cabin can deteriorate over time due to the lack of fresh air.

Climate Control System Maintenance



Air Intake

The exterior air intake vents located in front of the windshield must be kept clean to allow air flow into the Climate Control system. Remove leaves, debris, dirt, or snow.

Passenger compartment air filter maintenance:

The cabin air particle filter removes pollen, dust, and soot particles from the air inside the vehicle. The filter should be replaced as part of routine maintenance. Refer to the Vehicle Maintenance Schedule. See > Maintenance Schedule > Maintenance Schedule Overview.

For instructions on how to replace the cabin air filter, See > Fluids, Lubricants and Parts > Cabin Air Filter.



NOTE

If the vehicle is driven in highly polluted or dusty conditions, it is recommended to inspect and replace the filter more often.

Regular operation of the AC System:

The Air Conditioning (AC) needs to be used for a few minutes each month, regardless of the weather and time of the year. This is to ensure the climate control system remains lubricated.

Servicing of the Climate Control System:

In order to obtain the best performance from the Climate Control System, it must be maintained correctly. Refer to the Vehicle Maintenance Schedule for details.

Schedule. See > Maintenance Schedule > <u>Maintenance Schedule Overview</u>.

The maintenance includes the following:

- · Heating and Cooling performance check.
- · Leak inspection.
- · Replacement of the refrigerant and pressure testing, if required.
- · Cleaning of the condenser and evaporator drain.



The refrigerant must be discharged from the system by a qualified person before any connection is disconnected.

Use only the approved refrigerant and air-conditioning compressor oil. Using non approved materials may lead to permanent damage to the vehicle.



WARNING

Servicing must be completed by a suitably certified and qualified professional. The refrigerant is toxic and must be contained. Failure follow the above may lead to serious injury or death.

Rear Demist

The rear windscreen and a portion of the rear windows can be demisted or defogged using the Rear Demist function.

To turn on the rear windscreen demister:

- 1. Tap on the **Rear demister** icon on the Infotainment screen.
- 2. The button will become illuminated



to indicate it is active.



NOTE

The rear demister will automatically turn Off.

7.9. Settings

Settings Overview

The Settings App allows control and adjustment of many of the Infotainment and Vehicle features and functions. See below a summary of settings menus available:

Device Settings	inline Rectangle	Manage device connection settings
Wi-Fi	inline Rectangle	Connect and manage Wi-Fi and Hotspot Settings
Voice assistant (if available)	inline Rectangle	Adjust Voice Assistant preferences
Sound	inline Rectangle	Adjust sound preferences and volumes
Theme	inline Rectangle	Adjust Wallpaper, Trip and Heads-up display Settings
Security Settings	inline Rectangle	Adjust Geo-Fence, Time-Fence, Valet mode and Theft alert Settings
Vehicle Settings	inline Rectangle	Manage Seat, Mirrors, Doors, Wipers and Wireless Charging Settings
Light Settings	inline Rectangle	Adjust Vehicle Exterior, Interior and Ambient Lighting Settings
General Settings	inline Rectangle	Adjust Date & Time, Language and Unit Settings
About	inline Rectangle	Know your software version, Factory Reset and Adjust eSim settings

To access the Settings App:

inline Rectangle

on the touchscreen.

inline Rectangle

Greater detail on each setting category can be found later in this section.

Search Settings

inline Rectangle

icon, from the Settings App.

- 2. Enter Name of Setting in the search field.
- 3. Tap Search.

Vehicle Settings

Vehicle Settings allows the following settings related to vehicle functionality to be adjusted:

Seat

inline Rectangle

on the Infotainment Screen.

inline Rectangle

> Vehicle Settings

From Home page

- 1. Tap App Library
- 2. Tap Settings

Use the search feature to quickly navigate to a desired settings page by typing a keyword.

To search for a setting:

- 1. Tap Search
- Side Mirrors
- Doors
- Wipers
- · Wireless Charging
- Extension (if available)

To access Vehicle Settings:

- 1. Tap App Library
- 2. Tap Settings



Seat

- Easy Access: When enabled the driver's seat and steering wheel will be adjusted to give more space for entry/exit of the vehicle when in the park position and driver's seatbelt is unfastened.
- Child Presence Detection (If available): When enabled, an alert will be sent to the driver if the presence of rear occupants such as children and/or animals that may still be in the vehicle when the vehicle is parked and the driver's seatbelt is unfastened.

Side Mirrors

Auto Fold

Automatic folding of vehicle side mirrors when locking the doors - **OFF/ON**.

Automatic Mirror Tilt in Reverse

Automatically tilt the side mirrors downward to aid in parking when Reverse (R) gear is selected -

OFF/LEFT/RIGHT/BOTH.

Doors

- Trunk Foot-Kick Sensor Allows opening the trunk easily with a foot-kick motion underneath it, ensuring the key fob is nearby - Off/ On.
- Auto Unlock Doors Select which doors to automatically unlock when the vehicle is unlocked -Driver door/All doors.
- Door Unlock When Parked When the gear is shifted to Park (P), the selected doors will unlock automatically - Off/On.
- Walk-Away Lock Automatically locks the doors when the driver walks away from the vehicle with the key fob -



on the Infotainment Screen.



> Device Settings.

To connect a device:

- Go to Bluetooth settings on your device and select "VinFast VF 9".
- Connect via USB port See > <u>USB Ports and Power</u> <u>Outlets</u>.

Off/On.

 Unlock / Lock Feedback - Select feedback type vehicle is locked / unlocked (Off / Lights / Horn / Both).

Wipers

- Auto Rear Wiper When required, the rear wipers will be activated automatically.
- Wiper Service Mode Set the windshield wipers in the service position to change the wiper blades. This feature is only available before stepping on Brake pedal for the first time you get in the vehicle.

Wireless Charging

• Wireless Charging - Enable/Disable the Front and Rear (if availavle) wireless charging pads.

Extension (if available)

Trip Button Customization

Customize the trip button on the left stalk to quickly access your preferred functions.

You can press the button to quickly switch between trip information.

Device Settings

Device Settings allows the management of connections between the vehicle and portable media devices such as mobile phones. Device Connect allows the vehicle to:

- Search for and pair new phone or media devices
- · Switch between connected devices
- · Disconnect or delete existing devices
- Manage connection settings for individual devices

To access Device Settings:

- 1. Tap App Library
- 2. Tap Settings
- From Device Connect, select an available device from the list.

When connecting a Bluetooth device for the first time the user will be asked to confirm the **Pass Key** between the device and Infotainment screen. Please check the device for Popups.



NOTE

"VinFast_VF 9" is the default name of the vehicle. To change it,

See > Setting > About.

To pair a device via Bluetooth, the vehicle should be stationary or be moving at a speed of less than 3 km/h.

Device List Overview

Once connected a device will then be shown in the Device List.

The Device List will also show:

- · Other available devices to connect
- · Previously connected devices
- Detail of the current connection type

Advanced Settings Overview

Advanced settings allow the adjustment the following settings:

- Do Not Disturb (DND) Touch to toggle this feature
 ON/OFF and set a predefined or custom reply message.
 - **inline** Rectangle

on the Infotainment screen.



> Wi-Fi Settings.

To turn Wi-Fi ON/OFF:

Toggle Wi-Fi ON or OFF.

To connect to a Wi-Fi network:

- 1. Select the available network from the list.
 - inline Rectangle

icon.

2. Tap Disconnect/Forget.

To connect to a hidden Wi-Fi network:

DND default is off.

- Android Auto Touch to toggle this feature ON/OFF for all connected Android devices Android auto default is on.
- SMS Notification Touch to toggle this feature ON/OFF for messages. New message notification default is on.
- Pre-shared Key for Wireless Connection Touch to reset the key.

Wi-Fi

Use Wi-Fi settings to manage Wi-Fi connections between the vehicle and portable media devices or other available networks.

To access Wi-Fi Settings:

- 1. Tap App Library
- 2. Tap Settings
- 2. Enter network **Password** (if required).
- After a successful connection is established, the connected network will be shown in the Connected list.

To disconnect/forget a Wi-Fi network:

- 1. Tap Three dot
- 1. Tap Hidden Network.
- 2. Select Security type.
- 3. Enter Network name and Password (if required).
- 4. Tap Connect.



NOTE

Move the device closer to the Infotainment screen if a known Wi-Fi network does not appear in the list.

Hotspot

Hotspot allows the user to connect their mobile to the vehicle's Wi-Fi network.



on the Infotainment Screen.

To access Hotspot Settings:

1. Tap App Library

2. Tap Settings

inline Rectangle

> Wi-Fi Settings > Hotspot.

To On/Off a Hotspot:

1. On/Off "Allow others to join".

pinline Rectangle

To change Hotspot Password:

- 1. Tap on edit icon
- 2. Enter valid Password.
- 3. Tap on Save.

inline Rectangle

NOTE

Connecting to the vehicle's Hotspot can be established by scanning the QR code from a device.

Sound

Sound settings on both front and rear (if equipped)
Infotainment Screen allows the adjustment of the following

settings:

- Volume
- Equalizer
- Focus

inline Rectangle

NOTE

Focus settings can only be adjusted from the front Infotainment Screen.

To access Sound Settings from Front Infotainment Screen:

inline Rectangle

on the front Infotainment Screen.

inline Rectangle

> Sound.

To access Sound Settings from Rear Infotainment Screen (if available):

inline Rectangle

> Sound.

1. Tap App Library

2. Tap Settings

From homepage

Tap Settings

Volume

Adjust the volume by using the slider controls.

inline Rectangle

NOTE

Media volume can be adjusted from both Infotainment Screens.

To reset volumes:

The **Reset** soft key will set all volume settings to the default value of 15.

· Tap on Reset.

Volume presets can also be adjusted by using the rotary dial while any of the above functions audio output is active. For example, to adjust the Voice Assistant volume adjust the volume rotary dial while Voice Assistant is speaking.



Always pay attention to road and traffic conditions when driving. To minimize driver distraction and ensure the safety of vehicle occupants as well as other road users, avoid using the Infotainment Screen to adjust settings while the vehicle is in motion.



NOTE

Feedback tones are automatically activated by the system to provide feedback to the user when they press buttons or use sliders to adjust sound.

The above settings are absolute values and not linked to the adjusted Infotainment system volume.

The minimum volume of In-call, Start-up limit, Voice Control, Parking is 6.

The volume of the current playing source will be temporarily muted when an incoming phone call is received or a navigation direction is given.

Equalizer

Touch Equalizer on front and rear (if available) Infotainment Screen to individually adjust equalizer frequency levels or choose from a predefined sound profile.



NOTE

If the user selects a predefined sound profile, and then adjusts one of 5 bands, the equalizer mode auto switches to custom mode.

Focus

Touch Focus on front Infotainment Screen to select zone type and Adjust speaker position area.

The user can only adjust the position in selected zones.

Change the adjustment through zone area depends on sound quality.



NOTE

Focus settings can only be adjusted from the front Infotainment Screen.

General Settings

Use General Settings to manage the following:

- Region
- Language
- · Date and Time
- · Units of Measurement


To access General Settings:

1. Tap App Library



on the Infotainment screen.

2. Tap Settings

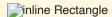

> General Setting.

Region

Use Region settings to select the region in which you are located.

Date and Time

Use Date and Time Settings to adjust the following:

Auto date/time	Toggle the Auto date/time feature
Current date/time	Current Date and Time (manually editable if Auto Date/Time is OFF)
Auto time zone	Toggle the Auto Time Zone feature
Time zone	Current Time Zone (manually editable if Auto Time Zone is OFF).
Time format	Select preferred Time Format - 12h/24h
Date format	Select preferred Date Format from the drop - down list



NOTE

When Auto Date/Time is enabled, the clock and date will update automatically depending on the region.

Language

Use Language setting to change the system language.

Units of Measurement

This page enables you to adjust the following:

Temperature - °C / °F

TireTyre Pressure - Bar / kPa / PSI

Battery - Distance (km / mile)/ %

About

About page displays the following information about the Vehicle:

- Model Number
- Vehicle Color
- Infotainment System Software Version
- Vin Number
- Vehicle Odometer Reading (ODO)
- · Next service due date of the vehicle

· Extended warranty date

To access About page

1. Tap App Library



on the touchscreen.

2. Tap Settings



> About.

To change the Vehicle Name:

1. Tap Edit



icon.

- 2. Enter preferred vehicle name in the text field.
- 3. Tap Change.



NOTE

A maximum of 15 characters is allowed when changing the vehicle name.

Firmware

Firmware updates are necessary software update. The vehicle firmware can be updated directly inside vehicle without the need to visit a service center.

The firmware update can be downloaded either via Wi-Fi or Cellular network data.

Firmware update download

Firmware updates will get automatically downloaded when they become available. The update will get downloaded in the background.

- 1. Automatic download via Wi-Fi: The vehicle will automatically download updates over Wi-Fi when connected to a Wi-Fi network.
- 2. **Automatic download via cellular data**: The car will switch to cellular data to download updates if Wi-Fi is not available. Automatic download can be Enabled/Disabled using toggle. By default this setting is Disabled.

For more information, see > Connected Services > Remote Software Update.



NOTE

Downloading and installing a firmware update may take some time.



CAUTION

Firmware updates may contain new safety, security or general vehicle feature improvements that can enhance the overall vehicle operation.

Firmware updates may erase data or settings that are saved in the vehicle, such as saved navigation destinations or preset radio stations.



Never use the vehicle while Firmware installation is in progress.

Always perform the Firmware installations when the vehicle is stationary. This can lead to distraction which increases the risk of an accident.

eSIM

The data connection for Connected Infotainment services can be made through an embedded SIM card (eSIM card) installed in the vehicle.

For more information, see > Settings > <u>eSIM Settings</u>.

Geofencing and Timefencing

Geo-fencing

If available, Geo-fencing creates a virtual geographic boundary around an area by means of GPS technology, the owner will receive a notification on Infotainment screen when the vehicle moves out of the geo-fence area.

Geo-fencing settings are available for the Primary Driver profiles only. Other user profiles can only view if a Geo-fence is active but cannot modify or remove.

This feature is helpful if somebody else is allowed to drive the vehicle and the owner wants to remind them that an agreed driving distance has been exceeded.

To access Geo-fence Settings:

1. Tap App Library



on the Infotainment screen.

2. Tap **Settings**



> Security Settings



> Geo-fence.

To set Alert Receiving Device:

Available options for Alert Receiving Devices are:

- · Phone only
- Vehicle only
- Both
- 1. Tap **Toggle** to select the preferred Alert Receiving Device.

To create a new Geo-fence:

- 1. Tap Create new.
- 2. Tap Target location and enter a target location name.
- 3. Tap Radius(Km/Mile) and enter a valid Radius to set Geo-fence.
- 4. Enter a Name for the newly created Geo-fence .
- 5. Tap Create.
- 6. After creating a new Geo-fence, a message will pop up on the screen.



NOTE

A maximum of 10 Geo-fences can be created.

To turn ON/OFF the Geo-fence:

• Use **Toggle** switch on the created Geo-fence to turn it **ON/OFF.**

To edit/delete a Geo-fence:

1. Tap Three dot



icon on the created Geo-fence.

2. Tap Edit and Update to confirm or tap Delete.

Exiting Geo-fence

Upon exiting a Geo-fence, a notification will appear on the screen as per settings.

Time-fencing

If available, Time-fencing a time-period can be set beyond which if a vehicle is driven a notification is sent by the Infotainment system.

Time-fencing settings are available for the primary driver profiles only. Other user profiles can only view if a Time-fence is active but cannot modify or remove.

This feature is helpful if somebody else is allowed to drive the vehicle and the owner wishes to remind them that an agreed time-period has been exceeded.

To access Time-fence Settings:

1. Tap App Library



on the Infotainment screen.

2. Tap Settings



> Security Settings



> Time-fence.

To set Alert Receiving Devices:

Available options for Alert Receiving Devices are:

- · Phone only
- Vehicle only
- Both
- 1. Tap **Toggle** to select the preferred Alert Receiving Device.

To add a new Time-fence:

- 1. Tap Create New.
- 2. Set Time Range.
- 3. Toggle between **ON/OFF** Repeat mode.
- 4. Select the Days on which you want the Time-fence to Repeat.
- 5. Enter a Name for the newly created Time-fence.
- 6. Tap Create.

To edit Time Range:

• Tap Edit icon.

To turn ON/OFF the Time-fence:

• Use Toggle switch on the created Time-fence to turn it ON/OFF.

To edit/delete a Time-fence:

1. Tap Three dot



icon on the created Time-fence.

2. Tap Edit and Update to confirm or tap Delete.

Moving beyond a Time-fence

Upon moving beyond a Time-fence, a notification will appear on the Infotainment screen.



NOTE

A maximum 10 Time-fences can be created.

In addition to Infotainment screen, the Geo-fences & Time-fences can also be created/modified/deleted from the VinFast App (see VinFast app on your phone for more details). Any change of settings on Infotainment system related to Geo-fence/Time-fence settings will be synced with the VinFast App and vice-versa.

eSIM

The eSIM App provides information related to the current status of Infotainment systems cellular connection. It also provides a QR code to easily facilitate the purchase of additional data.

To access eSIM settings:

1. Tap App Library



on the Infotainment screen.

2. Tap Settings



- > About settings.
- 3. Tap on the **eSIM** tab.

Overview

The following information may be available:

- Signal Strength
- MNO (Mobile Network Operator)
- Remaining Voice Package Details (Talk Time)
- Free Package Details (Data)
- · Basic Package
- Premium Package
- Top-up Data Package Details
- QR Code
- EID (Embedded Identity Document)
- IMEI (International Mobile Equipment Identity)
- ICCID (Integrated Circuit Card Identifier)
- Reset Button

To reset the network access device:

Tap on the Reset button.

To purchase additional data:

- 1. Scan the QR code shown on the screen .
- 2. Open the LTE data purchasing page via your mobile, follow the instructions on the screen.
- 3. After data is purchased details will be updated on the eSIM page.

Voice Assistant

Voice assistant features may be available depending on market and version. Therefore, this feature may not be available on your vehicle.

If available, to access Voice Assistant Settings:

1. Tap App Library



on the Infotainment screen.

2. Tap Settings



> Voice Assistant Settings



Voice Assistant Settings Overview:

- Wake up word Enables recognition of word "Hey VinFast" to activate the voice assistant.
- Voice Assistant welcome Enables voice assistant welcome when starting the vehicle.
- Follow up mode Enables the feature to ask follow-up questions without repeating "Hey VinFast".
- Continued conversation time Set continued conversation time by using the slider.
- Assistant Language Change voice assistant language.
- Voice Accent Change voice accent.
- Voice Assistant Mode Change voice assistant mode.

8. Battery & Charging

8.1. High Voltage Components

High Voltage Components Overview



All of these components use, control and/or supply High Voltage Electricity:

inline Rectangl	Front Electric Drive System (EDS)
inline Rectangl	HV Compressor
inline Rectangl	HV Heater
inline Rectangl	Power Distribution Unit, On Board Charging, DC-DC Converter
inline Rectangl	Vehicle Control Unit (VCU)
inline Rectangl	HV Battery
inline Rectangl	Charge Port
inline Rectangl	HV Wiring
inline Rectangl	Rear Electric Drive System (EDS)
inline Rectangl	EMI Filter



In the unlikely event of a vehicle fire, immediately contact the local emergency responders.

The High Voltage system has no user serviceable parts. Do not remove or replace high voltage components, cables or connectors.

High Voltage cables are typically colored orange for easy identification.

Contact with High Voltage can lead to fire, electric shock, serious injury or danger to life.

Read and follow all instructions on the labels that are attached to the vehicle. These are provided for your safety.

Even when the battery is low or discharged, High Voltage can still be present throughout the vehicle's electrical system.

8.2. Charging Instructions

Charging Equipment

The vehicle can be charged via a number of different charging devices. These include Portable chargers, Charging Stations, Super-Fast Charging Stations and Home Chargers. The charging devices must have the correct charging adapter to plug into the vehicle.



CCS2 - AC



Portable charger (Level I 220V charger)

The vehicle comes equipped with a Portable charger, located in the rear cargo compartment. This provides slow charging of the vehicle via AC electricity.

Charge Plug

The vehicle is equipped with CCS (Common Charging System) connection. The available CCS connections are:

CCS2 - DC

To use Portable charger:

- 1. Plug the Portable charger into the 220V power supply socket.
- 2. Plug the charging handle into the vehicles charging port.
- 3. The vehicle will start to charge via Portable charger.



CAUTION

The Portable charger will not work without a ground connection. The wall socket requires a ground pin to connect to the Portable charger. This is required to safely ground the charging system and avoid short circuits.

If the desired wall socket does not have a ground connection, please contact a licensed electrician to have this rectified.

Charging Stations

The vehicle can also be charged at public charging stations. Charging stations may provide either AC or DC charging at various charging rates. Due to the variability between charging stations, it is critical to familiarize yourself with the operating instructions of each Charging Station correctly to prevent possible damage to the vehicle and to ensure safety.

Charge Station Identification (if available)

To ensure that only a compatible charging station is connected to your vehicle the charge port includes an identification label identifying both the vehicle charging handle type and permissible charging voltage and current limits. Both the vehicle's AC and DC charge connector type will be represented on this label by a charge type identifier as shown below.



Charge Connector Type	Charge Type Identifier	Charging Limits
AC Charging (Type 2)	inline Rectangle	Single Phase: 230V / 32A Three Phase: 400V / 48A
DC Charging (CCS2)	inline Rectangle OR inline Rectangle	DCFC: 500 A max

DCFC = DC Fast Charging

For more detail regarding charge status indicator lights, See > Charging Instructions.



Always ensure the Charge Type Identifier of both the vehicle and charge station match for either AC or DC charging. Failure to use a suitable charge station may lead to damage to the vehicles high voltage battery or charging system.



NOTE

The use of Super Fast Charging Stations should be minimized to ensure the optimal lifetime performance of the battery.

Home Charger

A home charger can be installed at home or office to provide convenient charging. Typically, these will charge the vehicle quicker than the Portable charger.

Home chargers need to be hard wired to the power supply in the home. Please contact a licensed electrician for installation.

Please contact a VinFast dealership for information on suitable VinFast wall-mounted home chargers.

Important Safety Warnings regarding Charging



WARNING

Contact with a High Voltage power source can lead to serious injury or risk to life.

Do not touch the contacts on the charging equipment or in the charging port of the vehicle.

Never use damaged, faulty or modified charging equipment.

Never use an extension cord, adapter or power board with charging equipment.

Protect the charging socket and contacts from water or moisture and other liquids.

The charger can generate electromagnetic waves that can affect medical devices such as an implantable cardiac pacemaker.

Always confirm with the medical team and manufacturer whether charging the electric vehicle will impact the operation of the medical devices such as a cardiac pacemaker.

There should be no water or dust in the charging handle connector and plug. Always make sure they are clean before connecting to the charger and charging inlet. Failure to do so may cause electric shock when connection the charging handle or even lead to a fire.

Be careful not to touch or insert anything in the charging outlet holes, charging port holes, and the charging handle holes when connecting the charging handle to the charging port in the vehicle.

Immediately stop charging if abnormal symptoms are detected such as odor or smoke.

If the charge cable outer conduit is damaged then immediately replace the charging cable to prevent electrical shock.

Charging Instructions

Electric vehicles are powered by batteries and motors which use electrical energy that is stored in a high voltage battery. The high voltage battery can be charged by any of the following methods:

- Level I: The vehicle is supplied with a Level 1 charging cable. The vehicle can be charged from grounded household sockets using Level 1 cables. A household socket connection charges with alternating current. In the case of Level 1 charging cables, the efficiency values may differ from those on the energy label.
- Level II: Using a special plug, a Level 2 charging cable allows users to quickly charge at designated Level 2 charging stations. The charging at Level 2 stations is performed using alternating current. Charging can be completed much faster at a charging station rather than at a household socket.
- Level III: DC charging stations are equipped with a permanent DC charging cable, which makes charging possible.

 Charging is carried out at DC charging stations using direct current. A DC charger station with a higher current connection charges more quickly than a household socket or a Level 2 charging station.



NOTE

The time it takes to charge the vehicle will depend on the ambient air and battery temperature, the power level of the charger, the charge level of the battery, and the charger type.

The speed of Level III DC Super Fast Charging may be reduced in some circumstances, particularly when the ambient temperature is high. Hence charging will take more time.



Chargers generate electromagnetic waves that can seriously affect medical electrical devices, such as implantable cardiac pacemakers. Consult your medical professional or pacemaker manufacturer to ensure the charging of your electric vehicle will not impact the operation of your medical electrical devices.

Never forcefully pull the charging handle from the charging port. Dangerous electrical arcs could result, causing serious injury or death. Always follow the charging shut down process of the charging device and vehicle.

To charge the vehicle follow the process below and the instructions of the charging device. Observe all Warnings and Cautions.

- Put the gear into Park and apply the Park Brake.
- Check the charging device is compatible with the vehicle.
- Open the Charge Port Door and remove the protective caps.
- Fully insert the charging handle into the charge port, ensuring it is connected correctly.
- Start the charging process at the charging device.
- The charging handle will be automatically locked in the charging port during charging.
- Observe the charging status on the charge port light (if available), the vehicle display and the charging device.
- · Lock the vehicle.
- To stop charging, unlock the vehicle and follow the instructions on the charging device and on the vehicle display.
- The locking pin in the charge port will automatically disengage once charging has stopped. This may take some time after charging has been requested to stop.
- Remove the charging handle from the charge port and return it to the charging device.
- Replace the charging port caps and close the charging port door.

Further instructions and important information on charging can be found in this section.

Charging Port

The charge port is located at the driver's side front fender and locked by the central locking system. Open the charge door to access the charge port.



To open the charge port door:

To open the charge port door it first must be unlocked and the vehicle must be in Park (P). You may unlock the charge door by:

- Tapping the Unlock button in the **EV App** on the Infotainment screen.
- Using Emergency Release cable.



NOTE

The charge door will automatically lock if not opened within one minute.

Due to freezing weather, it might be difficult to open the charging door. Tap lightly on the door or remove any ice prior to attempting to open. Don't forcefully open the door.

Opening the Charge Port Door via the Infotainment screen:

1. Tap App Library



then EV app



OR Tap Battery icon at the top of Car Control Area.

- 2. Go to Battery > Unlock Charge Door OR In the Car Control Area area tap on to open Charge port door.
- 3. Press on the charge port door to open it.

Charge Port Door - Emergency Release:

In case of an electrical malfunction, the charge port door can be released by pulling on the emergency release cable



located on the left side within the front cargo compartment.

- 1. Ensure the vehicle is safely and properly parked, then open the hood.
- 2. Locate the emergency release cable on the left side, near the charging port area.
- 3. Use a plastic clip remover tool (as shown in the illustration) to remove the two clips securing the beauty cover.



4. Remove the beauty cover to expose the emergency release cable



pinline Rectangle

- 5. Pull the release cable to open the charging port cover.
- 6. After opening the charging port cover, reattach the beauty cover to its original position and secure it with the two clips.

To plug in a charging handle

To insert the charging handle, grasp the cable or plug firmly and push into the charging port until you hear a click. Make sure the connector is fully inserted and flush with the charge port. A poorly inserted connector may cause prolonged charge sessions or faults.

If you are using the Portable charger, plug it into the power outlet before plugging it into the charging port on the vehicle. Align the charging handle to the charge port and insert fully. A locking pin will hold the charging handle in place and charging will begin automatically.

After plugging in the charging handle:

- 1. The system will start to authenticate the charging station.
- 2. After successful authentication, the vehicle will start charging.



NOTE

If the battery temperature is high, you may notice a delay before charging begins as the battery cools down.

The charging handle needs to be inserted into the charging port within 1 minute of opening the charging port.

Otherwise the charging port will become inactive. If this occurs, close and re-open the charging port to reactivate it.

If the vehicle has turned off while the charge port door is open, close and the reopen the charge port door to enable charging.

If the charging handle is not fully inserted the locking pin may not engage and charging will not commence.

Refer to the Charging Fault section below for more information.



WARNING

There should be no water, dust, dirt or debris in the charging handle connector and plug. Always make sure they are clean

6:59 PM	VF9 ['2023', '2024', '2025'] Owner's Manual - Condensed Edition	
before connecting to the charger and ch handle and plug may cause a fire or ele	narging inlet. Connecting while there is water, dust, dirt or debris in the charging octric shock.	
Be careful not to touch or insert anything in the charging outlet holes, charging port holes, and the charging handle holes when connecting to the charging port in the vehicle.		
Immediately stop charging if abnormal s	symptoms are detected such as an odor or smoke.	
If the cable coating is damaged then im-	mediately replace the charging cable to prevent electrical shock.	

inline Rectangle

CAUTION

Make sure the charging connector and charging plug are always clean and dry. Keep the charging cable away from moisture or water.

EV Charging Settings

For details on available EV Charge settings, See > EV Battery App > EV Settings.

Charging Port Status Light (if available)

A "V" shaped indicator is present on the charging port to indicate the charging status.

Charging port indicator contains three color indicator lights:

- 1. Red
- 2. Green
- 3. Yellow

Refer following table for charging port indicator:

Charge Port Indicator	Status
inline Rectangle	Static green light indicates that the vehicle is fully charged. Pulsing green light indicates that the vehicle is charging.
inline Rectangle	Static red light will show on indicator when there is a faulty connection or charger contains no charge.
inline Rectangle	Yellow color light indicates that the charging handle is plugged and it is in a authentication process.

To activate/ deactivate charging port Status Light:

• See > EV Battery App > EV Settings.

Vehicle Charging Status

The following types of charging status will be shown on Infotainment screen after plugging in the charger:



1. Time remaining



: The estimated time remaining to charge to the chosen set limit. See > EV Battery App.

2. Battery Status



: Current battery state of charge (%).

3. Expected Range

inline Rectangle

: Expected range as per the battery's current state of charge.

4. Battery Temperature

inline Rectangle

5. Charge cable status

inline Rectangle


6. Battery state of charge

minline Rectangle

7. Stop charging

inline Rectangle

: To stop charging.

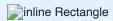

NOTE

Energy usage by heating/air conditioning, heated/ventilated seats, defroster, and other functions will consume part of the energy provided by the charger. Reducing usage of these vehicle functions will divert more energy to charging the battery.

Charging values are approximate and for information only

Cooling system may be activated while charging

To stop charging from the Infotainment screen:

1. Tap Stop Charging

inline Rectangle

- 2. Confirm by tapping Stop Now.
- 3. A timer will countdown from 10s to 0s then driver can detach the charge handle from the charge port.
- 4. Charging will be stopped.



NOTE

In order to prevent anyone from unplugging the charging handle without authorization, the vehicle must be unlocked before the charging handle can be removed.

During charging, it is normal to hear sounds from the vehicle cooling system, including pumps and fans. Particularly when there is high ambient temperature and high charging current, as the system cools the battery during charging.

Air Conditioning performance may reduce in some circumstances during charging, particularly during high ambient temperature and high charging current. This is normal to ensure the battery cooling is optimized to maintain battery longevity.



WARNING

When connecting or removing the charging handle, hold the charging handle, not the cable. Pulling the cable itself (without using the handle) may cause the internal wires to break or get disconnected. This may cause electrical shock or fire.

During the charging process, the vehicle will automatically lock the charging handle. Do not use strong force to pull out a locked charging handle, as this may cause serious injury, death or damage to the vehicle.

Manual Release of the Charging handle:

The charging handle is automatically locked in the charge port by a locking pin to prevent accidental or unauthorized disconnection. If the usual methods for releasing the charging handle from the charge port (using the Stop Charging release button) do not work, carefully follow these steps:

- 1. Ensure that the vehicle has stopped charging by checking the charging screen on the Infotainment screen. If necessary, tap **Stop Charging**.
- 2. Turn Off the Vehicle and Remove the Key from the Vehicle.
- 3. Open the front cargo compartment.
 - inline Rectangle
- 4. Remove the Brake Fluid Reservoir access port cover
 - inline Rectangle
- 5. Using a tool, pull the charge port's release cable
 - inline Rectangle

to release the pin that locks the charging handle.

6. Pull the charging handle from the charge port.



WARNING

Use a screwdriver, hook, pliers or appropriate tool to pull the release cable.

Ensure the vehicle is turned off, as contact with the Front Wiper Motor mechanism could cause serious injury, if the front wiper was turned on.

To close the Charge Port Door:

- inline Rectangle
- Close the charge port door and press
 - inline Rectangle

to lock it.

inline Rectangle

CAUTION

Ensure the charging port caps are correctly replaced before closing the charging port door.

Ensure the charging handle and cable are put away correctly, so that they do not cause a tripping hazard, or get caught in or damaged by the vehicle.

Do not drop the charging connector (charging handle). The charging connector can be damaged.

While your vehicle is charging, do not remove the wall plug or Portable charger control box from the wall. Doing so may cause the outlet and cord to be damaged.

Charging Faults

Charging Authentication Fault

An authentication fault may occur following connection of the charging handle to the vehicle. An authentication fault may occur when :

- The charge station is not compatible with the vehicle
- The charging handle or charge station is damaged or not ready to charge

If an authentication fault occurs a message will be shown on the Infotainment screen. Disconnecting and reconnecting the charging handle or using an alternate charger may correct the authentication issue. Follow all messages shown on the Infotainment screen.

If charging does not commence once the charging handle is connected to the vehicle, follow the process below.

- · Remove the Charging Handle from the Charge Port.
- · Close the Charge Port Door
- Ensure the vehicle is OFF
- · Lock the Vehicle
- Wait 5 minutes for the vehicle to enter Sleep Mode.
- · Unlock the Vehicle
- · Open the Charge Port Door
- · Reconnect the Charging Handle
- · Check Charging Status

If the issue persists please contact a VinFast Service Center.

Charging handle Fails to Release

If the charging handle can not be removed from the charge port after charging the charging handle locking pin may not have released. If the connector fails to release a message will be shown on the Infotainment screen and instructions will be provided to manually release the locking pin. For more information, See > Manual Release of the Charging handle, earlier in this section.

Battery Leasing Faults (if available)

If an issue exists with a users Battery Leasing account then vehicle charge limits may be reduced until outstanding payments are received. Outstanding invoices can be viewed and actioned via the VinFast app. For further information, contact VinFast Customer Support.

8.3. Battery Information

Battery Information

The vehicle has a High Voltage (HV) battery mounted under the vehicle floor and a 12V battery (LV) located at the front of the vehicle. If the 12V or HV battery needs to be serviced, contact your nearest VinFast Service Center.

For continued optimum battery performance it is important to take proper care of the battery system. For more info on HV and LV batteries, See > <u>Battery Information</u>.



NOTE

When vehicle is left idle and unplugged, it uses energy from the battery for system tests and recharging the 12V battery when necessary.



CAUTION

If the High Voltage battery charging level is less than 5% (Red battery icon in status bar) please charge the vehicle immediately.

If the Battery's state of charge level falls to 0%, the battery may degrade more quickly.

Battery Leasing Plan Management

Information regarding the battery lease plan (if applicable) can be viewed on the VinFast Companion App, or by visiting the VinFast Auto website or the nearest VinFast Service Center.

EV Battery App

The EV Battery App shows detailed information about the Vehicle's High Voltage Battery and Charging System.

To access the EV Battery App:

1. Tap App Library



on the Infotainment screen.

2. Tap EV app



OR

1. Tap Battery icon on the car control area.

Charging Status

Charging status is shown on the EV Battery App as shown below.



inline Rectangle	Battery Percentage
inline Rectangle	Expected Range
3	Battery Temperature
4	Battery health (SOCE)
5	Button to unlock the charge door (if available)



NOTE

Energy usage by heating/air conditioning, heated/ventilated seats, defroster, and other functions will consume part of the energy provided by the charger. Reducing usage of these vehicle functions will divert more energy to charging the battery.

Charging values are approximate and for information only

Charging Settings

To access Charging Settings:

1. Tap App Library



on the Infotainment screen.

2. Tap **EV** app



Settings below may be available:

- Charging Target
- · Charge Current Limit
- · Battery Level Reminder
- Charging Progress Indicator (if available)

Charging Target

Charging Target is the maximum state of charge (%) the EV battery is allowed to reach before the charger automatically turns OFF.

To set the Charging Target:

1. Tap App Library



on the Infotainment screen.

2. Tap the EV app



> Battery Settings.

3. Press and slide the slider left/right to set desired charging target.

Battery Charge Current Limit

Adjust the maximum current when charging with an A/C charging station. This setting is only available when charging is in process and will be saved by location.

To set the Charge current limit:

- 1. Ensure that a current A/C charging session is active.
- 2. Tap App Library



on the Infotainment screen.

3. Tap the **EV** app



> Battery Settings.

4. Scroll to Charge Current Limit and adjust the setting by tapping + / - on the Infotainment screen.

Battery Level Reminder

Battery level reminder provides a notification on Infotainment screen, once the battery state of charge reaches the set level. The default value for this setting is 20%.

To adjust the Battery Level Reminder:

1. Tap App Library



on the Infotainment screen.

2. Tap the EV app



> Battery Settings.

3. Scroll to Battery Level Reminder and use the slider to adjust the warning threshold.

Once reached, a notification will be provided on the Infotainment screen along with an option to find a charging station.

Charging Progress Indicator (if available)

Illuminates the VinFast signature lights to indicate the vehicle's charging progress.

To set the Charging Progress Indicator:

1. Tap App Library



on the Infotainment screen.

2. Tap the EV app



> Battery Settings.

3. Scroll to Charging Progress Indicator and tap Off/On to set desired.

Battery Leasing (if available)

This page provides information about your battery leasing plan's duration. Additionally, if you have paid the battery leasing fee but your vehicle is still restricted (limited charging or disabled driving capability) due to a data connection issue, you can perform manual payment verification to temporarily remove the system's restrictions.

To verify payment and temporarily remove system restrictions, please follow the steps below:

1. Tap the App Library



on the Infotainment screen, then tap the EV app



Or

- 1. Tap the Battery icon in the vehicle control area on the Infotainment screen.
- 2. Access Battery Leasing



- 3. Select Verify Payment.
- 4. Open the VinFast app > Battery Leasing > Verify Payment.
- 5. Enter the verification code from the Infotainment screen into the VinFast app for verification.
- 6. After successful verification, the system will automatically generate an OTP code and send it to your phone.
- 7. Enter the OTP code into the Infotainment screen to verify payment and temporarily remove system restrictions.



NOTE

A notification will be displayed on the Infotainment screen upon successful payment verification.

The temporary restriction removal time will vary depending on the vehicle version or market. Please contact VinFast's customer care center or service workshop for assistance.

After verification and temporary removal of system restrictions, please move the vehicle to a convenient location to reconnect to the server system. If the vehicle remains restricted and cannot connect to the server, please contact VinFast's customer care center or service workshop for assistance.

Battery Care

The HV battery is maintenance free. Always pay attention to the battery status and never allow it to fully discharge. Even when the vehicle is not being driven, the battery discharges very slowly to power the on-board electronics. On average, the battery discharges at a rate of approximately 1% per day. The discharge rate may vary depending on environmental factors (such as cold weather), configuration, and selected settings. If the vehicle is not used for long periods of time (approx. 2-3 weeks), ensure that the vehicle's HV battery is always above 30% (preferable between 30% to 60%).

If the high voltage battery needs to be inspected, tested, or replaced, it should only be done by a trained technician. If the 12-volt or high voltage battery needs to be serviced, contact your nearest VinFast Service Center. They will be able to provide information about how the high voltage battery can be recycled.



NOTE

It is recommended to leave the vehicle plugged in whenever not in use, battery's lifetime performance increases whenever charged regularly.

For optimal lifetime performance of the battery, minimize the use of Super fast DC Charging

If a battery pack has been involved in a fire it will need to be replaced. It may also need to be returned to the manufacturer for investigation.

If vehicle is unresponsive and does not unlock, open, or charge, the 12V battery may be discharged. In this situation, try jump starting the 12V Battery. If the vehicle is still unresponsive, contact VinFast Service Center.

Charge the vehicle HV battery to 100% SOC at least every month. For any concerns, please contact a VinFast Service Center.



CAUTION

If battery charging level is less than 5% (Red bar in display) please charge the vehicle immediately.

If the Battery's charging levels falls to 0%, the battery may degrade more quickly.

Do not store the vehicle near heat sources, which may damage the battery or vehicle.

Do not store the vehicle in areas which may flood as flooding may damage the battery or vehicle.



In case of damage to the high voltage battery or other high voltage components, there is a risk of electric shock, overheating, or fire.

The vehicle should be inspected as soon as possible if it has been damaged from a moderate to severe crash, flood, fire, or other incident. The vehicle should be kept outside until it has been inspected at a distance of at least 15m (50ft) from any structure or anything that can burn. Open a window or door of the vehicle to allow air to circulate inside.

Temperature Limits

Avoid exposing the vehicle to ambient temperatures above 55°C (151°F) or below -35°C (-31°F) for more than 24 hours. Ideally, store the vehicle in climate-controlled garage if extreme ambient temperatures are expected. Failure to follow this temperature recommendation may permanently degrade battery performance.



NOTE

Temperatures below -35°C (-31°F) or above 55°C (151°F) cause the battery to go into protection mode which prevents charging and some features from functioning.

Low Power Consumption Mode

To protect against complete HV battery discharge, the vehicle enters a low power consumption mode when the charge level is very low. In this mode, the HV Battery stops supporting the on-board electronics to slow the discharge rate. Once this low power consumption mode is active it is important to charge the vehicle as soon as possible to avoid possible battery damage.

When the low-power consumption mode is active, the 12V battery is no longer charged and can be completely discharged. If this occurs, the 12V battery will need to be charged or replaced before commencing any HV charging of the vehicle. To conserve energy, select the ECO driving mode from Car Control Area controls.

To select ECO drive mode:

- 1. Tap Car Mode
- 2. Select **ECO**.
- 3. ECO mode will be activated.



NOTE

Charge the HV battery at regular intervals.



CAUTION

Do not allow the HV battery to completely discharge. There is a possibility that the HV will no longer charge if left discharged for long periods of time.

9. Maintenance

9.1. General Information

Vehicle Care Overview

To ensure trouble-free use of the vehicle the maintenance requirements stipulated in this chapter should be carried out

regularly. If any abnormal sounds or, vibrations occur please visit a VinFast Service Center to have the vehicle inspected. Regular maintenance and servicing are recommended to prevent operational problems with the vehicle.



CAUTION

Service procedures must be carried out by an authorized VinFast technician.

9.2. Fluids, Lubricants and Parts

Cabin Air Filter

The air conditioner cabin filter is a common filter element that prevents dust, pollen and other pollutants from entering the vehicle. To achieve the best filtering effects, please replace the cabin filter within the specified maintenance interval specified by VinFast.

The cabin air filter should be replaced according to the Maintenance Schedule. If the vehicle is operated in severely air polluted cities or on dusty rough roads for a long period, it should be inspected more frequently and replaced sooner.




NOTE

Filter life depends on atmospheric conditions.

It is recommended that Service procedure must be carried out by an authorized VinFast technician.

Filter Replacement


To remove the Cabin Air filter:

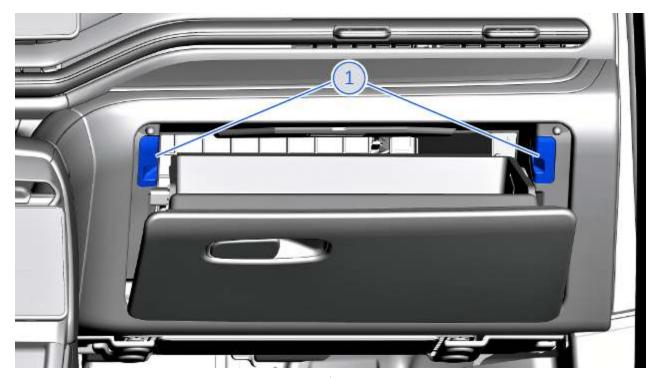

1. Open the glove box and carefully push in the sides of the glove box past the two side clips




to disengage the glove box.

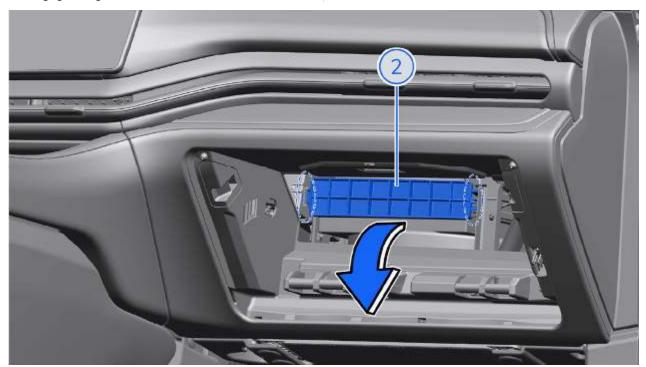

2. Remove the Air Filter Cover



by depressing and un-clicking the retaining tab on the right side.

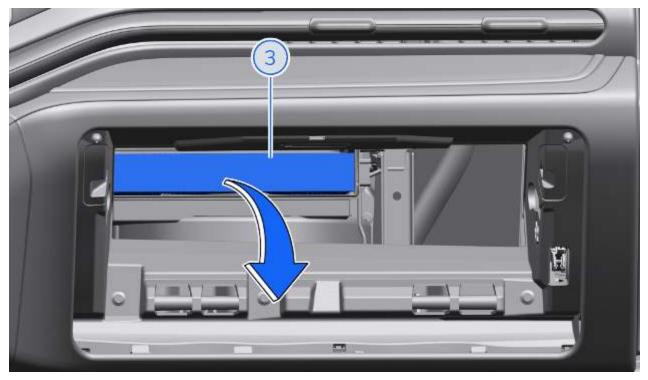

3. Remove the Air Filter



, by pulling it out.

To install the Cabin Air filter:

To install a new air filter, reassemble in the reverse order of removal process.

Coolant

Coolant is used to maintain the operating temperature of certain components in the vehicle. Weekly checking of the cooling system is recommended. When checking, the vehicle should be parked on flat ground and the cooling system must be cold. Check the condition of the system


hoses, ensuring that they are not cracked, swollen, or deteriorated.

Use only designated coolant water for electric vehicles, adding other types of water or antifreeze can damage the vehicle.

The coolant change work should be carried out by a qualified VinFast technician.

For the recommended coolant to use, See > Technical Specifications > Fluids, Lubricants and Parts Overview.

To Top-up the coolant:

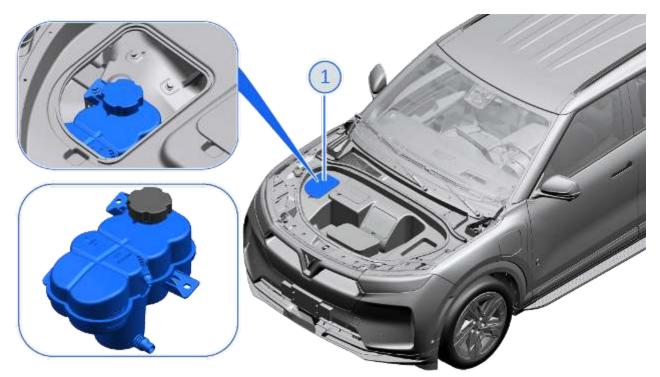

- 1. Park the vehicle on flat ground and ensure the vehicle's motor compartment has cooled down.
- 2. Open the front hood to expose the front cargo compartment.
- 3. Locate the Coolant reservoir by removing the panel



- 4. The cap and bottle should now be accessible. Slowly unfasten the filler cap(s) by turning it in an anticlockwise direction, if there is a "hiss" sound stop turning the cap and wait until the sound stops. Then proceed to remove it.
- 5. Refill using Anti-Freeze Pre-Mixed Coolant AF2100 (ASTM D3306) 50% Glycol & 50% Water mixture.
- 6. Fasten and secure the filler cap(s) back on by turning it in a clockwise direction.



NOTE

If the coolant level in the reservoir reaches below 25% of its capacity an audible alert will sound indicating low coolant level.

Ensure the cap and bottle are free from debris and clean before opening to prevent any debris from entering the reservoir.

In an emergency, a small amount of water can be added to the coolant storage tank. However, it should be noted that this will weaken the anti-freeze and anti-corrosion protection and reduces the service life of the coolant. Do not use other components of antifreeze to add to the cooling system.

As the vehicle coolant temperature decreases, the radiator fan will automatically shut off. This is a normal condition.



CAUTION

Keep coolant in a sealed container in a safe place.

Don't fill the coolant reservoir to a level that it overflows. Coolant left on a metallic surface for long periods of time may cause rust



The coolant reservoir cap should not be removed when the vehicle is ON or when the cooling system is hot. Let the cooling system completely cool before removing the cap. Remove the coolant reservoir cap slowly and cover it with a thick cloth to prevent scalding. Not following these instructions may result in serious injury.

Coolant is extremely toxic and can be fatal if swallowed. Keep coolant tanks sealed and out of reach of children. If a child has accidentally ingestion the coolant, seek medical attention immediately.

Prevent coolant from making contact with skin and eyes. If it does, rinse immediately with plenty of water.

When changing coolant be careful, as there are High Voltage components in this area.

Do not touch heater, radiator, A/C pipes or hoses. They can be very hot and can cause severe burns.

Do not run the vehicle if there is a leak; all coolant could leak out, causing a fire or lead to severe burns. Any leaks must be fixed by an authorized VinFast Service Center before driving the vehicle.

Keep hands, clothing and tools away from the rotating fan blades of the radiator cooling fan, to avoid injury.

Washer Fluid

Washer fluid is used for cleaning the windshield with the operation of the windshield wipers. It is recommended to always check the fluid level in the washer fluid reservoir and add fluid if necessary.

When the washer fluid level is low, the Low washer fluid symbol



will be displayed on the Infotainment screen to alert the driver.

The washer fluid reservoir is located under the front hood of the vehicle.

To Top-up the Washer Fluid:



- 1. Pull open the washer fluid cap.
- 2. Refill washer bottle with washer fluid until full.
- 3. Push closed the washer bottle cap, ensuring it is properly attached.



NOTE

Always add appropriate washer fluid to the water, if using plain water instead of appropriate washer fluid, anti-freezing agent should be added to the water so that it does not freeze.

Always read the manufacturer's instructions before using any washer fluid.



Add washer fluid carefully, do not let it splash onto the exterior surface of the vehicle.

The windscreen and wiper may get scratched or damaged if the wiper is turned on without using the washer when the windscreen is dry.

The concentration of anti-freezing agent must be adjusted to the vehicle operating conditions and the climate. A concentration that is too high can lead to vehicle damage.

Adding the appropriate washer fluid when refilling the washer fluid reservoir.



WARNING

Do not touch any High Voltage components in washer fluid reservoir area.

Washer fluid can irritate eyes and skin. Read and observe the instructions provided by the washer fluid manufacturer.

In temperatures below 4° C (40° F), use a washer fluid with antifreeze. In cold weather, using a washer fluid without antifreeze can impair visibility through the windshield.

Do not drink washer fluid and avoid contact with skin. Washer fluid is harmful to humans and animals.

Keep washer fluid away from children and animals.

Wiper Blades

Windshield wiper blades should be inspected on a regular basis for wear or cracking. Contamination of either the windshield or the wiper blades with foreign matter can reduce the effectiveness of the windshield wipers.

Common sources of contamination are:

- Insects
- · Tree sap
- Hot wax treatments used by some commercial car washes

If the blades are not wiping properly, clean both the windshield and the blades with a mild detergent, and rinse thoroughly with clean water.

Wiper blades will degrade over time and eventually require replacement. If water is not sufficiently cleared from the windscreen and blades squeak when operating the wipers, blade replacement may be required.


Front Wiper Blades Replacement

To remove the front wiper blades:


- 1. Keep the bonnet closed.
- 2. The vehicle needs to be in ACC power mode.
- 3. Wipers need to be in home position, Wiper stalk in Off position and Wash mode not activated.
- 4. Set Wiper Service Mode to On .
- 5. The front wipers will stop at a 45-degree angle, allowing the owner to lift the wiper arm from the windshield.



6. Lift the wiper arm away from the windshield.

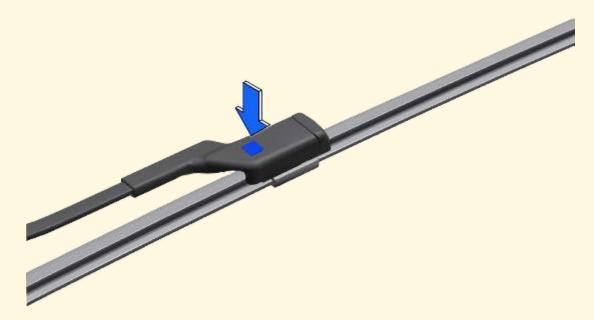

7. Press on the wiper arm in the position shown.

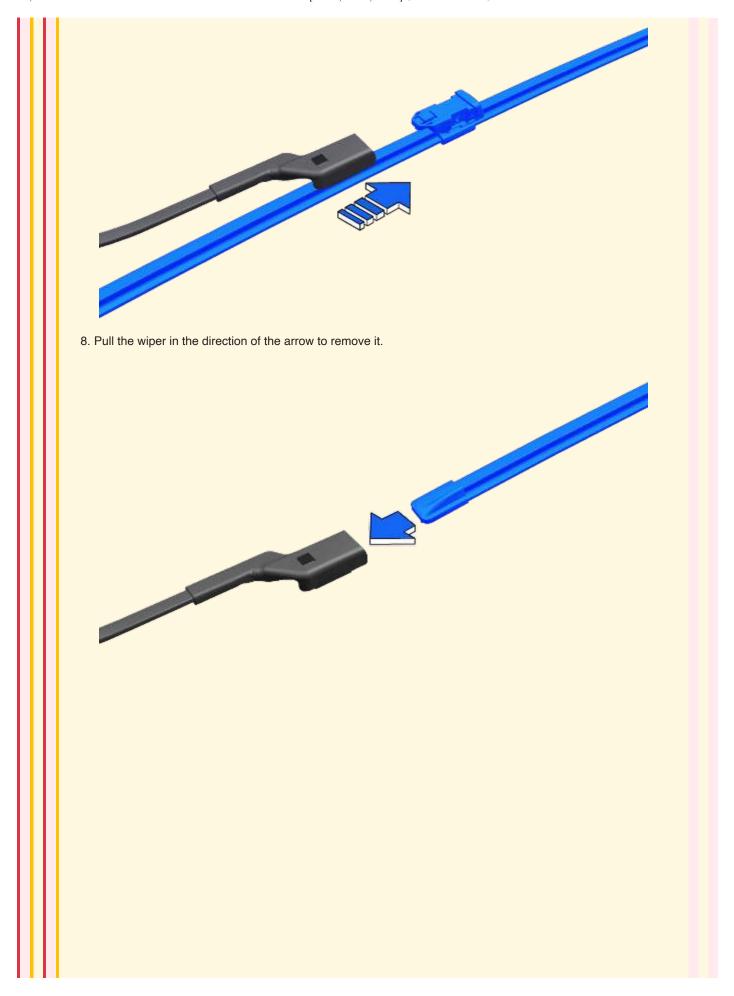



- 9. Slide the new wiper on the wiper arm in the direction shown until it clicks into place on the wiper arm.
- 10. Place the wiper assembly back on the windshield and check that the wiper is properly attached to the wiper arm
- 11. Select Off from the Infotainment screen to return the Wipers back to the home position.

Rear Wiper Blade Replacement

- 1. The vehicle needs to be in ACC power mode.
- 2. The rear wiper needs to be in home position, wiper switch in Off state and Wash mode not activated.
- 3. Set Wiper Service Mode to On.



- 4. The rear wiper will stop in a vertical position, allowing the owner to lift the wiper arm from the windshield.
- 5. Replace the rubber wiper blade.
- 6. Place the wiper assembly back on the windshield and check that the wiper is properly attached to the wiper arm.
- 7. Select Off from the Infotainment screen to return the Wiper back to the home position.



NOTE

Always use replacement blades that are identical to original blades. Using inappropriate blades can damage the wiper system and windshield.

Allowing the wiper arm to touch the windshield when no wiper blade is installed could damage the windshield. Any damage that occurs would not be covered by the vehicle warranty. Do not allow the wiper arm to touch the windshield.



Wiper blades cannot be locked into a lifted position. Do not lift a wiper arm beyond its intended position, it can cause damage to wiper blade.

Brake Pads & Fluids

Brake pads and brake fluid are the main components of the vehicle braking system, if they get damaged then it will affect the braking ability of the vehicle. The driver should always take care and inspect brake pads and fluids on a regular basis.

Brake Pads

All brake pads should be checked and renewed as necessary. Brake pad wear depends largely on the way the vehicle is driven, and on the vehicle operating conditions. Brake pad wear increases when driving frequently in the city or short distances or when driving aggressively.

The vehicle is equipped with brake pad wear indicators. A wear indicator is a thin metal strip that is attached to the brake pad that will produce a squealing sound when it comes in contact with the brake rotor. The sound will be heard when the brake pad material has worn to the end of its service life. If this occurs or there is difficulty stopping the vehicle when the brake pedal is pressed, please contact VinFast Service Centre to have the braking system inspected.



NOTE

Always replace brake pads as a set, either both front or both rear sets.

To avoid costly brake repairs, do not continue to drive with worn brake pads.



WARNING

Neglecting to service the vehicle braking system may result in reduced brake system performance, increasing the stopping distance which may lead to a collision.

Replace worn brake pads immediately. Damage to the braking system can result in a braking hazard.

The braking effect may get reduced if the brake pads become wet, after heavy rainfall or after washing the vehicle. Be prepared to exert higher force on the brake pedal in order to compensate.

A salt layer on the brake pads may effect the braking performance of the vehicle.

Overheated brakes reduce the braking effect and considerably increase the braking distance.

Brake Fluid

Brake fluid is a type of hydraulic fluid used in hydraulic brake systems to transfer force into pressure.

The brake fluid level in the reservoir should be checked regularly. Brake fluid will absorb moisture from the atmosphere over time. The hydraulic braking system may get damaged if there is too much moisture in the braking fluid.

To Check the Brake Fluid:



- 1. Make sure the vehicle is parked on a flat ground
- 2. Let the braking system cool down.
- 3. Brake fluid reservoir is located under the cover plate



- . Open the cover plate by pulling the plastic tabs on the side of the plate.
- 4. The fluid level should be between the MIN and MAX indicator marks as shown on the side of the reservoir.

There are two reasons why the brake fluid level in the reservoir may go down:

- Brake pads normal wear. When new pads are installed, the fluid level goes back up.
- Fluid leak in the hydraulic brake system. Have the hydraulic brake system fixed. With a leak, the brakes will not work well.

Always clean the brake fluid reservoir cap and the area around the cap before removing and installing the cap.

Do not top off the brake fluid.

If fluid is added due to worn pads, when new brake pads are installed there will be too much fluid. Add or remove fluid, as necessary, only when work is performed on hydraulic brake system.



NOTE

The brake fluid used in this vehicle is DOT 4. Do not mix other types of brake fluid, otherwise it will cause damage to the braking system and components.

The red brake indicator



on the Infotainment screen will illuminate if the brake fluid in the reservoir drops below the recommended level. The ABS indicator



may also illuminate while driving. Visit a VinFast Service Center as soon as possible.



NOTE

The brake fluid level drops slightly during vehicle operation and as the brake pads wear.



Only use new fluid from a sealed airtight container. Never use previously used fluid or fluid from an opened container, as brake fluid has a tendency to absorb moisture which decreases braking performance.

Do not allow any brake fluid to come into contact with the vehicle paint to avoid corrosion.

Contact VinFast immediately if any increased movement of the brake pedal or a significant loss of brake fluid is present. Driving under these conditions can result in extended stopping distances or complete brake failure.



WARNING

The brake fluid level must be between MIN and MAX level. Brake fluid may leak out over the edge of the reservoir if the brake fluid level is above the MAX marking and it can result in damage to the vehicle.

If the brake light illuminates while driving, stop as soon as safely possible and check the brake fluid. If left unchecked, this may prevent effective braking and cause increased movement in brake pedal and/or complete brake failure.

Brake fluid is highly toxic. Keep brake fluid storage tanks sealed and out of reach of children. Seek medical attention immediately is accidentally exposed to any brake fluid.

Prevent brake fluid from making contact with skin and eyes. If contact is made, rinse immediately with water. If redness, pain or discomfort persists, seek medical attention as soon as possible.

Never touch any of the High Voltage components in the brake fluid reservoir area.

Using the incorrect or contaminated brake fluid could result in damage to the brake system. This could result in the loss of braking leading to a possible injury. Always use the proper manufactured approved brake fluid.

Air Conditioner

In order to ensure continuous and efficient operation of the air conditioning system, regardless of the weather and time of the year, a few minutes of cooling must be performed once a month.

The Air conditioning system in the vehicle is filled with R134a refrigerant. The technical details of the air conditioning refrigerant can be found on the label inside the hood of the vehicle. Alternatively See > Technical specification > Fluids, Lubricants and Parts Overview in this Owner's Manual.



NOTE

Use only the correct refrigerant and air-conditioning compressor oil.

In humid climates, the air conditioning may create water droplets inside the vehicle. It is recommended to use the air conditioner with the windows closed.

Electric vehicles run much quieter than a gasoline-powered vehicles, therefore the sound of the A/C compressor may be more noticeable.



WARNING

Air conditioning systems contain high-pressured refrigerants. Air conditioning refrigerant systems should only be serviced by qualified personnel. Opening the air conditioner refrigerant system can result in serious injuries.

9.3. Electrical System

Fuses and Circuit Breakers

The vehicle has fuses and circuit breakers to protect against an electrical system overload. The three main fuse boxes in the vehicle are located in the driver side left-hand panel, in the front cargo compartment under the hood, and on top of the 12V battery. It is strongly recommended to have electrical fuses changed or inspected by VinFast technician.

When a fuse blows, the element inside is melted or broken. If there is a problem and a fuse needs to be replaced, ensure a fuse of the identical size and rating is used. If the fuse on the replacement blows immediately, please contact the local authorized VinFast Service Center for maintenance as soon as possible.



A fuse must not be replaced with anything but another fuse with the same rating. Never try to repair a blown fuse.

Do not use copper wire or aluminum foil as a temporary substitute for the proper fuse. Such substitutes can cause extensive wiring damage, possibly resulting in a fire.

Avoid using a screwdriver or any other metal objects to remove fuses, as they may cause short circuits.



WARNING

Fuses and circuit breakers are marked with their ampere rating. Do not exceed the specified amperage rating when replacing fuses and circuit breakers. The use of an oversized fuse or circuit breaker can result in a vehicle fire causing serious injury or death.

Installing fuses that do not meet VinFast's original fuse specifications is dangerous. The fuses could fail, resulting in a fire causing vehicle damage and/or death.

Spilling liquid on any electrical component on the vehicle may damage it. Always be very careful when working around electrical components.

IP Fusebox


To access instrument panel fuses:





- 1. Turn the vehicle Off.
- 2. Make sure all switches are in the Off position.
- 3. Open the coin cargo compartment, which is located on the lower left hand side of the driver.
- 4. Push the inner sides, while pulling out the coin storage box to expose the fuses.
- 5. Refer to the description provided inside the fuse panel cover to place the required fuse.
- 6. Remove the required fuse by using the removal tool which is provided in the Engine Bay fuse box.
- 7. Check and replace the blown fuse.
- 8. Make sure the replaced fuse has the same rating and it fits tightly in its place. If in doubt, please contact a VinFast service technician.

Fuse Details:

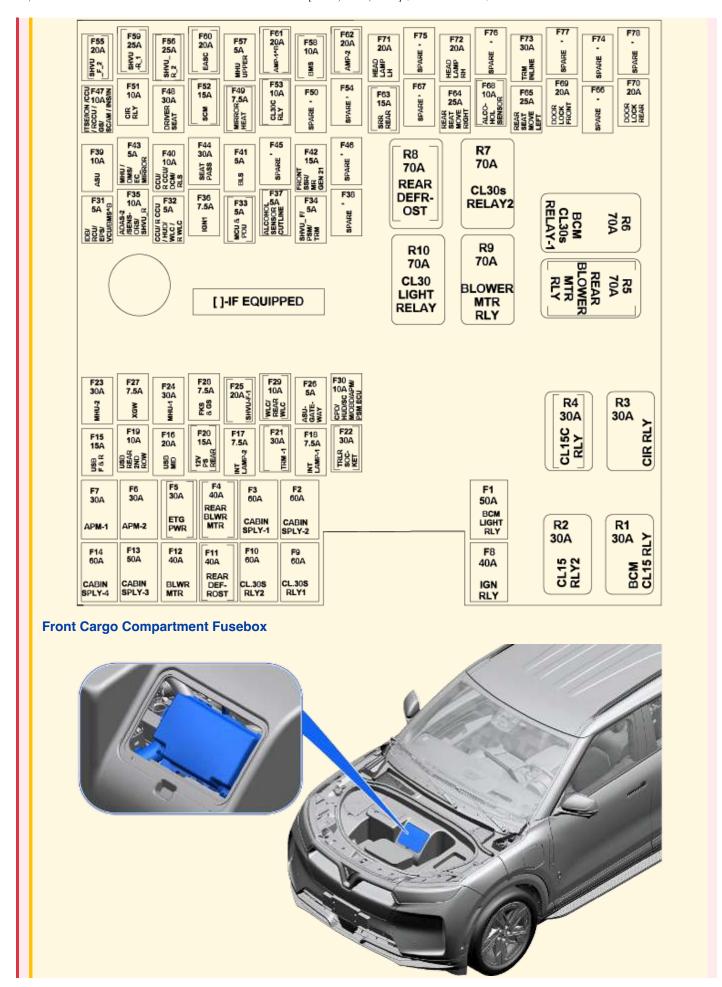

To access the Front Cargo Compartment fuses:

- 1. Turn the vehicle Off.
- 2. Make sure all switches are in the Off position.
- 3. Open the front cargo compartment.
- 4. Remove the fuse box cover plate by pressing the tab at the bottom of the plate.
- 5. Remove the fuse panel cover by pressing the two tabs and pulling upwards.
- 6. Refer to the description provided inside the fuse panel cover to place the required fuse.
- 7. Remove the blown fuse out by using the removal tool which is provided in the Engine Bay fuse box.
- 8. Check and replace the blown fuse.
- 9. Make sure the replaced fuse has the same rating and it fits tightly in its place. If in doubt, please contact a VinFast service technician.




NOTE


Remember to securely install the fuse panel cover back, if not securely attached water may enter and cause electrical damage.

If a multi-fuse has blown, it is recommended to contact a VinFast service technician.

Front Cargo Compartment Fuse Label:

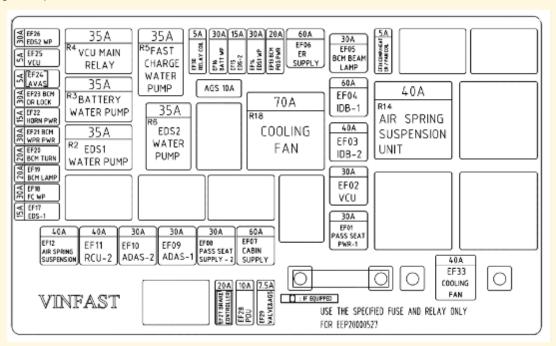


12v Auxiliary Battery Fuse box:

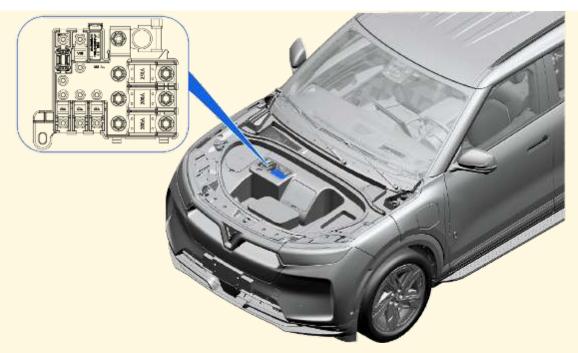

To access 12v Auxiliary Battery Fuse box:

- 1. Turn the vehicle Off.
- 2. Make sure all switches are in the Off position.
- 3. Open the front cargo compartment.
- 4. Remove the battery cover plate by pressing the tab at the bottom of the plate.
- 5. Remove the fuse panel cover by pressing the two tabs and pulling upwards.
- 6. Refer to the description provided inside the fuse panel cover to place the required fuse.
- 7. Remove the blown fuse out by using the removal tool which is provided in the Engine Bay fuse box.
- 8. Check and replace the blown fuse.
- 9. Make sure the replaced fuse has the same rating and it fits tightly in its place. If in doubt, please contact a VinFast service technician.

Fuse Label:

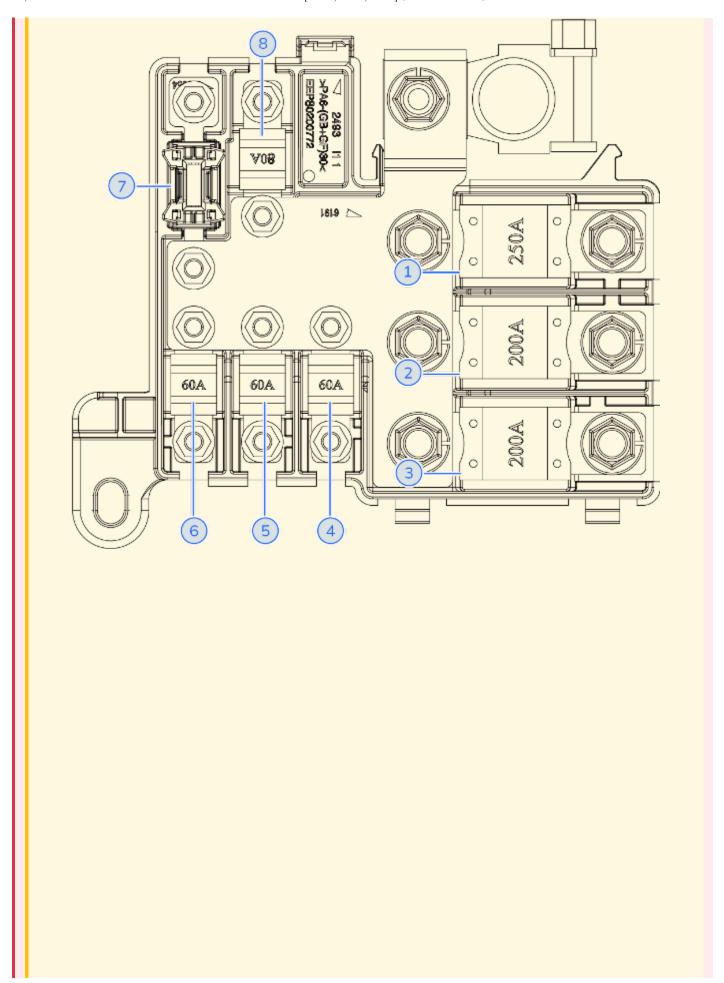


	PRE FUSE BOX DETAILS (12V AUX)			
No.	Fuse Name	Туре	Rating	
1	DC-DC	MEGA	250A	
2	Cabin Fuse Box	MEGA	200A	
3	Engine Fuse Box	MEGA	200A	
4	EPS-1	MIDI	60A	
5	EPS-2	MIDI	60A	
6	I Booster	MIDI	60A	
7	Battery Sensor	MINI	5A	
8	Power Converter	MEGA	80A	
-	Spare	NO	-	


Lights


The vehicle is fitted with Light Emitting Diodes (LED's) in all interior and exterior lights. These are not serviceable items, therefore it is recommended for any light replacement to contact your authorized VinFast Service Center. Replacement lights must be of the same type and size as the original lights.

Exterior Lights


Front light:

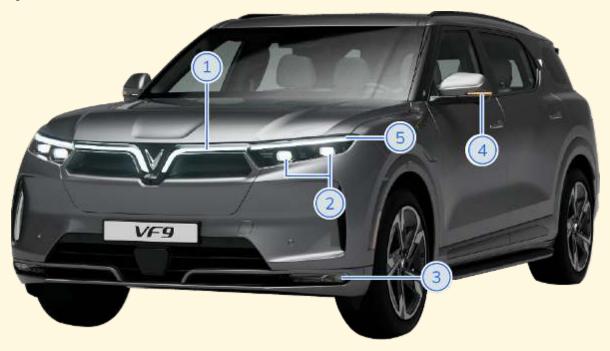


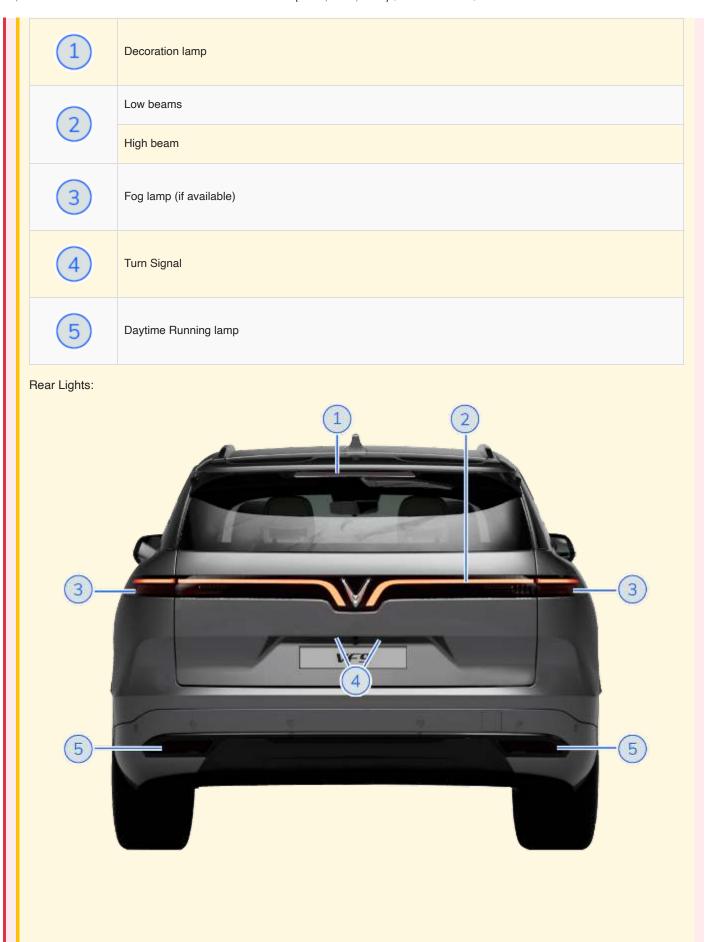

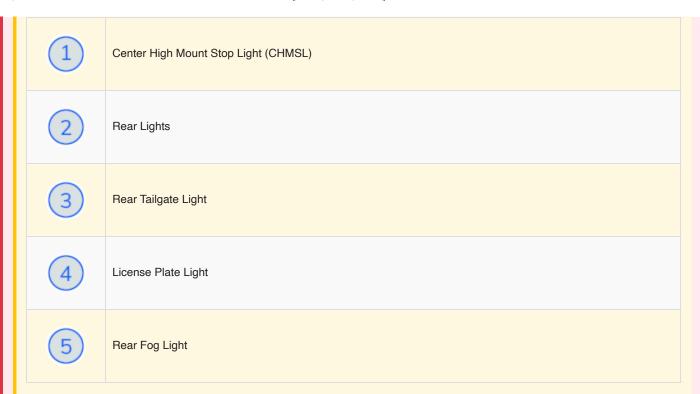

Rear Lights:

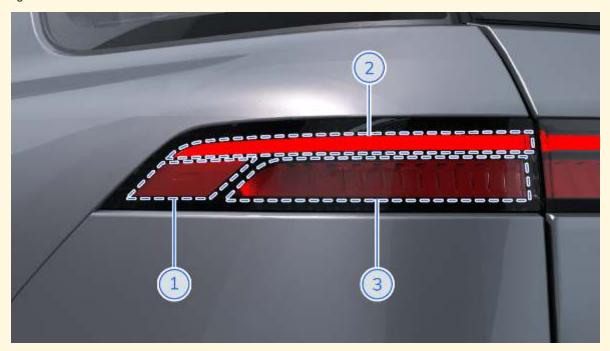

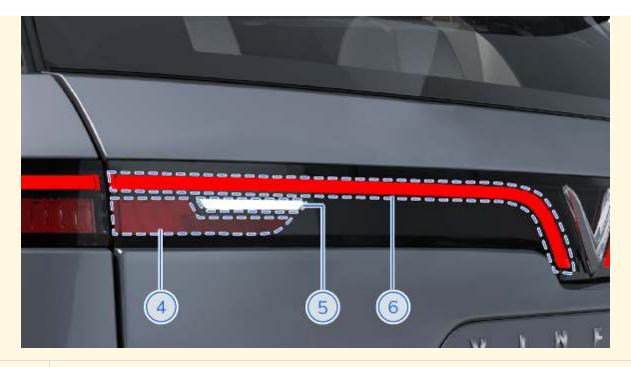

Tail Light /Turn Indicator

Stop / Brake

Stop / Brake

Stop / Brake

Reverse light

Position Light



Immediately replace the LED if the light is dimmed, cracked, or damaged and carefully dispose of.



NOTE

The LED lamp is an integrated unit and hence cannot be replaced individually. The whole unit must be replaced at the same time.

Interior Lights

All the interior lights are LED; therefore it is recommended to visit a VinFast Service Center for any replacement or faults.



CAUTION

Do not touch the glass portion of the LED with bare hands. If holding the glass portion is unavoidable, hold it using a clean dry cloth to avoid contact with moisture and grease.

Battery

The vehicle is equipped with a 12V battery that is used to power the vehicle and its electrical components.

Even when the electrical equipment is switched off, the battery can still drain if it is not driven for long periods of time. Contact an authorized VinFast dealer or authorized VinFast service facility for more information.





NOTE

If the vehicle becomes unresponsive and does not unlock, open, or charge, the low voltage battery may be discharged. Contact a VinFast authorized service center.

When the vehicle is parked for a long time (more than 1 month), it is recommended to disconnect the negative terminal of the battery. Make sure the ignition switch is off before connecting or disconnecting the negative terminal of the vehicle battery.

In extreme cold weather conditions, have the battery checked at an authorized VinFast Service Center before driving.



Always read and follow instructions carefully when handling a battery.

Do not use the Battery as a stationary power source. Doing so voids the warranty.



WARNING

Wear correct PPE (Personal protective equipment) to avoid injury from acid splashes from the battery.

Keep batteries out of reach from children.

Batteries contain sulfuric acid, avoid contact with skin and eyes or clothes.

Wash immediately with water if contact is made. Seek medical attention if you feel pain or burning sensations.

Never touch any of the electrical system components when vehicle is starting or when ignition is On.

The Battery has no parts that the owner or a non-VinFast authorized service technician can service. Under no circumstances should the Battery be opened or tamper with. Contact authorized VinFast Service Center to arrange for Battery servicing. https://www.p65warnings.ca.gov/products/passenger-vehicle

Battery Maintenance:

To ensure optimum working of electronics components of the vehicle, check the health of the 12V battery regularly.

- · Ensure the battery is securely mounted
- Ensure the battery is clean and dry, with no visible liquid leaks
- Ensure the battery terminals and connections are always clean, secure and are coated with terminal grease

Battery Replacement:

Only use parts authorized by VinFast. It is recommended to install the same type and specification battery as the original battery. Please contact an authorized VinFast dealer for more details.

The following functions may need to be reset after the battery has been disconnected:

- Liftgate
- · Climate control settings
- · Clock and Phone settings
- Infotainment system

9.4. Wheels and Tires

Tires

There are three tire options available depending on the region of sale and variant of the vehicle. The following tire options are:

- 275/45 R20
- 275/40 R21
- 285/35 R22 (Optional)

Depending on the climate where the vehicle will be driven, alternative tires may be needed. These are classified as Summer, Winter, or All-Season tires. Please visit a VinFast Service Center for more information.

Tire Care

To ensure the safety of all the passengers and maximize the efficiency and range of the vehicle, it is recommended to maintain proper tire pressures and stay within the specified load limits of the vehicle.

Any tires that show uneven wear & tear or are damaged must be replaced or repaired as soon as possible. Worn

tires can cause loss of traction, braking effectiveness and can affect steering control.

The vehicle is fitted with All-Season tires which are designed to provide good overall performance on most road surfaces and weather conditions.

The tire size and pressure information can be found on the label attached to the door frame on the driver's seat side. See > Wheels and Tires > Tire pressure.

Tire Inspection

Inspect the tire tread and side walls on a regular basis for signs of cuts, or wear, foreign objects, or distortion.



NOTE

Always replace tires with the same size, type, make and tread pattern as originally supplied by the vehicle manufacturer.

Tire pressure indicator telltale



will illuminate on the Infotainment screen if the tire is under/over-inflated.

Parking outside in direct or indirect sunlight may cause a difference in tire pressure. An increase of tire pressure is expected tires are warm. In an attempt to maintain recommended air pressure do not release air pressure from a warm tire, this can cause the tire to be under-inflated.

Please rectify any tire that is damaged, excessively worn, or incorrectly inflated before driving.

Spare Tire (If equipped)

The vehicle is equipped with one spare tire located in the rear cargo compartment.

T145/80 R19

The maximum allowable vehicle speed for the spare tire is indicated on a sticker located on the spare wheel. The spare tire is fully inflated when new, however, it can lose air over time. Check the inflation pressure regularly. Always correctly stow and inspect the spare tire to ensure it is ready for use when needed.

The damaged or flat road tire should be repaired or replaced and installed back onto the vehicle as soon as possible so that the spare tire will be available in case it is needed again.



NOTE

A spare tire is for TEMPORARY USE ONLY. Drive carefully when a spare tire is fitted on the vehicle. Do not exceed speeds more than 50 km/h (or 31 mph).

The tire size and pressure information can be found on the tire sidewall.

Only use winter tires that are approved for the vehicle.

Always replace the spare tire in the case of abnormal wear & tear, distortions or bulges.

Non-pneumatic tire are not recommended to be used on the vehicle.



WARNING

Do not drive the vehicle above the indicated maximum speed shown on the spare wheel.

Do not tow a trailer (if available) when a spare tire is fitted.

Do not drive if the spare tire is damaged or not properly inflated. This can cause serious damage to the vehicle and a risk to passenger safety.

The vehicle's suspension is designed for a specific tire and rim size combination. Only fit tire and wheel combinations as specified by VinFast. Failure to follow this can increase the risk of serious injuries in the event of an accident.

Tire Pressure

All tire pressure, including the spare tire (if equipped), should be checked when the tires are cold. Check the tire pressure on a regular basis.

Tires need the correct amount of air pressure to operate effectively.

The Tire and Loading Information label on the vehicle indicates the original equipment tires and the correct cold tire inflation pressures. The recommended pressure is the minimum air pressure needed to support the vehicle's maximum load carrying capacity.

Tire Pressure Placard

The recommended tire pressure is listed on the label attached to the driver's side center pillar:



Vehicle Type		VF 9				
Variant		ECO	PLUS	Spare		
Tire Dimension		275/45 R20*	275/40 R21*	145/80 R19*		
Cold Tire Pressure	FRONT	240 KPA,35 PSI, (SDI) 260 KPA,38 PSI, (CATL) 260 KPA,38 PSI, (SDI) 280 KPA,40 PSI, (CATL)	260 KPA,38 PSI, (SDI) 260 KPA,38 PSI, (CATL) 270 KPA,39 PSI, (SDI) 270 KPA,39 PSI, (CATL)	420 KPA, 61 PSI		
Wheel rim size		9Jx20	9.5Jx21			
Wheel rim type		Alloy	Alloy			
Wheel Offset (mm)		55	55			
* If available						

ii avallable

Tire pressure can be monitored by the driver via the Infotainment screen.

It is important that the tire pressures are correct to maximize the tire life and vehicle performance. Under inflated tires will wear out the inner and outer edges of the tire and cause the vehicle to handle poorly due to tire flexibility.

Over inflated tires will have a smaller contact area on the road surface, and therefore have reduced traction. The center of the tire will tend to wear out faster if tires are over inflated.

To check Tire Pressure:

It is recommended to check the tire pressure every 14 days or before long-distance travel. If there is a spare tire, also check the pressure of this tire.

The tire pressures can be checked by any of the following methods:

1. Tap App Library



on the Infotainment screen.

2. Tap Service



> Vehicle Status > Tire Pressure.

Alternatively tire pressure current status can be viewed in Car Control Area by:

- 1. Swiping left on Car Control Area.
- 2. TPMS page will be displayed.

To check Tire pressure manually:

- 1. Remove the valve cap from the tire valve stem.
- 2. Press the tire gauge firmly onto the valve to get a pressure measurement. If the cold tire inflation pressure matches the recommended pressure on the Tire Placard no further adjustment is necessary.
- 3. If the pressure is low, add air until the recommended pressure is reached.
- 4. If the tire is overfilled, release air by pushing on the metal stem in the center of the tire valve. Recheck the tire pressure with the pressure gauge.
- 5. Put the valve caps back on the valve stems. Without the valve cap, dirt or moisture could get into the valve and cause air leakage. If a valve cap is missing, install a new one as soon as possible.
- 6. If a tire is not maintaining pressure, please have the tire inspected by a VinFast Service Center.



NOTE

Incorrectly inflated tires may wear faster and create more road noise.



WARNING

Driving with an incorrectly inflated tire can affect the vehicle handling, steering and braking. This can lead to an accident, causing serious injury or risk to life.

Under-inflated tires are the most common cause of tire failures and can cause severe tire cracking, tread separation, or blowout, resulting in sudden loss of vehicle control and injuries.

Insufficient tire pressure leads to tire sidewall flexing and an increase of rolling resistance, which results in heat buildup and internal damage. Additionally, it can contribute to tire damage, irregular tire wear and loss of vehicle control. It is possible for a tire to lose up to half of its air pressure and not appear flat!

Tire Pressure Monitoring System

The tire pressure monitoring system (TPMS) measures each tire's pressure. If one or more tires are significantly under inflated or if the system is malfunctioning, a warning telltale will illuminate. The system uses sensors in each wheel to show information related to the vehicle tire pressures and warns if any tires are under-inflated. Tire Pressures are displayed on the Infotainment screen. see Car Control Area > <u>Tire Pressure Monitoring System (TPMS)</u>

TPMS Sensors



The TPMS system uses sensors in each tire that transmit real-time information on tire pressure and temperature. The sensors are attached to the valve.

Each sensor has an inbuilt battery and antenna.



NOTE

If the TPMS sensor battery gets depleted, then the unit needs to be replaced.


TPMS warning system


The TPMS system warns the driver if the tire pressure is below or above the recommended pressure. If an issue or missing sensor signal is detected, a TPMS alert symbol



will be displayed on the Infotainment screen. An alert popup will also be shown on the Infotainment screen and an audible chime will be heard. see Car <u>Control Area > Vehicle Alerts</u>.

Tire pressure status display:

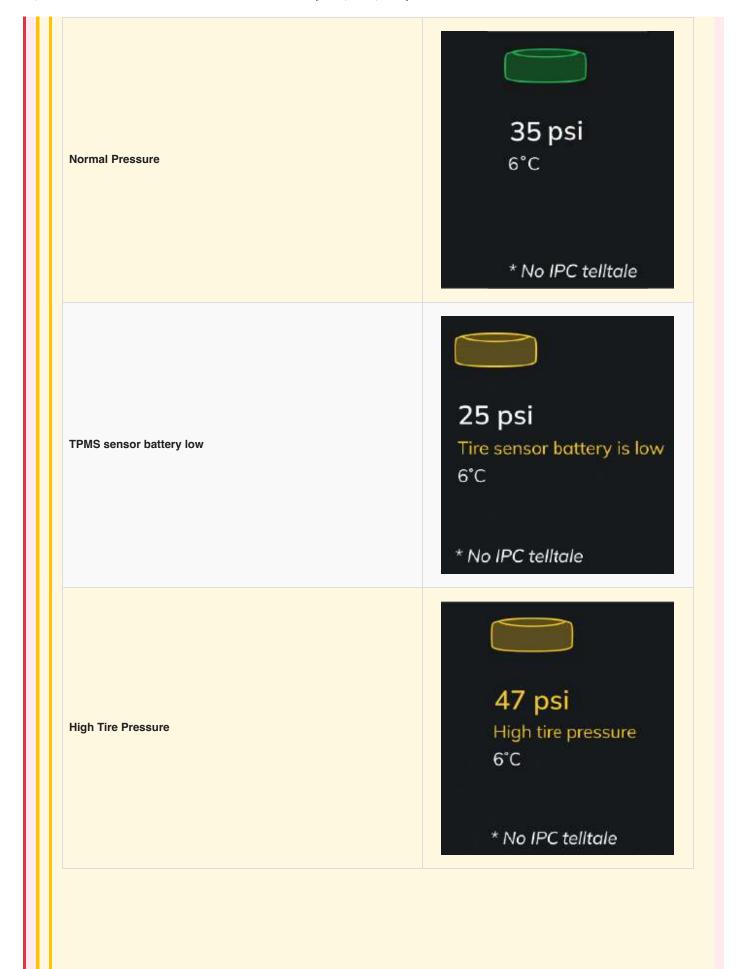

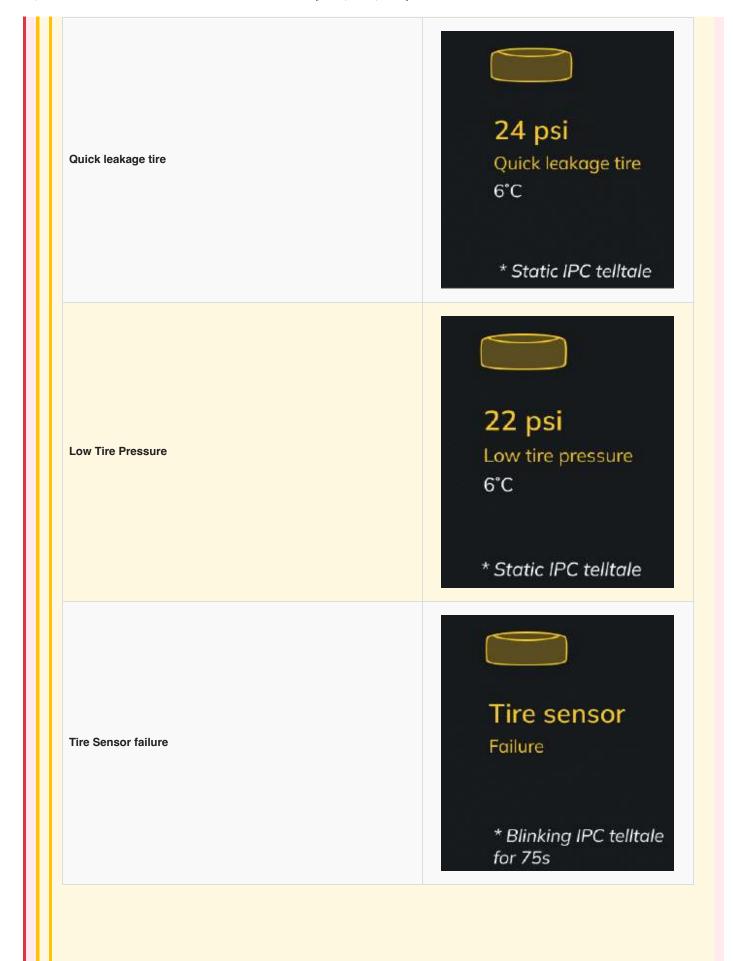



Lost connection with Tire sensor

Relearning of TPMS sensors:

For more details on TPMS sensor relearning, See > Car Control Area > Tire Pressure (TPMS).



CAUTION

The spare tire (if equipped), is not fitted with a TPMS sensor. Under-inflation of this tire will not be detected by the TPMS system. The pressure in the spare tire should be checked by using tire pressure gauge regularly.

If a tire inflater kit (if equipped) is used on a tire the sealant may block the TPMS sensor. If this occurs the sensor will need to be cleaned or replaced.

Tire sealant materials are not all the same. A non-approved tire sealant could damage the TPMS sensors.



Tire pressure should also be checked regularly, using an accurate pressure gauge when the tires are cold.

If a tire pressure alert is displayed on the screen, immediately reduce the speed of the vehicle and stop as soon as possible. Check tire pressures of all the tires before resuming your journey.

If required, use the spare wheel (if equipped) in the rear cargo compartment to replace the defected tire or use a tire repair kit to repair the tire.

If a tire pressure is low, try to avoid any sudden direction changes or hard braking maneuvers.

Driving with an incorrectly inflated tire can affect the vehicle handling, steering and braking. This can lead to an accident, causing serious injury or death.

Always adapt tire pressures to your driving style and the vehicle load. Overloading can lead to loss of vehicle control and can increase the risk of an accident.

Incorrect tire pressures increase tire wear and has a negative effect on driving and braking behavior, which increases the risk of an accident.

TPMS is not a substitute for regular tire maintenance.

The driver must maintain correct tire pressure in all the tires even if the tire hasn't reached a state to trigger Low TPMS alert telltale.

Tire Wear & Tread Depth


The tire is designed with a tread pattern wear indicator line. If a tire's tread is worn down to one sixteenth of an inch (2 mm), it must be replaced so that the vehicle does not skid or hydroplane. Built-in tread wear indicators, or wear bars, which appear as thin, smooth rubber strips across the tread, will appear once the tread wears. If necessary, a tread depth gauge can be used to measure.

The wear should be even across the tire. The left and right tires should have the same amount of tread depth, to prevent the vehicle from losing control while driving.

Tire wear

The following situations can increase tire wear:

- Inflation pressure that is too low or high can significantly increase tire wear.
- Driving on curved roads at high speeds, rapid acceleration, and heavy braking increases the tire's wear.

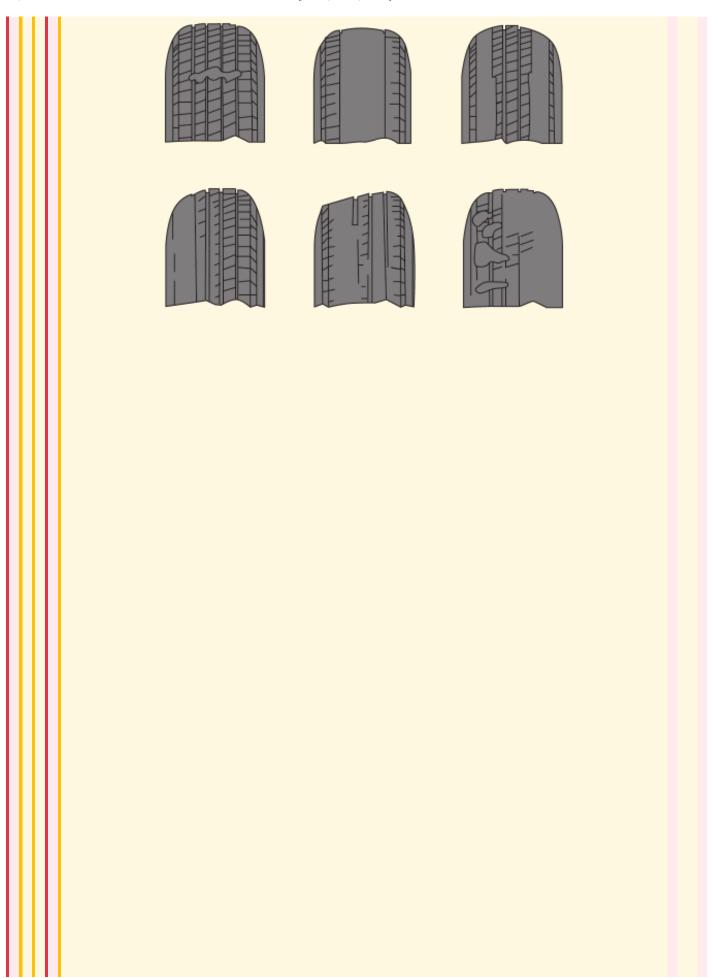



Replace the worn or damaged tire immediately. Worn or damaged tires can cause loss of braking, steering control, and traction.

It is recommended to replace the tires in sets i.e., replace either both front two or rear two tires.

Always replace tires with the same size that was originally supplied.

Driving in hot weather or an overloaded vehicle can cause the tires to wear out faster. Regular inspection of the tire is recommended.

The grip of damaged tires is very low, especially on wet roads, which can cause the vehicle to float on the road surface (hydroplaning).



CAUTION

When the vehicle is in high speed and/or in wet conditions. Steering and braking will not perform optimally.

Tire Rotation

The vehicle's tires are critical components that ensure optimum performance of steering, handling, and braking functions. This performance can be impacted by uneven tire wear and as a result it is important to ensure tires are rotated on a regular basis. Rotation will extend tread life, help to maintain mud, snow, and wet traction levels, and contribute to a smooth and quiet ride.


To make the wear of each tire uniform and extend its life, it is recommended that the tires be rotated. During rotation, check the tires for correct balance. If the abnormal wear continues after the rotation, check the wheel alignment.



NOTE

Tire rotation does not include the spare tire (if equipped).

Please refer to the below pattern when changing the tire positions:

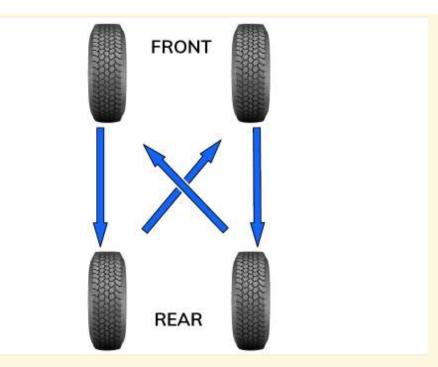

- Check whether the tread pattern or the side of the tire is damaged. If the tire is damaged or inflated, replace the tire immediately.
- Check the wear and condition of the brake disc and brake pads.
- After the tires are rotated, make sure that the front and rear tire pressures and wheel nut torque meet the specified values.
- The Tire Pressure Monitoring System needs to be calibrated to relearn the tires new position, See > Wheels and Tires > TPMS.



CAUTION

The tires fitted to the vehicle at the factory are directional tires. They are only designed to roll in one direction. It is not recommended to rotate the tires diagonally (e.g., rear left to front right or rear right to front left) as this will require removing the tire from the rim.

Please visit a VinFast Service Center to rotate the tires diagonally if needed.

It is necessary to update the sensor settings for the tire pressure monitoring system if the tire label shows different tire pressures for the front and rear tires. The system should always be reset after tire rotation. Otherwise, this may display inaccurate pressures and warnings to the driver.



Do not use the compact spare tire for tire rotation.

Do not mix bias ply and radial ply tires under any circumstances. This can lead to abnormal handling features that can cause the wheels to loosen over time. The wheel may fall off and cause an accident.

Rust or dirt on a wheel, or on the parts to where it is fastened, can cause wheel nuts to become loose over time. The wheel may become detached and cause an accident.

Do not apply grease to the wheel mounting surface, wheel conical seats, or the wheel nuts or bolts. Grease applied to these parts can cause a wheel to become loose or come off, resulting in an accident.

Wheel Alignment and Balance

The wheels and tires on the vehicle are aligned and balanced to give the maximum tire life and overall performance. In most cases, the wheels and tires do not need alignment and balancing regularly. However, if any abnormal tire wear is observed or the vehicle starts pulling one way or towards one side, then alignment may be needed. Also, if the vehicle is vibrating when driving on a smooth road, the tires and wheels may need to be rebalanced.

Wheels may need to be aligned in following scenarios:

- After replacing or repairing the tire in a collision accident.
- Observed one-sided wear of front and rear tires.
- If the wheels are shaking or the steering wheel is vibrating while driving at a high-speeds
- When the vehicle pulls to the left or right, rather than going straight.



NOTE

Wheels and tires should be aligned by an approved VinFast Service Center.



CAUTION

Incorrect wheel alignment causes excessive tire wear and may impact vehicle safety.

9.5. Vehicle Cleaning

Exterior Care

The exterior of the vehicle should be regularly cleaned to maintain the vehicle's appearance and condition. More frequent cleaning is recommended if driving on roads that have had salt or antifreeze applied or when driving in coastal areas, as these can increase the risk of corrosion of the vehicle's body and metal components.

Cleaning the vehicle also ensures good visibility through the windows and mirrors and provides others with a clear vision of the brake and indicator lights.

Cleaning Body Panels:

Before washing, check that all doors and windows are closed properly and remove any heavy deposits of mud and dirt with a hose. If hand washing, use a soft cloth with an approved and tested soap diluted in lukewarm water.

Wash the body of the vehicle with soapy water or noncorrosive mild gel detergents as necessary.

Rinse with clean water and dry thoroughly with a chamois or a soft microfiber towel.

Clean windows and mirrors using an approved automotive glass cleaner. Do not use any abrasive cleaning fluid on any of the surfaces.

Inspect for minor paintwork damage such as stone chips and get it fixed immediately to prevent the formation of rust.



CAUTION

Do not use petroleum based, or abrasive cleaning agents as they can damage the vehicle's paint.

Have stubborn stains removed by a qualified workshop.

Improper vehicle cleaning can cause severe damage to the vehicle.

Do not wash the vehicle in direct sunlight.

When using high pressure washer, hold the nozzle at a sufficient distance away from the surface of the vehicle. Do not aim directly at parking sensors, cameras, body seals, cables, or electronic modules.

Never aim a water jet directly at the doors, charging port door or the liftgate in cold weather, the components could freeze up.

Do not use excessively hard, abrasive cleaning tools.

Use water up to a maximum temperature of +60°C (+140°F) only.

Ensure the charging port door is closed prior to washing the vehicle. Do not spray high pressure water towards the charge port as it may result in damage to the charge port door or related charging equipment.

Do not place any stickers or magnetic signs on vehicle components painted with matte finish paint. The paint could get damaged when the stickers or magnets are removed.



Incorrect care and cleaning of vehicle parts can impair the safety features of the vehicle and cause serious injury. Vehicle parts must be cleaned according to the manufacturer's instructions. Always use approved or recommended cleaning products.

Vehicle cleaning products may be toxic and hazardous. Improper use of care products and incorrect application of care products can cause accidents, severe injuries, burns or poisoning.

Keep children away from all cleaning products.

Use care products only outside or in well-ventilated rooms so that you do not breathe in any toxic vapors.

Never use turpentine, nail varnish remover or other volatile fluids for vehicle cleaning. These substances are highly toxic and flammable.

Brake performance may get reduced after washing the vehicle. Test the brakes while driving slowly to see if they have been affected by water. If braking performance is impaired, dry the brakes by engaging them lightly while maintaining a slow speed.

Cleaning the Wheels:

The aluminum alloy wheels should be cleaned at the same time as the rest of the vehicle. After washing with the same solution, rinse thoroughly with water.

The wheels have a transparent protective layer (paint) to protect the aluminum from corrosion and rust. Using non-suitable cleaners (including some marketed wheel cleaners) or hard brushes can damage the coating. Only use a neutral cleaner and a soft brush or sponge to clean the wheels.



CAUTION

When driving on a rough road or driving off road, be careful not to damage the tires and wheels. After driving, inspect the tires and wheels.

When passing over a pothole, speed bump, manhole, or curb stone, drive the vehicle slowly so as not to damage the tires and wheels.

Cleaning Under body:

Regularly check the under body for build-up of dirt, grime and debris that may lodge in unsuspecting areas.

From a safe distance, thoroughly flush the vehicle under body and wheel openings with lukewarm or cold water. Avoid using a high-pressure hose when cleaning the under body. The High Voltage battery is sealed to prevent water intrusion.

If damage or corrosion is detected, have the vehicle inspected by a VinFast Service Center.

Keep the drain holes at the lower edges of the doors, rocker panels and frame members free from clogging with debris. Any trapped water inside these areas can cause them to corrode.

Wash the underside of the vehicle once road salts are no longer used for the season.



WARNING

The vehicle must be cold, on a flat surface, in Park mode and handbrake should be applied when attempting to clean the

under body of the vehicle.

Do not touch any orange high voltage cabling if cleaning the under body of the vehicle.

Always wear protective clothing when cleaning near sharp metal components, for example vehicle under body.

Automatic car washes:

It is safe to wash electric vehicles in automatic car washes. The equipment will not damage the electric motor or battery as they are sealed to prevent water intrusion.

It is recommended to use touchless automatic car washes as no contact is made to the exterior of the vehicle with rotating brushes that have the potential to damage the paintwork.

For the use of automatic car wash facilities, a special Wash mode can be selected from the infotainment screen.

To enable Wash Mode, See > Infotainment screen > Wash Mode.



NOTE

Do not drive the vehicle through an automatic car wash that uses silicon carbide tire/wheel cleaning brushes. Damage could occur and the repairs would not be covered by the vehicle warranty.



CAUTION

In automatic car washes, fold the exterior mirrors so that they don't get damaged.

Check and compare height and width of the car wash with the vehicle so that the vehicle doesn't get damaged.

Car washes that scan the contours mechanically may damage the vehicle, e.g., spoiler.

Radar, Sensor, Camera Care

In order for the Advanced Driver Assistance Systems (ADAS) to function properly, the cameras, radars, and sensors must be kept free of dirt, mud, ice, snow, etc., and

should be washed regularly with water and car washing detergent.

Obstructing the cameras, radars, and sensors can disable or cause limited functionality of the systems, and in some circumstances can show false warnings.



NOTE

If obstructed, a driver assistance warning message will appear on the infotainment display identifying that a camera, radar, or sensor is blocked.



Warning messages are summarized as follows:

1	Windshield Camera Obstructed
2	Driver Monitoring Camera Obstructed
3	Left or Right Camera Obstructed
4	Front Left or Right Radar Obstructed
5	Front or Rear Parking Sensors Obstructed
6	Front or Rear Ultrasonic Sensors Obstructed
7	Front Camera Obstructed
8	Front Center Radar Obstructed
9	Rear Left or Right Radar Obstructed
10	Rear view Cameras Obstructed

Cleaning

Clear any dirt or grime build-up by wiping the components with a soft cloth and lukewarm water or by spraying water.

The advanced driver assistance systems will function normally after cleaning. If the warning message persists

after the sensors and cameras, the system may be faulty. Please visit a VinFast Service Center to have the system inspected.

If any damage is evident to any of the components or their surrounding parts (bumper or windscreen), please visit a VinFast Service Centre to have the issue rectified.



CAUTION

Do not clean sensors or cameras with abrasive objects or cleaners, that may damage its surface and can lead to reduced functionality.

Do not attempt to remove dirt, grime, debris, etc., by wiping an exposed lens with your hands or a dry cloth. The lens can be damaged by debris rubbing against the lens surface while wiping.

Avoid aiming a high-pressure washer directly at the sensors or cameras, while washing the vehicle.

Do not install or apply objects, such as a bumper sticker, film, or a bumper guard on or near the radars and sensors.



Dirty or damaged radars, sensors or cameras may affect the performance of your advanced driver assistance systems.

In case the windscreen or radars have been replaced, they will require re-calibration. The re-calibration process must be performed by a trained VinFast technician for optimal functioning of ADAS.

Interior Care

Regularly clean the vehicle's interior to prevent a build-up of dirt and dust that could cause premature degradation of the

Wipe all surfaces down with a slightly damped microfiber cloth with approved interior cleaning products. Drying immediately will prevent streaks from remaining on the surface.



NOTE

Never allow water or other liquids to come in contact with electrical or electronic components inside the vehicle as this may damage them.

When cleaning leather products (steering wheel, seats etc) use neutral detergents or low alcohol content solutions. Avoid using high alcohol content solutions or alkaline detergents, as this may cause the color of the leather to fade, or the surface may get stripped off.



CAUTION

Do not spray liquids directly onto the surface of switches and controls. Any fluid that leaks into the gaps around switches and controls can damage the electronics of the vehicle.

To prevent damage to interior surfaces, do not clean them with chemical solvents or strong detergents. Do not spray cleaners on any switches or controls.

Do not let water or other liquids to come in contact with electrical components inside the vehicle as it may result in damage. Never rub any surface aggressively or with too much pressure.

Cleaning Seats and Seat belts:

To prevent ingrained dirt and staining, clean the seat upholstery regularly. Wipe the seat surfaces down using a clean, dampened, non-colored cloth or vacuum with a soft brush attachment. Do not leave excessive water on the surface.

Fully extend the seat belts and clean them with a mild, non-abrasive soap and lukewarm water. After washing thoroughly, sponge the solution out of the belts. Do not allow the belts to retract until they are fully dry.

Regularly inspect the seatbelt webbing for contamination, damage, or fraying.



CAUTION

Do not use bleach, strong detergents or an abrasive brush or cloth to clean the seatbelt as it may damage and weaken the fabric.

Do not use steamers, brushes with hard bristles, hard sponges etc., to clean the seats as this can damage the seats.

Do not bleach or re-dye the webbing because this may weaken the seat belt.



Any damage identified on a seatbelt should be fixed immediately at a VinFast Service Center. Never use a damaged seatbelt. Do not allow passengers to ride in any area of the vehicle that is not equipped with seats and seat belts.

Do not allow any water, cleaning products or fabric from cloths to enter the seat belt mechanism. Any substance, which enters the mechanism may affect the performance of the seat belt in an impact. Damage to the seat belt can greatly reduce its effectiveness in reducing the risk of serious injury or death in the event of an accident.

Never remove seat belts to clean them.

Airbag Maintenance:

No substance should be allowed to enter an airbag cover. This could have an impact on proper operation. Gently clean surfaces with a slightly dampened cloth.



WARNING

Any liquid or substance that enters the airbag mechanism may prevent its proper deployment during an impact. A compromised airbag system could result in serious injury or death in the event of an accident.

Cleaning Glass Windows:

Clean the interior glass surfaces regularly using an approved glass cleaner to provide a clear and unobstructed view

Follow the directions as specified by the glass cleaner manufacturer.



CAUTION

Do not scrape or scratch the inside of the window glass. It could damage the thermal filaments and the antenna lines.

When washing the inside of the window glass, use a soft cloth dampened in lukewarm water, gently wiping the thermal filaments and the antenna lines.

Use of glass cleaning products could damage the thermal filaments and the antenna lines.

Cleaning Infotainment screen:

To remove marks, fingerprints and dust from the Infotainment screen use a high-quality clean microfiber cloth. Do not use any chemical, household cleaning agents or abrasive materials as the screen surface may be affected. Turn the vehicle off to avoid activating any buttons.



CAUTION

Avoid spilling or splashing liquids onto the Infotainment screen. It may cause it to malfunction hindering its use.

Make sure the infotainment display is switched off and cooled down before cleaning.

When cleaning, make sure no liquids enter the space between the Infotainment screen display and panels as this could cause damage.

Cleaning Carpet and Floor Mat:

Regularly clean the carpet and floor mats. Remove any unwanted substances and objects that could interfere with the operation of accelerator and brake pedals. Scrub with a weak solution of soap and warm water to remove unwanted ingrained dirt or stains. Replace the floor mats if they show signs of heavy wear.



WARNING

Unsecured or incorrectly positioned mats can interfere with the brake and accelerator pedal that could result in an accident leading to serious injury or death. After cleaning, correctly secure the mats before driving.

Never place a floor mat on top of another on the driver's side.

Do not overlay additional mats or liners over the floor mats. If using All Weather mats, remove the carpeted floor mats before installing them. Only use floor mats designed to connect to the anchors.

Remove loose dirt particles with a vacuum cleaner on a regular basis so that the material is not permanently damaged by abrasion.

9.6. Maintenance Schedule

Maintenance Schedule Overview

This section outlines the required maintenance for the vehicle.

To ensure economical and safe vehicle operation it is of vital importance that all maintenance work is carried out at the prescribed intervals by trained service technicians. It is recommended that this vehicle is maintained and repaired

by authorized VinFast Service Centers who will complete the scope of work as set out for the required tasks to sustain the road safety, road worthiness, operational reliability, and the New Vehicle Limited Warranty.

It is the responsibility of the owner to have the required maintenance performed and to retain records. Depending on market and region, the vehicle may be programmed to provide service reminders in car and on the VinFast App leading up to the schedule interval.



All technical service required to be performed on the vehicle should only be completed by trained and authorized personnel who are certified to work on electric vehicles.

Owners must not attempt to modify, alter, or replace any high voltage components, cables or connectors in the vehicle. High Voltage cables are colored orange for easy identification.

A poorly maintained vehicle increases the risk to drivers, passengers, and others on the road. If not maintained correctly, there is a danger of subsequent component damage or injury to individuals.



NOTE

The vehicle should not be modified in any way that could adversely affect its performance, safety, or durability as it may violate conditions of the warranties covering the vehicle. For details, read the separate Warranty Information handbook provided with the vehicle.

Maintenance Schedule

O Inspect and if necessary, adjust, correct, clean or replace	Km **	12,000	24,000	36,000	48,000	60,000	72,000	84,000	96,000	108,000	120,000
Replace or service	Years **	1	2	3	4	5	(6	7	8	9	10
Cabin Air Filter			•	•	•		•	•	•	•	
Air conditioning System			0		0		0		0		
T-box Battery			Change every 6 years								
HV Battery / E-Motor Cooling Syste	m Fluid		0		0	1	0		0		13
Brake Fluid					Ćh	ange ev	ery 2 ye	ars			
	General S	ervice	Inspec	tion It	ems						
Tire (Appearance, Pressure, Tread v Wheel (Damage, Crack, Other		o	0	0	o	o	О	0	ю	o	(
Brake Pads and Rotors		0	0	0	0	0	О	O	0	D	3
Brake lines, Hoses and Connections		0	0	0	0	0	0	0	0	0	3
Electric Drive Unit		0	0	0	0	0	0	0	0	0	3
Axle and Suspension Parts		0	0	o	0	0	О	0	0	0	1
Drive Shaft and Boots		0	0	0	0	0	0	0	0	0	3
Suspension Ball Joints		0	0	0	0	0	0	0	0	0	13
Steering Gear Linkage and Ball Joints		0	o	0	0	o	О	О	0	0	. 24
Windscreen Wipers / Washer fluid		0	0	0	0	0	0	0	0	0	3
Coolant Hose Inspection		0	0	0	0	0	0	0	0	0	4
High Voltage Battery		0	0	0	0	0	0	0	0	0	
High Voltage Cables and Wiring Harnesses		0	a	Ö	o	o	o	D	0	0	
Charging Port		0	0	0	0	0	0	0	0	0	3
12V Bottery		0	0	0	0	0	0	0	0	0	1
Underbody Inpsection			0	0	0	0	0	o	0	0	

It is recommended to inspect and rotate tires annually.
 Which ever comes first

Repeat Maintenance Schedule every 10 years, 120,000Km. Which ever comes first

Service Reminder (if available)

The owner will be reminded when a service is due, via a message that is displayed on the infotainment screen.

The notification that a Service Operation is due is determined by time since the last service and vehicle mileage.

If the message is dismissed three times, it will not reappear.

Service Technicians will clear the service reminder when the service operation is complete.

Maintenance Schedule Notes

The High Voltage battery and E-motor cooling system fluid is to be replaced every 10 years or when the battery is replaced.

The Electric Drive Unit is sealed for life. No maintenance is required.

Additional Maintenance and Care

The cabin air filter may need replacement more frequently if driving in areas with high traffic, poor air quality or high dust levels. The filter may also need to be replaced if there is reduced airflow, window fogging or bad odors. See > Fluids, Lubricants and Parts > Cabin Air Filter.

Regularly clean the interior and exterior of the vehicle to maintain the vehicle's appearance and condition and to prevent premature degradation of the surfaces. See > Maintenance > Vehicle Cleaning for more information.

Regularly check and maintain the recommended the tire pressure to prevent premature wear. See > Wheels and Tires > Tire Pressure.



NOTE

If it is not possible to leave the vehicle plugged into the charger, it is recommended to use or charge the vehicle at least once a month.

The High Voltage battery does not require owner maintenance. For any concerns, please contact a VinFast Service Center.

The on-board diagnostic socket, located under the steering column may only be used by authorized persons at the service center.



CAUTION

Do not allow the vehicle to sit idle for extended periods with a low charging state, otherwise it may not be possible to start or charge the vehicle and may also cause permanent damage to the battery.

Do not park or store the vehicle in areas which may flood, as flooding may damage the battery or other vehicle components.

Rodents can cause significant damage to your vehicle's electrical wires, air lines and interior trim resulting in expensive repairs. Consequences of the damage may limit your vehicles functions such as, but not limited to, a no start condition or result in fluid leaks. Consider taking steps to discourage rodents such as repellent sprays. Any damage, or related component failures caused by rodents may void the New Vehicle Limited Warranty.

9.7. Parts and Accessories

Parts

VinFast recommends using only genuine spare parts and accessories for its vehicles. They are specifically designed

and tested for VinFast vehicles. Always use genuine parts and accessories and have them installed by a trained professional at a VinFast Service Center.



Installing non-approved parts and accessories, or performing non-approved modifications, can affect the performance of the vehicle and the safety of its occupants.

Any damage caused by using or installing non-approved parts, or by performing non-approved modifications, is not covered by the warranty.

VinFast does not accept liability for any ramifications that occurs due to the use or installation of non-approved accessories or make non-approved modifications.

Spare Wheel (if equipped)

Spare Tire Information:

Tire Size	T145/80 R19			
Manufacturer Company	Goodyear			
Wheel Steel Type	14_80_R19_4BX19_ET43			

The spare wheel is a different size to the standard road tires originally assembled on the vehicle.

It is located in the rear cargo compartment.

In the event of a flat tire, the spare wheel can be fitted temporarily until the original tire is replaced or repaired. For more information on wheels and tires.

See > Wheels and Tires.

For more information on how to remove a wheel and replace with the spare.

See > Vehicle Recovery > Vehicle Jack & Tire Repair.

Inflator Kit (if equipped)

The inflator kit allows the owner to plug and re-inflate a punctured tire. The inflator kit has an inbuilt pressure gauge for monitoring tire pressure. It is powered 12v supply from auxiliary socket inside the vehicle. See > Vehicle Recovery > Vehicle Ve

Check the tire pressure placard on the door sill on the driver's side before inflating tires. See > Wheels and Tires > Tire Pressure.

The Inflator Kit is stored in the rear cargo compartment.



Accessories

Genuine VinFast accessories are specifically designed, engineered, and tested for this vehicle. To buy genuine VinFast accessories, visit the nearest VinFast Service Center or alternatively visit the VinFast Auto website

VinFast does not endorse any unauthorized third-party products or accessories to be used on the vehicle. VinFast recommends only using genuine accessories.



NOTE

VinFast will not be responsible for performance, repair, replacement, damage, or any adverse effect on the vehicle caused by a third-party accessory.

VinFast will only service genuine accessories fitted to the vehicle.

Accessories may vary depending on market region, car variant and availability of the product.



Any parts, accessories, or modifications not approved by VinFast can adversely affect the performance and safety of the vehicle.

Any damage to the vehicle caused by the installation or modification of non-approved parts is not covered by the warranty.

VinFast takes no responsibility for deaths, personal injuries, or damage that may result from the use of non-approved accessories or modifications.

Trailer Hitch

if available, The vehicle can be fitted with a Trailer Hitch accessory to allow towing of a trailer, carrying bicycles or other items. The trailer hitch can be installed from an authorized VinFast Service Center.

Roof rack

If available, the vehicle is equipped with roof rails.

When traveling with loads on the vehicle's roof, make sure to travel with specialized accessories for carrying loads.



WARNING

Ensure that carrying loads on the roof of the vehicle complies with local regulations.

Make sure to comply with load limits, see > Weights.

Floor Mats

If available, Floor Mats may be provided for the front and rear foot well areas. The floor mats provide a protective layer to the vehicle's carpet.



CAUTION

Floor mats are specifically designed to fit the foot well of the vehicle, firmly secured to the carpet. Using non-approved floor mats can lead to problems such as hindering pedal movement or range.

Always make sure that the floor mats are securely anchored.




WARNING

Never use additional mats, carpets or floor covers in driver's foot well, as this can reduce the pedal movement or range and can impair pedal operation.

Lower Sill Trim

If avialable, the lower sill trim is cosmetic only and is not designed to support load of any type.

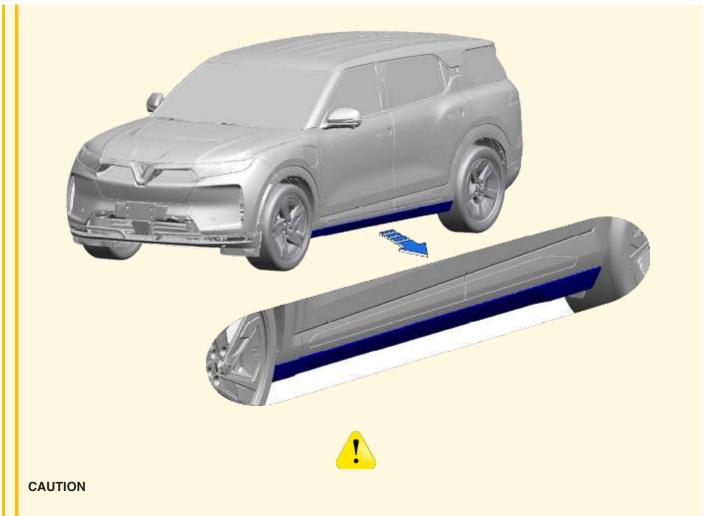

Do not step on the Lower sill Trim. May cause injury and/or equipment damage.

10. Technical Specifications

10.1. Fluids, Lubricants and Parts

Fluids, Lubricants and Parts Overview

Always supplement the fluids, lubricants and parts according to the type specified in this manual.

- The Cabin Air Filter used in the climate control system of the vehicle is a common model.
- The Refrigerant used in the AC system is R134a.
- The AC Compressor oil is type SANDEN SP-A2 PAG OIL.

- The Brake Fluid type is DOT 4.
- The Battery and Motor Coolant is Anti-Freeze Pre-Mixed Coolant AF2100 (ASTM D3306) 50% glycol & 50% Water Mixture.
- Transmission Fluid is CASTROL BOT352_B1 E-Car Axle Fluid.
- The low volt battery used in this vehicle is a 12V leadacid battery.



NOTE

For the recommended fluid, lubricant and part inspection and replacement frequency refer to the Maintenance Schedule. See > <u>Maintenance Schedule > Maintenance Schedule Overview</u>.



High Voltage and Air Conditioning servicing must be completed by authorized technicians.

It is recommended that the vehicle is serviced by a VinFast Service Center or authorized Service Center using genuine VinFast spare parts.

Use only VinFast-approved DOT 4 brake fluid from a clean sealed container. Do not use fluid from an open container that may be contaminated which could result in damage to components, or braking loss causing serious injury in the event of an accident.

DOT 4 Brake Fluid is Toxic. Avoid contact with eyes and skin. Refer to safety instruction on fluid container for safe handling and recommendations if contact is made.

Coolant is toxic and can be fatal if swallowed. Prevent coolant from making contact with skin and eyes. If contact occurs, rinse immediately with plenty of water and seek medical attention if required.

Washer fluid can cause irritation to the eyes and skin. If contact occurs rinse immediately with water.



CAUTION

Using incorrect fluids, lubricants, parts may cause damage to the vehicle.

Brake fluid can damage electrical components, cables, wiring, headlamps, plastic components, and painted surfaces if it comes in contact with these vehicle parts. Use rags and suitable containers to prevent fluid coming into contact with any vehicle parts. If brake fluid comes into contact with painted surfaces flush the area immediately with water.

10.2. Vehicle Identification

Vehicle Identification Number

The Vehicle Identification Number (VIN) is the legal identification mark of a vehicle.

It is the main identification number provided by VinFast, which is used to register the ownership of the vehicle.

The Vehicle Identification Number (VIN) is located at the following locations:



• On the cross-member under the passenger seat. To view lift the carpet flap






• On the nameplate on the left-hand side B-Pillar





• On the lower left side of the windscreen frame



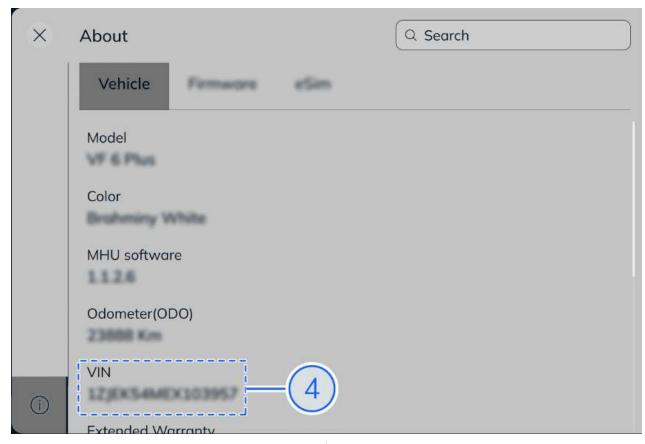

• On the Infotainment screen



. See > Settings > About.

Compliance Label

(B-Pillar).

The manufacturer's certification label (Compliance Label) is located on the left central pillar





The following information is provided on the label:

- Brand
- Vehicle model
- · Year of manufacture

- · Name of manufacturer
- · Country of manufacture
- Vehicle identification number (VIN)
- Maximum allowable total mass
- Number of passengers



WARNING

Never overload the vehicle. Vehicle overloading can cause the vehicle to lose control which increases the risk of an accident.

Overloading and high speeds can cause tires to overheat, resulting in a burst tire and loss of control.

Overloading can also impair stopping power, damage tires, and shorten the life of the vehicle.

Excessive loading can cause the tires to flex more which will heat up the tire too much. This can cause serious accidents. For more info on weights See > Vehicle Information > Dimensions and Weights.

Vehicle License Plate

The front and rear license plates which are issued by the local authorities need to remain securely fixed to the vehicle, clearly visible from a distance and not obscured by any object at all times.

Under no circumstances should a license plate frame be attached to the perimeter of the plate. Doing so may obstruct the camera, radar or parking sensors affecting their functionality.

10.3. Vehicle Information

Dimensions and Weights

The following tables contain key information and specifications relating to the vehicle. All data was accurate at


the time of publication. Any changes made post release of this version will be updated on the online version of the owner's manual.



NOTE

The vehicle specific data may deviate from these published figures depending on selected options and accessory fitment.

Exterior Dimensions

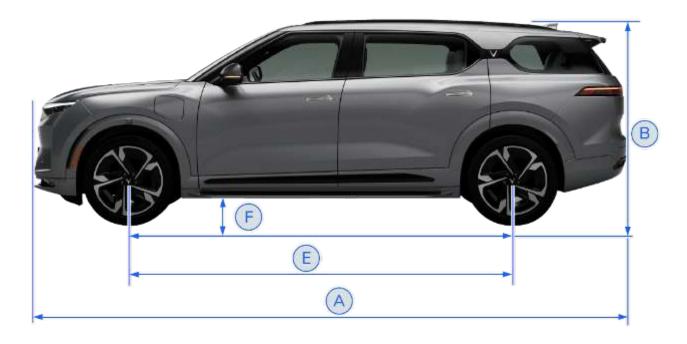



Item	Description	Measurement (mm)
A	Vehicle Length	5119
B	Vehicle Height	1696
C	Vehicle Width without mirrors	VF 9 ECO 2004 VF 9 PLUS 2070 (SDI battery) 2065 (CAT: battery)
D	Vehicle Width with mirrors	2254
E	Wheelbase	3148
F	Ground Clearance - No load	VF 9 ECO 194 (SDI battery) 175 (CATL battery) VF 9 PLUS 194 (SDI battery) 175 (CATL battery)

Weights

Description	Variant	Weight (kg)
	VF 9 ECO/BASE	2911 (CATL battery) 2830 (SDI battery)
Curb Weight (AWD)	VF 9 PLUS	2885 (SDI battery, 7 seats, steel roof) 2892 (SDI battery, 6 seats, steel roof) 2866 (SDI battery, 7 seats, glass roof) 2866 (SDI battery, 6 seats, glass roof) 2968 (CATL battery, 7 seats, steel roof) 2932 (CATL battery, 6 seats, steel roof) 2928 (CATL battery, 6 seats, glass roof)
Payload		550 (7seats) 475 (6 seats)
Roof load		75

Calculating Load Limits:

- Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on the vehicle's placard.
- 2. Determine the combined weight of the driver and passengers that will be riding in the vehicle.
- 3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- 4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs (635 kg) and there will be five 150 lbs (68 kg) passengers in the vehicle, the

- amount of available cargo and luggage load capacity is 650 lbs (295 kg) (1400 750 (5 \times 150) = 650 lbs)/ (635 340(68 \times 5) = 295 kg).
- Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- 6. If the vehicle will be towing a trailer, load from the trailer will be transferred to the vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of the vehicle.

Driver Plus One Passenger

Description	Variant	Total Capacity (kg)	Total Capacity (lbs)	
	VF 9 ECO	550	1212	
Vehicle Capacity Weight	VF 9 PLUS	550 (7 seats) 475 (6 seats)	1212 (7 seats) 1047 (6 seats)	
Occupant Weight (2 x (68 kg) or (150 lbs))		136	300	
Available Carge Weight	VF 9 ECO	414	912	
Available Cargo Weight	VF 9 PLUS	339	747	

Electric Motor

Subsystems

Description	Details
Type/Model	3-Phase Permanent Magnet Synchronous Motor
Cooling	Liquid Cooling
Operating Voltage (DC)	210-480 V
Max. Power	300 kW

Battery - High Voltage - CATL

Description	Details
Туре	Lithium Ion (Li-ion)
Usable capacity	123 kWh
Nominal voltage	388 V

Battery - High Voltage - SDI

Description	Details
Туре	Lithium Ion (Li-ion)
Usable capacity	92 kWh
Nominal voltage	400 V

Battery - 12V

Description	Details
Rating	45 Ah
Voltage	12 V

Brake System

Description	Details
General	Brake system 2-line hydraulic drive, electric booster
Front Brake	Ventilated disc brake
Rear Brake	Ventilated disc brake
Parking Brake	Electronic

Steering System

Description	Details
Туре	Electric Power Steering (EPS)
Turning Angle (Inner)	37.14 Deg
Turning Angle (Outer)	24.868 Deg

Suspension System

Description	Details
Front Suspension system	Independent, Double lower arm
Rear Suspension system	Multi-link, Air spring

Air Conditioning System

Description	Details
Refrigerant Type	R134a

Wheels and Tires

Wheel Specification (Factory Fitted)

Three different wheel sizes are available for the VF 9 depending on the variant :

Wheel Diameter	Location	Width	Offset
20"	Front / Rear	228.6 mm (9 in)	55mm (2.16 in)
21"	Front / Rear	241.3 mm (9.5 in)	55mm (2.16 in)
22" (if available)	Front / Rear	254 mm (10 in)	55mm (2.16 in)

Tires Specification

Description	Details
Size	VF 9 ECO 275/45 R20 VF 9 PLUS 275/40 R21 285/35 R22 (Option)
Max Load	VF 9 ECO Front - 1060 kg (2337 lbs) Rear - 1060 kg (2337 lbs) VF 9 PLUS Front - 975 kg (2149.5 lbs) Rear - 975 kg (2149.5 lbs)
Max Pressure	VF 9 ECO Front - 340 kPa (49.3 psi) Rear - 340 kPa (49.3 psi) VF 9 PLUS Front - 350 kPa (50.7 psi) Rear - 350 kPa (50.7 psi)
Speed level	Front - 240 km/h (149 mph) Rear - 240 km/h (149 mph)
Load index	VF 9 ECO Front - 110 Rear - 110 VF 9 PLUS Front - 107 Rear - 107

Spare Tire Specification (if equipped)

Description	Details
Size	T145/80 R19

The recommended tire pressure is listed on the label attached to the driver's door frame and is visible when the door is open. See > Wheels and Tires > Tire Pressure.

Tire Sidewall Labeling

Regulations stipulate that tire manufacturers are require to place standardized information on the sidewall of all tires. This information identifies and describes the fundamental characteristics of the tire and also provides a U.S. DOT Tire Identification Number (TIN) for safety standard certification and in case of a recall.



- 1. Tire Category: Tire marked P is for passenger vehicle.
- 2. Tire Width: The 3-digit number is the tire width (one sidewall edge to another)
- Aspect Ratio: The 2-digit number indicates the tire's sidewall height as a percentage of the tire's width. (Example: If the tire size starts out as P205/55, than tire's height is 55% of its width.)
- 4. Tire Construction: Tire marked R indicates Radial ply construction.
- 5. Wheel Diameter: The 2-digit number is the diameter of the wheel or rim in inches.
- 6. Load Index: The 2 or 3 digit number indicates the weight a tire can support.



Not all information may be available on all tires.

7. Speed Rating: The alphabet indicates the maximum speed at which a tire is designed to be driven for

extended periods of time under a standard condition of load and inflation pressure.

Letter/Symbol	Maximum Speed (mph)
М	130 km/h (81 mph)
N	140 km/h (87 mph)
Q	160 km/h (99 mph)
R	170 km/h (106 mph)
S	180 km/h (112 mph)
Т	190 km/h (118 mph)
U	200 km/h (124 mph)
н	210 km/h (130 mph)
V	240 km/h (149 mph)
W	270 km/h (168 mph)
Y	300 km/h (186 mph)



In some cases, tire manufacturers use the letters ZR for tires with a maximum speed capability over 240 km/h (149 mph). For tires with a maximum speed capability over 299 km/h (186 miles per hour), the letter ZR is always used.

8. Load Range: Indicated by SL (Standard Load) or XL (Extra Load), the load range indicates the tire's load-

carrying capabilities and its inflation limits.



NOTE

Replace tires only with those of the same load range.

- Tire Composition and Materials: Indicates the number of plies or the number of layers of rubber-coated fabric in the tire tread and sidewall. Additionally, tire manufacturers must indicate the materials in the tire and the sidewall, which can include steel, nylon, polyester, etc.
- Maximum Load: Indicates the maximum load (in lbs & kg) which can be carried by the tire.
- 11. Maximum Permissible Inflation Pressure: Indicates the tire manufacturers' maximum permissible air pressure for the tire. Do not exceed the maximum permissible inflation pressure.



Refer to the Tire and Loading Information label for recommended inflation pressure.

12. U.S. DOT Tire Identification Number (TIN): Begins with the letters DOT and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code designating where it was manufactured, the next two are the tire size code and the last four numbers represent the week and year the tire was manufactured.

Example: The number 1712 is used to represent the 17th week of 2012. The other numbers are marketing codes used at the manufacturer's discretion. This information can be used to contact consumers if a tire defect requires a recall.

13. Tread wear Grade: This number indicates the tire's wear rate. The higher the tread wear number, the longer it

- should take to wear down the tread. Example: A tire rated at 400, for example, lasts twice as long as a tire rated at 200.
- 14. Traction Grade: Indicates a tire's ability to stop on wet roads. The traction grades, from highest to lowest are AA, A, B, and C. A higher graded tire should allow the vehicle to stop at a shorter distance than a lower graded tire
- Temperature Grade: The temperature grades are A (the highest), B and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat. This grading is provided for a correctly inflated tire, which is being used within its speed and loading limits.



WARNING

Wear-out, uneven-wearing, damaged tires should be replaced as soon as possible. Worn tires can cause the vehicle to lose control, traction, and braking effectiveness.

Never exceed the maximum rated speed of the tires. This could cause a build up of heat resulting in a burst tire and loss of vehicle control.

Always keep an eye on the weather and road conditions while driving. Reduce the vehicle's speed when driving on icy or slippery roads.

Always follow VinFast-approved tire/rim combinations when replacements are required. Incorrect sizing of tires and wheels can result in unusual handling characteristics, poor vehicle control, or a negative impact on your vehicle's Anti-Lock Brake System (ABS) resulting in a serious accident.

It is important to repair or replace a damaged tire as soon as possible as the spare tire is not designed for long term use.

When replacing tires, it's recommended to replace the two front or two of the rear tires at once. Replacing only one tire on the vehicle could negatively affect its handling.

It is normal for tires to degrade over time, even when not being used. VinFast recommends replacing tires after six (6) years of normal service, regardless of the tread remaining.

11. Vehicle Assistance

11.1. Connected Services

Connected Services Overview

VinFast's connected services technology helps bring peace of mind to the owner during vehicle ownership by offering various services to support the running of the vehicle and providing assistance when in need or in an emergency. Connected services include:

Service Booking Tool

This process allows the owner of the vehicle to book an appointment at a VinFast Service Center to complete any of the following:

- · Scheduled maintenance
- Accessory fitment
- · Body repair
- Address any problems or alerts that have occurred

For more information See > <u>Service Booking Tool</u>.

Roadside Assistance

It is also possible to speak with roadside service professionals who can answer any questions and explain how to transport the vehicle correctly. Specialized roadside support is provided in the event of a vehicle breakdown or emergency situation. For more information See > Roadside Assistance.

Emergency Call (e-Call)

E-call is automatically triggered in the event of an accident or by physical request by the occupants. For more information See > Emergency Call.

Remote Diagnostics

Allows a VinFast Service Technician to connect to the vehicle remotely and access data to help with vehicle diagnosis. For more information See > Remote Diagnostics.

Remote Software Update

The owner can update the vehicle's software wirelessly with over-the-air system updates without the need to visit a VinFast Service Centre. For more information See > Remote Software Update.



NOTE


Connected car features are subject to acceptable cellular coverage, signal strength, battery power and cellular data available to fulfill the connected service request.

Service Booking

VinFast connected services provides a suitable process to book a service appointment from the comfort of your vehicle.

Service booking may be scheduled by calling Customer Support.

To Book a Service appointment from Customer Support:

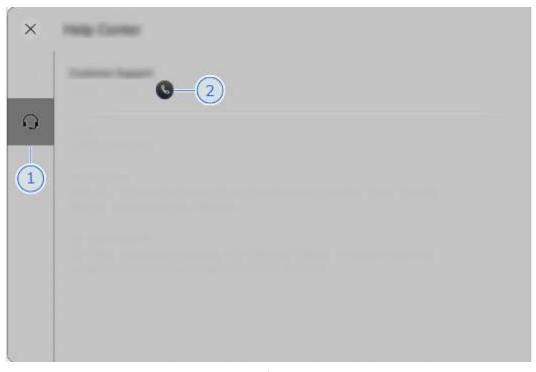

1. Tap App Library



on the touchscreen. 2. Tap on **Service**



> Help Center




3. Tap on Call icon



In the unlikely event of a vehicle breakdown or an accident, specialized support is available through the local Roadside Assistance service providers to help get you going again.

To call Roadside assistance from Vehicle Alerts page:

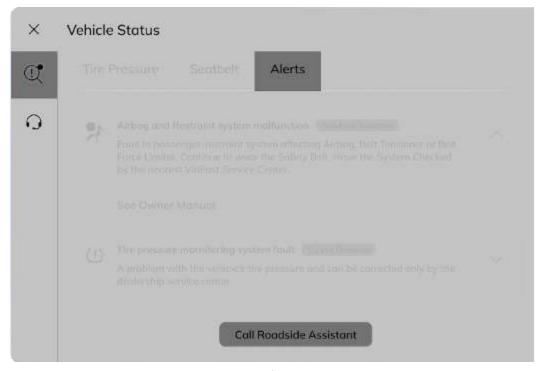

1. Tap App Library



on the touchscreen.

2. Tap on Service



> Vehicle Status > Alerts.

3. Tap on Call Roadside Assistant (if available).

To call Roadside assistance from Help Center:

1. Tap App Library



2. Tap on Service



> Help Center.

on the touchscreen.

3. Select support form from Customer Support or Third Party (if available) > Tap to call.



WARNING

In the event of a minor accident, exit the vehicle if safe to do so, and stand clear until Roadside Support arrives. The trained personnel will isolate the vehicle from any dangers associated with the high voltage components.

eCall

What is eCall?

Emergency Call (eCall) is a connected service feature that connects the vehicle to Call Center in the event of a vehicle collision or an emergency situation. When an eCall is triggered, critical information about the vehicle status and location are automatically provided to the Call Center. This assists in ensuring the appropriate emergency response can be provided to the vehicle and it's occupants.

How does eCall work?

eCall uses the vehicle's eSim mobile network to call the call center, automatically activated in case of a severe collision or when manually triggered by the user. Once the call is connected, the call center will use the information automatically transferred from the vehicle along with additional information provided by the caller to determine the emergency situation and contact the appropriate public rescue services.

eCall requirements

The system is only capable of operating in areas with a compatible cell phone network and emergency services infrastructure.

To activate eCall:

- In serious emergency cases such as a severe accident triggering airbag deployment or activation of the front seatbelt pretensioners, etc., the eCall system can activate automatically.
- Press and hold the emergency call (SOS) button in the car to activate manually.

To manually activate eCall:

Emergency Call button is present on the front dome lamp.



· Press and hold the SOS button




about 3 seconds until you hear the announcement 'Emergency call activated' and the entertainment screen show an popup of the emergency call.

• Tap on Cancel



to cancel the call or press the SOS button again during the countdown

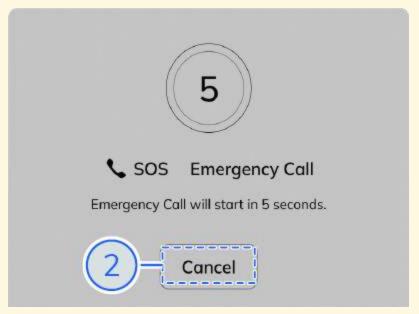

- After a 5-second countdown, eCall will be activated, an alert sound will be played, and the screen will switch to an emergency call. Once activated, the emergency call can only be canceled by the call center.
- If accidental activation of the eCall occurs, immediately cancel the request or advise the PSAP that it is an accidental call and no assistance is required.

If a standard phone call is active at the time the eCall is triggered, the active call will be terminated to allow the eCall to be placed. During the period when eCall is activated, the vehicle will not receive any incoming calls.



NOTE

eCall operates based on an eSim integrated with the vehicle, so the feature will not work if the eSim does not have a voice package or is out of coverage area. Customers need to purchase a voice package from a network provider to use eCall.



WARNING

Do not wait for eCall automatic assist when you can make it yourself. Press the Emergency Call button immediately to avoid delays that could increase the risk of serious injury or death after a crash.

Be careful when making a manual eCall while driving.


Remote Diagnostics

In order to assist in vehicle's diagnosis, a VinFast Service technician may contact you to establish a Remote Diagnostic connection with your vehicle. The VinFast Service Technician will guide you through the process of connecting to your vehicle. User permission may need to be granted in order to allow remote diagnosis of the vehicle.

Preconditions to start Remote Diagnostics:

- Vehicle ON (Driver present)
- HV Battery charge level to be greater than 30%
- 12V battery voltage > 11.5V
- · Have an Internet connection
- FOTA session must not be active

To Start Remote Diagnostics:

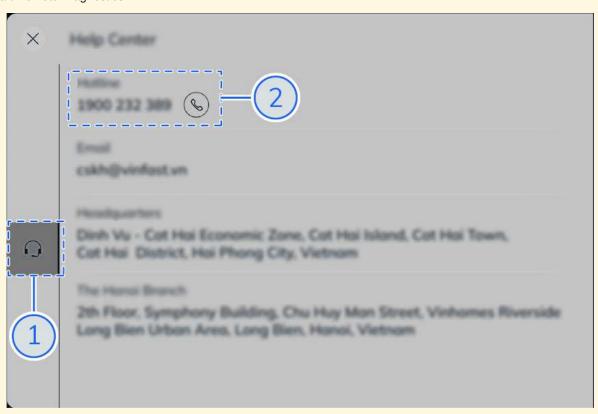

1. Tap App Library



on the touchscreen.

2. Tap Service



> Help Center



3. Call Hot line



and ask technician to start Remote Diagnostics.

- Remote Diagnostics will be activated and a message will be displayed on the touchscreen.
- · Another message will pop up on the touchscreen after Remote Diagnostics is completed successfully.

To Stop Remote Diagnostics:

1. Tap Remote Diagnostics



icon, on the status bar

- 2. Tap **Stop**.
- Remote diagnostics will stop and a pop-up message will be displayed on the Infotainment screen.



NOTE

Please ensure the vehicle remains powered ON and stationary at all times when a Remote Diagnostic session is active.

Remote Software Update

VinFast recommends updating the vehicle's software whenever new updates are available. This will ensure the vehicle contains the latest features, functionality, and quality improvements. Vehicle software will be updated via Firmware Over the Air (FOTA).

Firmware Over the Air (FOTA) is a mechanism for the manufacturer to deliver software, firmware, and configuration settings to vehicles and transmits software wirelessly between the VinFast Cloud and the vehicle securely.

To check for new updates:

1. Tap App Library



on the Infotainment screen.

2. Tap Settings



- > About > Firmware.
- 3. Available update will be shown on the screen.



Notification is displayed on Infotainment screen whenever a new update is available. A notification will be added to the Notifications Page.

To download an update automatically:

- Automatic Download via Wi-Fi: The vehicle will automatically download updates over Wi-Fi if it is connected to a Wi-Fi network. There will be no prompt or confirmation presented to the user during that time. Enable or disable through respective toggle button.
- 2. **Automatic Download via Cellular Data:** The car will switch to cellular data to download updates if Wi-Fi is not available. There will be no prompt or confirmation presented to the user during that time. Enable or disable through respective toggle button.

To download an update manually:

Download an update manually by any of the following methods:

- · Via notification card
- Via About settings

To download an update manually by about settings:

1. In the Firmware tab, tap Download.

OR

- 2. Tap What's New.
- 2. Tap Download.
- The system will start downloading and will show the size of update and time remaining for completion of the update.

To Pause or Stop downloading:

· After the download has started, tap Pause or Stop.



NOTE

You can see the current download status on the status bar.

To install/schedule an update:

- 1. Once the downloading of an update is completed, tap Install.
- 2. Read the terms and conditions carefully.
- 3. Agree the terms and conditions by tapping on checkbox.
- 4. Tap Agree and Start Install.

OR

- 1. Tap **Schedule** to schedule an install.
- 2. Set the time and tap Schedule.

After successful installation, a "New firmware installed" notification is displayed on the Infotainment screen.

Installation failure

In the event the FOTA fails to install due to an error, follow the on-screen instructions to rectify the problem.

11.2. Vehicle Recovery

Vehicle jack & Tire repair (If equipped)

In the unfortunate circumstances of getting a flat or punctured tire, it can be temporarily repaired or replaced by using the tire inflation kit (if equipped), or by fitting the spare tire (if equipped). Otherwise, please call Roadside assistance.



NOTE

Diving with damaged tires can affect the handling and stopping performance of the vehicle.

Flat Tire Repair with Inflation Kit (if equipped)

The vehicle may be fitted with tire repair fluid and a compressor kit. The tire inflation kit will allow you to stay

mobile after experiencing a tire puncture for a short period of time. Please follow instructions below:



WARNING

Do not use the inflation kit to repair any damage to the tires side walls.

For safe operation, please read the instruction label located on the inflater bottle.

The damaged or punctured tire should be repaired or replaced as soon as possible.



NOTE

The inflation kit can only be used on one flat tire.

The inflation kit fluid is effective for repairing punctures with a diameter of less than 6 mm. Within this range, the puncture objects can be removed from the tire in order to repair it. If the puncture holes are large, do not remove the puncture objects after filling the tire with the repair fluid.



- 1. First remove tire valve cap.
- 2. If necessary, remove the puncture object and perform repair operation. Move the punctured area to the 6 o'clock position before proceeding.
- 3. Tighten the connecting valve of the tire repair fluid bottle to the tire valve. When using the product at temperature of (-40°C to 0°C), warm the product to a temperature above 0°C, to improve the filling efficiency.
- 4. Remove the cap from the end of the sealant bottle.
- 5. Unravel the air hose from the back of the compressor.
- 6. Screw the compressor hose onto sealant bottle.
- 7. Unravel the compressor wiring and connect to the auxiliary socket inside the vehicle in the rear luggage compartment.
- 8. Keep the vehicle ON.
- 9. Switch ON the compressor by pressing the button present on the compressor.
- 10. It should take no longer that 10min to reach an acceptable inflation pressure.

- 11. Once the tire pressure reaches an acceptable level as stated on the tire pressure placard (See > Wheels and Tires > Tire Pressure), press the yellow button on the compressor to test the tire pressure. The tire should hold minimum pressure listed on tire pressure placard. If not the contact recovery services.
- 12. Reinstall the valve cap on the tire.
- 13. Return the tire inflation kit back to the vehicle rear cargo compartment.
- 14. After fully inflating the tire, drive immediately for at least 10 km (6.2 miles) at speeds less than 80 km/h (50 mph), so that the product can become evenly distributed. If the tire remains fully inflated after this distance, then normal driving speed can be resumed.
- 15. After driving for 10 km (6.2 miles) stop and re-examine the tire, if it appears damaged then roadside assistance must be contacted. If it is OK then reinflate the tire to the proper pressure listed on the placard.
- 16. Go to a professional tire repair shop as soon as possible. However, do not exceed a distance of 500 km (310 miles) without having the tire repaired professionally.
- 17. If at any time after using this product the tire loses pressure, stop driving and call roadside assistance.



Accelerate, brake and corner gently.

It is recommended to visit a VinFast Service Center as soon as possible.



WARNING

If the tire repair fluid is splashed on the tire or rim during use, rinse with water or wipe with a cloth. If it gets in your eyes, rinse immediately with water and consult a doctor.

Do not drive with a punctured tire that has not been repaired, even if the puncture has not caused the tire to deflate. A punctured tire can deflate suddenly at any time leading to mishandling of the vehicle or accident to occur.

Store the inflation kit at temperature between -40°C to 85°C. Keep it away from any open flames.

Spare Tire Replacement (if equipped)

To Remove Spare Tire:



1. Unscrew the wheel retainer





2. Remove the spare wheel



from the rear cargo compartment.



A spare tire is for TEMPORARY USE ONLY. Drive carefully when a spare tire is fitted on the vehicle. Do not exceed speeds more than 50 km/h (or 31 mph).

Put the flat tire somewhere handy, so that the flat tire can be replaced/ repaired.



CAUTION

The spare tire provided with the vehicle is for temporary use only. Do not use the spare tire for continuous driving.

Do not drive the vehicle above the indicated maximum speed shown on the spare wheel.




WARNING

When driving with the spare tire, drive slowly, avoid sharp cornering, avoid sudden acceleration, abrupt maneuvering, and sudden braking to ensure safety of the driver and the passengers.

The spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

To fit the Spare Tire:

- 1. Ensure the vehicle is in a safe location that does not affect normal traffic and work can be undertaken safely. Place the vehicle in Park(P), turn off the vehicle, and engage the parking brake. If needed setup the warning triangles and turn on the hazard lights.
- 2. Remove the lifting jack, jack-handle crank and take out the spare tire, which are all located in the rear luggage compartment in the vehicle.

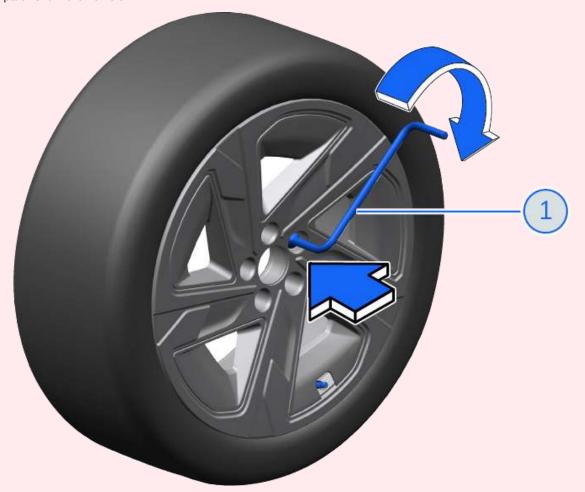


3. Loosen the wheel nuts: Use the wheel nut wrench



to turn the wheel nuts to the left (anticlockwise direction) until they can be turned by hand. Do not remove the wheels nuts entirely at this stage.



- 4. Search the underside of the vehicle to find the jacking points closest to the wheel that needs to be replaced.
- 5. Place the jack under the lifting position of the body.
- 6. Match the socket on the jack-handle crank with the hexagonal nut on the jack.

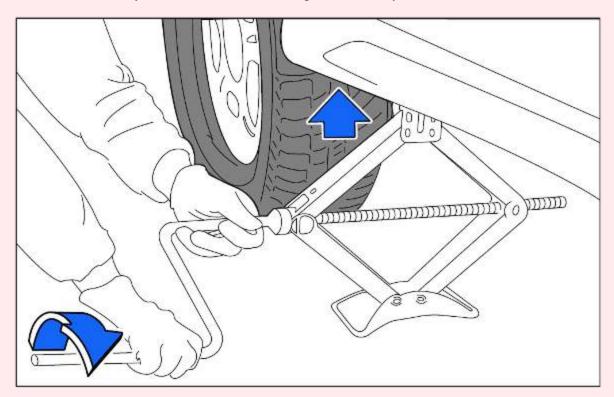


- 7. Raise the car body with a jack. Turn the combination tool to the right (clockwise direction) to raise the vehicle until the tire is clear of the road. Note: the spare tire diameter may be larger than the flat tire currently fitted.
- 8. Remove the wheel nuts: Remove all wheel nuts entirely then remove the wheel and tire assembly.







- 9. Install the spare tire. Before installing the spare tire, wipe off the dirt on the wheel mounting surface and the brake hub with a clean cloth.
 - Make sure the holes on spare tire line up with the holes on the hub.
- 10. Temporarily fix the wheel nuts. Fit all five wheel nuts and torque by hand until snug. This will prevent the tire from falling. Remove dirt and foreign matter from the screw parts of the wheel mounting bolts and nuts.

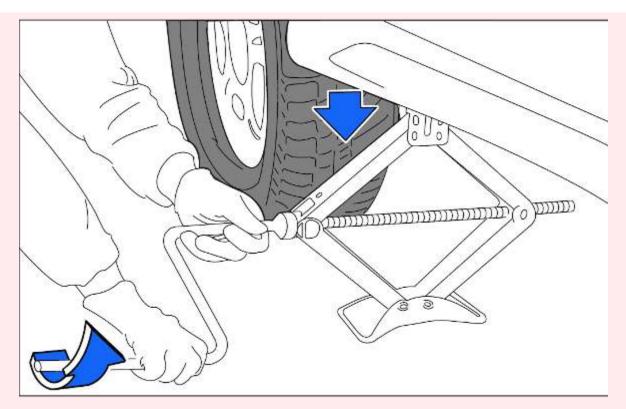

11. Rotate the jack handle in a anticlockwise direction to lower the vehicle to the ground.

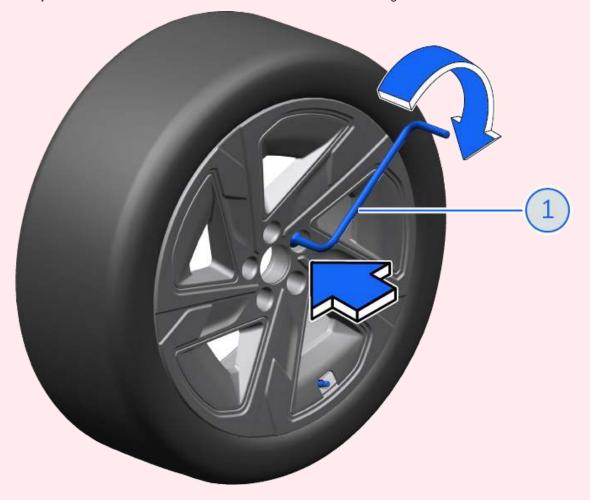

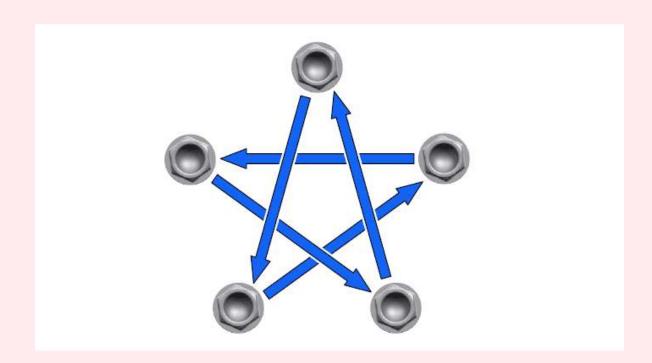

12. Tighten the wheel nuts. Use the wheel nut wrench to turn the wheel nuts to the right (clockwise direction)



according to the order indicated in the figure shown above. Double check each wheel nut. Tightening torque: 140±20N·m.

- 13. Check tire pressure. If tire pressure is too high or too low, drive slowly to the nearest service station and adjust them to the recommended pressures. Be sure to replace the valve cap after checking tire pressures to avoid any air leaks from occurring.
- 14. Return the jack and tools to the vehicle rear compartment.



WARNING

Do not exceed the vehicles maximum load carrying capacity when using a spare tire.

Do not use a compact spare tire for long periods. Replace or repair the original tire as soon as possible.

Before jacking up the vehicle ensure that all passengers have safely exited the vehicle.

Make sure the jack is stable. Always jack up the car where the surface is firm and leveled.

Position the jack only at the designated jacking points on the vehicle. Failure to do so may cause the jack to slip and cause serious injuries.

No work should be done under the vehicle when it is raised.

Only use factory provided jack to lift the vehicle.

Never put any object or any part of the body under the vehicle when using the jack.

Do not touch the disc brakes or the areas around the brakes as they can be extremely hot.

Jump-starting

If the 12V battery is depleted, you can jump start the battery using another vehicle or using a low voltage power supply such as a portable jump starter. If jump starting using another vehicle, follow that vehicle manufacturer's instructions.



NOTE

Always ensure that only 12V source is used to jump start the battery.



WARNING

Always read and follow instructions when handling a battery to avoid serious injury or death.

Wear correct personal protective equipment (PPE) when handling the battery. Failure in following the warning can cause serious injury or death.

Keep all forms of smoke, flames, and sparks away from the battery at all times. Failure in following the warning can cause serious injury or death.

Do not allow the jumper cables to make contact with each other or any metal surface other than the correct terminals.

Ensure your vehicle is not connected to a high voltage charger when performing a jump-start. Failure to do so can cause serious injury or death.

Batteries contain sulfuric acid, avoid contact with eyes, skin, or clothing. Failure to do so may result in serious injury or death.

Hydrogen is present in battery cells, which can ignite. Keep away from flames.

The vehicle should not be used to jump start another vehicle as this could cause significant damage to your vehicle.

Do not try to jump start your vehicle if the outside temperatures are extremely low.

Connecting the jumper cables incorrectly can cause damage to the vehicle and potentially lead to a fire or explosion.

If your vehicle has no 12-volt power, proceed with the following:


- 1. Ensure the vehicle is Off and in Park (P).
- 2. Open the hood, See > Front and Rear Compartments > Front Hood.



3. Open battery cover



4. Locate the 12V battery.

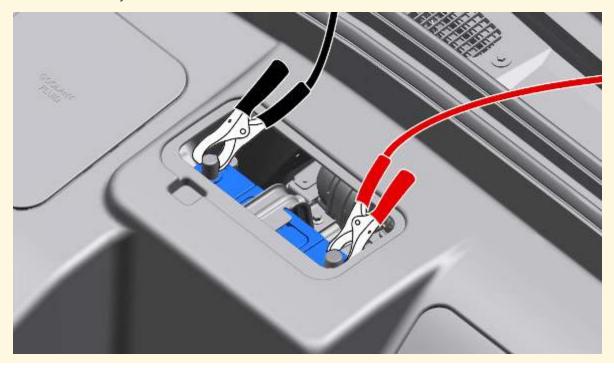

- 5. Connect the red jumper cable to the positive (+) battery terminal of your vehicle.
- 6. Connect the other end of the red jumper cable to the positive (+) battery terminal of the assisting vehicle.
- 7. Connect the black jumper cable to the negative (-) battery terminal of the assisting vehicle.
- 8. Connect the other end of black jumper cable to the negative (-) battery terminal to your vehicle.
- 9. Start the assisting vehicle first, and then proceed to power on your vehicle.



If your vehicle does not start, please contact roadside assistance or have the vehicle checked by authorized VinFast dealer.

For safe battery disposal please refer to your country's battery disposal and recycling laws.

Disconnecting jumper cables process:

- 1. Disconnect black jumper cable from the negative (-) terminal from your vehicle.
- 2. Disconnect the other end of the black negative (-) jumper cable from the assisting vehicle.
- 3. Disconnect the red jumper cable from the positive (+) terminal from assisting vehicle.
- 4. Disconnect the other end of the red jumper cable from the positive (+) terminal from your vehicle.

Towing (EV)

If the vehicle breaks down and towing is necessary, it is recommended to have it done by a professional towing service. When towing, all four wheels must not be in contact with the ground, as the spinning wheels enable the Regenerative Braking System to generate electricity, which cannot be managed correctly while the vehicle is turned off. This may lead to over-heating of the system components.



CAUTION

Never transport the vehicle using any method that is not prescribed by VinFast.

Improper use of the tow eye/hook may cause damage to the vehicle and it is not covered by the vehicle warranty.



WARNING

Do NOT use your vehicle to tow another vehicle.

If the vehicle has an electrical fault, it may pose a safety hazard. Seek professional assistance immediately and keep away from the vehicle.

Never transport the vehicle with the wheels in a position where they can spin. Doing so can lead to significant damage and overheating. In rare cases of extreme overheating may cause the surrounding components to ignite.

Preparing Vehicle to be Towed

The vehicle has a tow eye attachment point in the front and rear bumpers of the vehicle. A tow eye is provided with the vehicle, and it is stored in the tool box in the rear cargo compartment.

Before towing make sure to disengage the parking brake, put in neutral.



CAUTION

In order to transport the vehicle, self-loading dollies or tire skates should be used.



WARNING

The vehicle is equipped with high voltage components (See > <u>High Voltage Components</u>) that may be damaged in the event of a collision. It is important to assume these components are energized prior to transporting the vehicle.

Always follow high voltage safety precautions (wearing protective gear, etc.) until emergency response professionals have evaluated the vehicle and have confirmed that all high voltage systems are no longer operational. Failure to do so may result in serious injury.

EPB Disengaged




To disengage Electronic Parking Brake (EPB) depress the brake pedal and push the EPB switch.

Using the Tow Eye/Hook:

Open the liftgate and raise the cargo floor cover from the tab. The tow eye is located under the rear storage floor compartment.

How to fit Front Tow eye

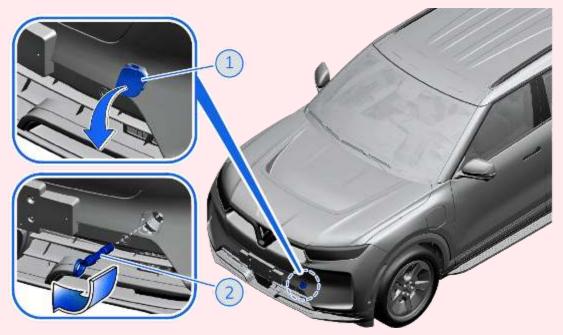

- 1. Locate the tow eye cover in the front bumper and push at the top to release.
- 2. Remove the hole cover



to access the attachment point.

3. Install the tow eye



to the attachment point by turning it clockwise into the hole until it is fully secured.

4. Remove the towing hook (rotate anti-clock wise) and install the cover after use.

How to fit Rear Tow eye



1. Remove the hole cover in the bumper



to access the attachment point. A tool may be required to Push the side of the cover in order to remove it.

2. Install the tow eye



to the attachment point by turning it clockwise into the hole until it is fully secured.

3. Remove the towing hook (rotate anticlockwise) and install the cover after use.

The rear tow eye/hook is designed to pull the vehicle on a horizontal and levelled surface for a very short distance and only when the wheels can spin freely.



CAUTION

Do not use the rear tow eye/hook to pull the vehicle onto a flatbed truck or when the vehicle is not on a horizontal and levelled surface. Doing so may cause damage to the vehicle and it is not covered by the vehicle warranty.




CAUTION

Before pulling the vehicle, make sure the tow eye/hook is securely tightened.

The tow eye/hook is not designed for off-road recovery. Do not use tow eye/hook to pull the vehicle out of mud, sand or other conditions from which the vehicle cannot be driven out under its own power.

Approved Towing Methods

VinFast recommends getting professional help for towing and following the correct towing procedure to prevent damage to the vehicle.

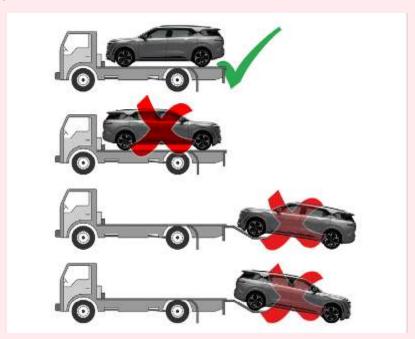

A flatbed truck or similar recovery vehicle is recommended when transporting the vehicle.

Follow the tow eye attachment instruction described above prior to winching the vehicle. Attach the winch cable to the tow eye/hook. Put the vehicle in Neutral (N), disengage the EPB.

Using the front tow eye/hook, pull the vehicle slowly onto the flatbed truck. The rear tow eye/hook is designed to pull the vehicle on a horizontal and levelled surface for a very short distance and only when the wheels can spin freely. If the wheels are locked, place wheel dollies to move the vehicle so you can attach the front tow eye/hook to pull the vehicle onto a flatbed truck.

The vehicle's wheels must be tied down using the eight-point tie down method, to ensure the vehicle is secured properly to the truck bed.



CAUTION

Securing the tie-down straps to the chassis, suspension or other parts of the vehicle's body may cause damage to the vehicle.

Metal parts of the tie down can damage paint and other finishing on the vehicle, avoid such contacts.

Do not place tie-down straps over the vehicle's body or through the wheels.

If the vehicle cannot be transported in a flatbed truck, then wheel lifts and dollies must be used to ensure that all four wheels are off of the ground. The vehicle can be towed facing forward so that the front wheels are lifted and the rear wheels are on dollies. This method may only be used for a maximum of 55 km (35 miles), and must not exceed the manufacturer speed rating of the dollies.

Follow the steps as recommended by the professional to load the vehicle on the dolly and wheel lift. Secure the vehicle's wheels using eight-point tie-down method.

11.3. Contact

VinFast Customer Care

VinFast Customer Care representatives are available Monday to Sunday 24 hours a day to assist with any of your vehicle needs. They can be contacted on:

• Vietnam: 1900 23 23 89

12. Additional Information

12.1. Reference

Data Storage and Processing

Your vehicle is fitted with electronic control units. Data is processed and generated by control units based on inputs from sensors. Your vehicle's control units are used to keep the vehicle safe, support you while driving (driver assistance systems), and to enable convenience and infotainment functions.

In certain circumstances, the data generated or processed by control units can be considered personal data under the law. Depending on the vehicle data available, this data may reveal information about your driving behavior, your location, or your route, as well as your usage patterns.

The vehicle only processes this data locally within its own hardware, and the data does not last beyond the operating time. Control units often contain data storage devices. On a temporary or permanent basis, these record vehicle information, component load levels, maintenance requirements, technical events, and faults.

Within your infotainment screen, you can also configure how VinFast Connected Services transmit your data and location.

To configure privacy settings:

Tap on your profile name on the status bar > My Profile
 > Privacy Settings

International personal data transfer

VinFast has offices in Vietnam, Europe, United States and some other countries and regions in the world. Depending on your use of VinFast Products, your personal information may be transferred and/or stored in or accessed from multiple countries, including but not limited to Vietnam, Europe, United States, Singapore and other locations where we or our service providers maintain servers with relevant contractual clauses to protect such transfers.

eCall Data Processing Arrangements

Personal data will be processed in accordance with applicable privacy laws in the jurisdiction or geographic area where the vehicle is being operated.

A public safety answering point (PSAP) designated by the respective public authorities of the country in which you are located will be the recipient of the data processed by the eCall in-vehicle system, for receiving and handling eCalls.

- An eCall in-vehicle system is designed to eliminate access to system memory prior to triggering an eCall.
- In its normal operation, the eCall in-vehicle system is designed to ensure that it is not traceable or subject to constant tracking.
- In the in-vehicle eCall system, no data is stored on the system. All of the data is directly sent to the PSAP.
- The log of activity data in the eCall in-vehicle system is kept for no longer than necessary for attaining the purpose of handling the emergency eCall and in any case not beyond 13 hours from the moment an emergency eCall was initiated.

rights for VinFast Connected Services or for activities where VinFast is the data controller

Your personal data is processed according to applicable data protection law.

In accordance with this, VinFast and third parties have a legal obligation to provide you with comprehensive information free of charge, including a description of services used for the vehicle, and providers of online services. You can request information about what personal data is stored and for what purpose, as well as where the data comes from. Your right to information also may include the transfer of data to other bodies.

VinFast may be required to provide data gathered by VinFast to government agencies according to legal requirements, such as police investigations of criminal offenses.

A government agency may also require access to data from vehicles themselves in individual cases under applicable law. For example, if there is an accident, the airbag control unit may help clarify the situation by providing information.

If you believe your rights have been infringed as a result of the processing of your personal data, you have a right to lodge a complaint with the competent data protection authority.

Data Privacy

We place a high priority on protecting your data privacy. Details about how we manage your data can be found in our Privacy Policy. For requests to manage your data, including requests to delete your data, please refer to our DSR form.